



REVAMP TO-2000 Diverse Twist and Shivel Handle with Curl Babrel User Guide

[Home](#) » [REVAMP](#) » REVAMP TO-2000 Diverse Twist and Shivel Handle with Curl Babrel User Guide 

Contents


- 1 REVAMP TO-2000 Diverse Twist and Shivel Handle with Curl Babrel
- 2 FEATURES
- 3 TWIST & SWIVEL HANDLE
- 4 BEFORE USING DIVERSE
- 5 GET STYLING
- 6 IMPORTANT SAFEGUARDS
- 7 CLEANING & MAINTENANCE
- 8 TWO YEAR GUARANTEE
- 9 WEEE
- 10 GET THE LOOK
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

REVAMP

REVAMP TO-2000 Diverse Twist and Shivel Handle with Curl Babrel



FEATURES

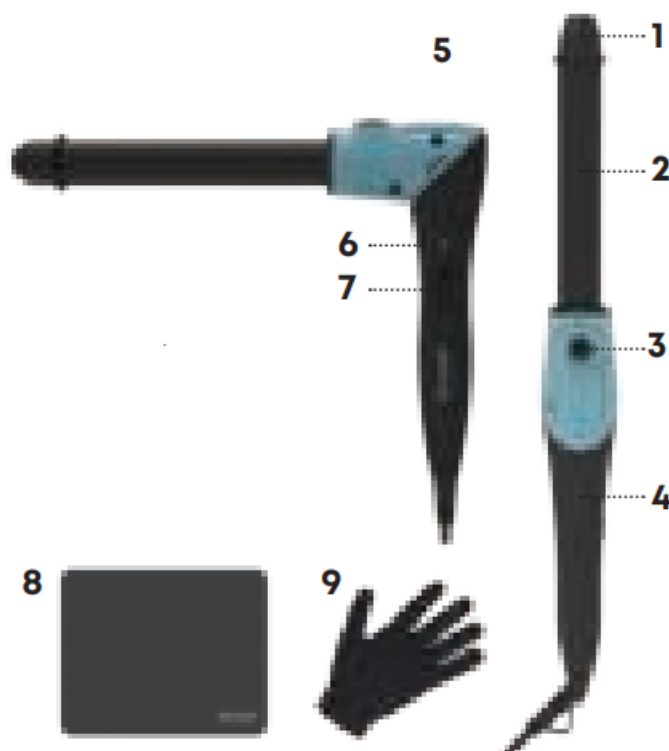

1. Cool tip (easy rotate)
2. 25mm ceramic curling barrel
3. Eject button
4. Diverse Handle
5. 90° "twist and swivel" rotating mechanism

6. Digital on/off display
7. Power button
8. Heat resistant silicone mat
9. Heat resistant glove

DIVERSE CERAMIC STYLING BARRELS

The Diverse Twist and Swivel Handle comes with a 25mm ceramic curl barrel. Other styling attachments can be purchased individually.

TWIST & SWIVEL HANDLE



The Diverse Twist and Swivel Handle can be used straight like a regular styling wand or rotated to 90° making it easier to curl. To rotate the handle, take hold of the blue part of the handle and twist the black part away from you in an anti-clockwise direction until it locks into place, making sure to keep your hands away from the heated barrel. The heated barrel should always be pointed away from you when twisting. We recommend you practice twisting the handle with the Diverse switched off and attachment cool, before using for the first time.

PROGLOSS™ SUPER SMOOTH OILS

Every product in the Revamp haircare range is infused with PROGLOSS™ SUPER SMOOTH OILS – enriched with Argan, Keratin and Coconut for ultimate smoothness and shine.

BEFORE USING DIVERSE

- Ensure the hair is dry and tangle-free.
- For extra protection, apply a heat protection spray of your choice.
- Clip up your hair ready for styling.

ADDING & CHANGING THE BARRELS



Always ensure the appliance is turned off. Always allow the appliance to cool off before fitting or changing barrels.

1. To remove the existing barrel, press the eject button and carefully drop it off onto the heat resistant mat. Align “FRONT” arrow on the barrel with the “eject” button of the handle. In case the hot barrel doesn’t automatically

- eject from the handle, cautiously grab the cool tip of the barrel wearing your heat resistant glove and firmly pull the barrel away from the handle before placing it on the heat resistant mat.
2. To fit the new barrel, push it firmly into the handle. It will automatically be locked. Make sure that the barrel is safely locked into the handle before turning the appliance on.
 3. Once fitted correctly, it should not be possible to remove the barrel without pressing the “eject” button.

GET STYLING

- Plug the product into a 220-240V mains power supply.
- Slide the power button to switch on.
- The appliance has 1 heat setting with a default temperature of 200°C. This temperature is not suitable for artificial hair such as hair extensions or wigs.
- Use the heat resistant glove to avoid any accidental burns.
- Section the hair prior to styling. Style the lower layers first.
- The handle can be used straight like a regular styling wand or rotated to 90° making it easier to curl.
- Hold the handle and wrap a section of hair around the heated barrel.
- Wait about 5-8 seconds, depending on your hair type, for curl to form.
- Unwind the hair and release the curl.
- Allow the hair to cool before styling.
- Repeat this around the head to create as many curls as desired.
- After use, switch off the appliance, unplug, place styler on the heat resistant mat and allow to cool before storing away.

Follow us on revamphair.com for the latest hair tips and advice.

Please note:

- This is a high performance product, avoid frequent use to prevent hair damage.
- Regular use of styling products may deteriorate the coating.
- Do not scratch the surface of the product as this will deteriorate the effectiveness of the coating.
- While heating, during use and cooling, place on a flat, smooth, heat-resistant surface or use your heat resistant silicone mat. Only hold unit by the handle or on the top cool tip of the attachment using your heat resistant glove.
- The product reaches a very high temperature during operation, please style with caution when using. Make sure to keep away from the scalp and skin to avoid burns.
- Always wear your heat resistant glove and place product on the heat resistant silicone mat while in-use.

IMPORTANT SAFEGUARDS

This appliance can be used by children aged from 16 years and above. Persons with reduced physical, sensory or mental capabilities should not use this product. Persons with lack of experience and knowledge can use the product if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 16 and supervised. Keep the appliance and cable out of reach of children under 16 years.

WARNING: for additional protection the installation of a residual current device (RCD) with a rated residual

operating current not exceeding 30mA is advisable. Ask an electrician for advice. Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.

After use, ALWAYS TURN OFF THE APPLIANCE AND UNPLUG FROM THE MAINS SUPPLY. Allow to cool in a safe place out of the reach of young children.

Do not leave the appliance where children could touch it and be injured. After use, the barrel may take up to one hour to cool to a safe temperature.

WARNING: This appliance must not be used near water or in a bathroom. It should not be used near bathtubs, basins or any other vessels containing water.

THE REVAMP DIVERSE HANDLE AND BARRELS ARE DESIGNED TO BE EXCLUSIVELY COMPATIBLE WITH EACH OTHER. DO NOT ATTEMPT TO USE THEM IN COMBINATION WITH ANY OTHER PRODUCTS.

- This appliance must not be used outdoors.
- Avoid allowing any part of the appliance to come into contact with the face, neck or scalp.
- Do not use the appliance while drowsy.
- Do not leave the appliance unattended while plugged in.
- Only set the appliance down on the silicone mat provided.
- Do not operate with wet hands.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use any extension cord with this appliance.
- Do not let the cord hang over the edge of a table or counter or let it come in contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- Do not place the appliance on soft furnishings or surfaces that may be damaged by heat or any combustible materials
- If the power cord becomes damaged, discontinue use immediately and return the appliance to your nearest authorised service dealer for repair or replacement in order to avoid a hazard.
- Do not use the appliance if it is damaged or malfunctions.
- Do not take the appliance apart. There are no serviceable parts inside.
- Always ensure the unit is locked either straight or at 90° when using.
- Let the appliance cool down before cleaning and storing away.
- Do not allow metal parts of the barrels to touch bare skin, the barrel reaches high temperatures and will cause burns.
- Care should be taken while styling the back of your head to avoid any burn on arms, neck or ears.
- This appliance should only be used for styling human hair. Do not use on synthetic hair or wigs.

CLEANING & MAINTENANCE

- Switch the appliance off, unplug from the mains and allow to cool fully before cleaning.
- Wipe over all surfaces using a soft damp cloth. Do not use harsh abrasives or cleaners.
- Do not immerse the appliance in water or other liquid.
- Ensure all parts are dried thoroughly with a soft towel before reusing.
- To prevent cord damage, do not wrap the cord around the appliance, always store the cord loosely next to the appliance.
- Store in a cool dry place.

TWO YEAR GUARANTEE

FKA Brands Ltd guarantees this product from defect in material and workmanship for a period of 2 years from the date of purchase, except as noted below. This FKA Brands Ltd product guarantee does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorised accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of FKA Brands Ltd. This guarantee is effective only if the product is purchased and operated in the UK / EU. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and / or authorised, or repair of products damaged by these modifications is not covered under this guarantee. FKA Brands Ltd shall not be responsible for any type of incidental, consequential or special damages.

To obtain guarantee service on your product, return the product post-paid to your local service centre along with your dated sales receipt (as proof of purchase). Upon receipt, FKA Brands Ltd will repair or replace, as appropriate, your product and return it to you, post-paid. Guarantee is solely through service centre. Service of this product by anyone other than the service centre voids the guarantee. This guarantee does not affect your statutory rights.

For your local service centre, go to www.revamphair.com/servicecentres

WEEE

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

GET THE LOOK

The Diverse range includes attachments for a multitude of styles...

- **DIVERSE BEACH WAVE WAND**

Natural looking bouncy beach curls

- **DIVERSE EXTRA LONG CORKSCREW BARREL**

Medium to super-tight corkscrew curls

- **DIVERSE REVERSE WAVES & CURL BARREL**

Loose waves and well defined smooth curls

- **DIVERSE EXTRA LONG TONG**

Hollywood glamour waves and movement

- **DIVERSE BIG TONG**

Loose curls and waves for medium to long hair

- **DIVERSE CONICAL WAND WITH DETACHABLE SPIRAL**

Perfectly defined luxurious drop curls

- **DIVERSE LARGE CONICAL CURL BARREL**

Beachy natural looking curls and deep waves


SALON BRITISH BRANDS

Revamp is a trademark of Salon British Brands. Distributed by FKA Brands Limited. Somerhill Business Park, Tonbridge, Kent TN11 0GP, UK / Tel: 01473 874016

Via Giosuè Carducci 125, 20099 Sesto S. Giovanni, Milan, Italy / Tel: 0039 0236006064

csupport@revamphair.com

Documents / Resources

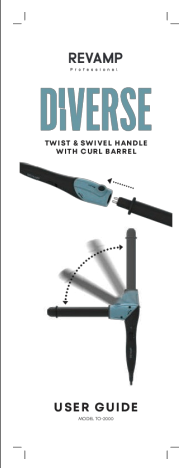	<p>REVAMP TO-2000 Diverse Twist and Shivel Handle with Curl Babrel [pdf] User Guide TO-2000, Diverse Twist and Shivel Handle with Curl Babrel</p>
---	---

References

- [R Revamp Professional Hair Care Products](#)
- [R Service Centres](#)
- [R Revamp Professional Hair Care Products](#)
- [R Service Centres](#)