



REVAMP WD-1500 Progloss Multiform Curl and Waves 3-In-1 Hair Styler User Guide

[Home](#) » [REVAMP](#) » REVAMP WD-1500 Progloss Multiform Curl and Waves 3-In-1 Hair Styler User Guide 

Contents


- [1 REVAMP WD-1500 Progloss Multiform Curl and Waves 3-In-1 Hair Styler](#)
- [2 FEATURES](#)
- [3 3-IN-1 BIG HOT CERAMIC BARRELS](#)
- [4 PROGLOSS™ SUPER SMOOTH OILS](#)
- [5 INSTRUCTIONS FOR USE](#)
- [6 AUTO SHUT-OFF](#)
- [7 CLEANING & MAINTENANCE](#)
- [8 IMPORTANT SAFEGUARDS](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



REVAMP WD-1500 Progloss Multiform Curl and Waves 3-In-1 Hair Styler



FEATURES

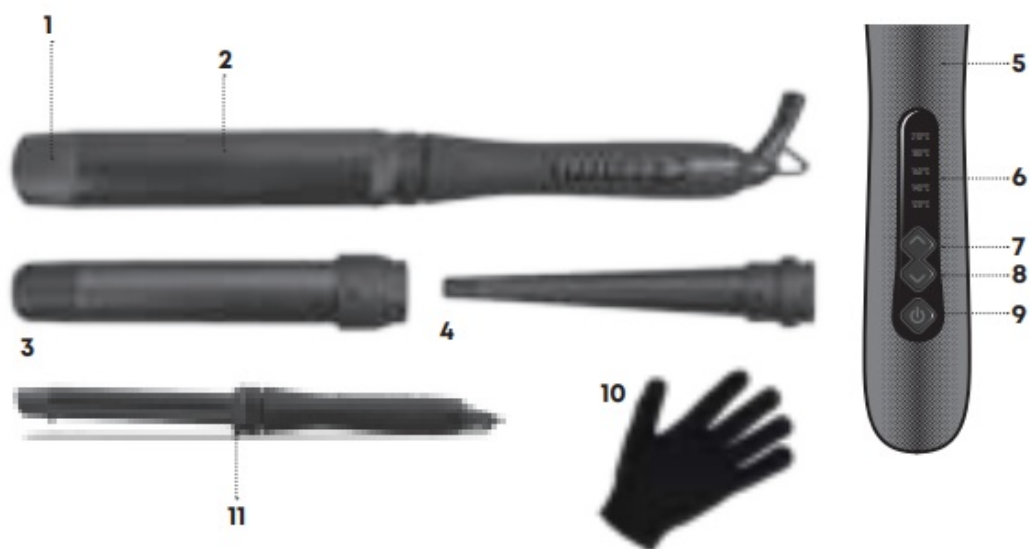

1. Cool tip
2. 38mm ceramic oval wand
3. 32mm ceramic large tong
4. 25-13mm ceramic curl wand
5. Multifunction handle
6. Digital temperature display
7. Temperature control + button

8. Temperature control – button
9. Power button
10. Heat resistant glove
11. Stand

3-IN-1 BIG HOT CERAMIC BARRELS

The Multiform includes 3 ceramic attachments:


- 38mm oval wand for big waves
- 32mm large tong for curls and waves
- 25-13mm curl wand for small to larger curls

PROGLOSS™ SUPER SMOOTH OILS

Every product in the Revamp haircare range is infused with PROGLOSS™ SUPER SMOOTH OILS – enriched with Argan, Keratin and Coconut for ultimate smoothness and shine.

INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection, apply a heat protection spray.
- Clip up your hair ready for styling.
- To attach your chosen wand or tong:

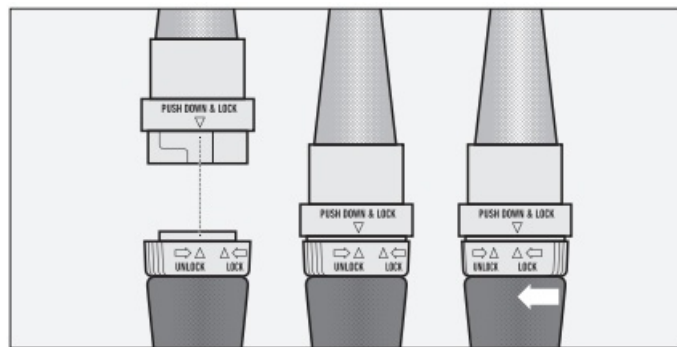

- Place the attachment next to the end of the Multiform handle so that the arrow on the attachment (▼) is in line with the unlock arrow on the handle (▲). Gently push the attachment onto the handle, then turn the lock ring clockwise so that the lock arrow (▼) is in line with the arrow on the attachment. This fixes the attachment in place. When finished, allow the Multiform to cool, then turn the lock ring anticlockwise to release and pull the attachment gently away from the handle.
- CAUTION: Always allow the Multiform to cool before adding and removing attachments.
- Plug the product into a 220-240V mains power supply.
- Press the power button to switch on.
- The appliance has 5 heat settings. If you have fine, delicate or coloured hair, use the lower heat settings. If you have thick or coarse hair, use the higher heat settings. It is suggested to start on the lowest setting on initial use and increase the temperature until the desired result is achieved.
- The default temperature is 180°C. Use the digital temperature control + and – buttons to select your desired

temperature:

SETTING	TEMPERATURE
1	120°C
2	140°C
3	160°C
4	180°C
5	210°C

- The digital temperature indicator will stop flashing once the selected temperature has been reached. The appliance is now ready to use.
- Use the heat resistant glove to avoid any accidental burns.
- Section the hair prior to styling. Style the lower layers first.
- Hold the handle and wrap a section of hair around the heated barrel.
- Wait about 10 seconds for curl to form.
- Unwind the hair and release the curl.
- Allow the hair to cool before styling.
- Repeat this around the head to create as many curls as desired.
- After use, switch off the appliance, unplug, place styler on its stand and allow to cool before storing away.

Follow us on revamphair.com for the latest hair tips and advice.

Please note:

- This is a high performance product, avoid frequent use to prevent hair damage.
- Regular use of styling products may deteriorate the coating.
- Do not scratch the surface of the product as this will deteriorate the effectiveness of the coating.
- While heating, during use and cooling, place on a flat, smooth, heat-resistant surface. Only hold unit at the end of the handle.
- The product reaches a very high temperature during operation, please style with caution when using. Make sure to keep away from the scalp and skin to avoid burns.

AUTO SHUT-OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, then it will automatically switch off. If you wish to continue using the appliance after this time, press the power button to switch on. Use the temperature control + and – buttons to select your desired temperature. This feature should not be considered as a substitute for 'OFF'. ALWAYS REMEMBER TO SWITCH THE APPLIANCE OFF WHEN NOT IN USE.

PLUG (WD-1500-GB ONLY)

This unit comes with a removable UK 3-pin plug. The 3-pin plug can be removed to reveal a European 2-pin plug by unscrewing the centre screw, lifting the rear cover and unclipping the European 2-pin plug. It can be replaced if necessary by reversing this procedure.



If required replace plug fuse with one the same value

CLEANING & MAINTENANCE

- Switch the appliance off, unplug from the mains and allow to cool fully before cleaning.
- Wipe over all surfaces using a soft damp cloth. Do not use harsh abrasives or cleaners.
- Do not immerse the appliance in water or any other liquid.
- Ensure all parts are dried thoroughly with a soft towel before reusing.
- To prevent cord damage, do not wrap the cord around the appliance, always store the cord loosely next to the appliance.
- Store in a cool dry place.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 16 years and above. Persons with reduced physical, sensory or mental capabilities should not use this product. Persons with lack of experience and knowledge can use the product if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 16 and supervised. Keep the appliance and cable out of reach of children under 16 years.
- **WARNING:** for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- **THIS APPLIANCE SHOULD BE UNPLUGGED FROM THE MAIN SUPPLY WHEN NOT IN USE.**
- **WARNING:** This appliance must not be taken into a bathroom. It should not be used near bath-tubs, basins or any other vessels containing water.
- This appliance must not be used outdoors.
- Avoid allowing any part of the appliance to come into contact with the face, neck or scalp.
- Do not use the appliance while drowsy or sleeping.
- Do not leave the appliance unattended while plugged in.
- Do not set the appliance down while still on.
- Do not operate with wet hands.
- Do not place the appliance on any soft furnishings or materials e.g. carpet, bedding, towels, rugs etc.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use any extension cord with this appliance.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the power cord.

- Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- If the power cord becomes damaged, discontinue use immediately and return the appliance to your nearest authorised service dealer for repair or replacement in order to avoid a hazard.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those supplied with this product.
- Do not take the appliance apart. There are no serviceable parts inside.
- Let the appliance cool down before cleaning and storing away.

SALON BRITISH BRANDS

Revamp is a trademark of Salon British Brands. Distributed by FKA Brands Limited. Somerhill Business Park, Tonbridge, Kent TN11 0GP, UK / Tel: 01473 874016


Via Giosuè Carducci 125, 20099 Sesto S. Giovanni, Milan, Italy /

Tel: 0039 0236006064

csupport@revamphair.com

IB-WD1500-0419-01

Documents / Resources

	<p>REVAMP WD-1500 Progloss Multiform Curl and Waves 3-In-1 Hair Styler [pdf] User Guide WD-1500, Progloss Multiform Curl and Waves 3-In-1 Hair Styler</p>
--	---

References

- **R** [Revamp Professional Hair Care Products](#)
- **R** [Service Centres](#)