

REVLON RVDR5034 Compact Hair Dryer



REVLON RVDR5034 Compact Hair Dryer Operating Instructions

[Home](#) » [REVLON](#) » REVLON RVDR5034 Compact Hair Dryer Operating Instructions 

Contents

- [1 REVLON RVDR5034 Compact Hair Dryer](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 PRODUCT OVERVIEW](#)
- [4 Operating Instructions](#)
- [5 Limited 24-Month Warranty](#)
- [6 FREQUENTLY ASKED QUESTIONS](#)
- [7 VIDEO – PRODUCT OVERVIEW](#)
- [8 References](#)
- [9 Related Posts](#)

REVLON


REVLON RVDR5034 Compact Hair Dryer



IMPORTANT SAFETY INSTRUCTIONS

CAUTION

- NEVER wrap the power cord around the appliance. Any pulling, twisting, severe folding, or bending can damage the cord, especially at the point of entry into the unit, which may rupture the cord and cause an electrical short or other failure.
- Regularly inspect the cord. DO NOT use an appliance with a twisted, bent, or otherwise damaged cord, or if the appliance receives power irregularly. If the cord is damaged, or for irregular power issues, refer to the instructions in the WARNING section further below.

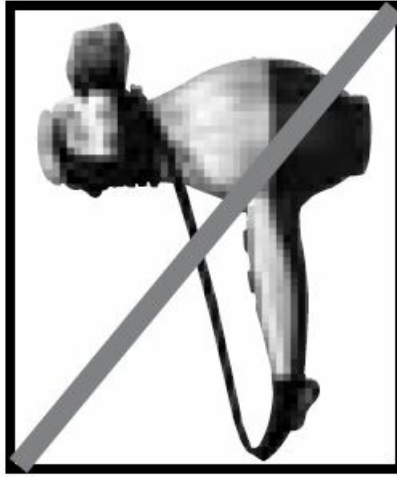

STORAGE

- The appliance should be disconnected and allowed to cool before storage. DO NOT apply stress or tension to the cord's point of entry into the unit. During storage, the cord should remain loose with no tight bends or folds, and the appliance should be placed in a secure, dry location out of reach of children. For further details, refer to the STORAGE section of the Operating Instructions.



When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always “unplug it” immediately after using.
2. DO NOT use it while bathing.
3. DO NOT place or store appliances where they can fall or be pulled into a tub or sink.
4. DO NOT use near, place in, or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. DO NOT reach into the water.
6. DO NOT use an appliance with a twisted, bent, or otherwise damaged cord.

WARNING: To reduce the risk of burns, fire, electrocution, or injury to persons:

1. An appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug if it is not working properly, or if it has been damaged or dropped into water. Return the appliance to a service center for examination and repair.

NOTE: Helen of Troy L.P. does not have an authorized service center. However, if this appliance is still under warranty, return it to the Helen of Troy Consumer Service Department for replacement.

5. Keep the cord and appliance away from heated surfaces.
6. DO NOT pull, twist, or wrap the cord around the appliance.
7. Never use it while sleeping.
8. Never drop or insert any object into any opening.
9. DO NOT use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
11. DO NOT direct hot air toward eyes or other heat-sensitive areas.
12. Attachments (when furnished) may become hot during use. Allow them to cool before handling.
13. DO NOT place the appliance on any surface while it is operating.
14. While using the appliance, keep your hair away from the air inlets.
15. DO NOT operate this appliance with a voltage converter.
16. DO NOT use an extension cord with this appliance.

PRODUCT OVERVIEW



Operating Instructions

This appliance is intended for household use only.

Revlon® dryers are designed for safety and performance. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. For U.S. residents only: In the event of immersion, the protective device will not allow the appliance to operate. Periodically check the safety plug to verify that it is in proper working order. Simply place the plug into the outlet and press the test button. The appliance should immediately stop. To resume operating the appliance, press the reset button. In the event, the test button does not work properly, return the appliance to a service center or the manufacturer.

STYLING TIPS

- Always towel-dry hair to remove excess water.
- Set the dryer at the highest heat and speed settings and circulate the airflow through your hair. **DO NOT** concentrate airflow on any one area for an extended period of time.
- When hair is almost dry, lower heat and speed to style.
- Push the Cold Shot Button to set the style with cold air once you've achieved the desired style.
- Store your Revlon® dryer on its practical Hanging Ring. This will prevent the cord from tangling and wearing prematurely.

USER MAINTENANCE INSTRUCTIONS

This appliance is equipped with a thermostat that may cycle OFF or cause the heaters to turn off if the temperature exceeds comfort level due to partially blocked air inlet or outlet openings. In the event that the appliance stops or releases only cool air during use, turn off the switches and allow the appliance to cool down, at which time the thermostat will automatically reset. During use, DO NOT block the air openings. When using this appliance near water (e.g. bathrooms), the use of an electrical outlet protected by a Ground Fault Circuit Interrupter is recommended.

- **Maintenance** Your appliance is virtually maintenance-free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, unplug the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

CLEANING INSTRUCTIONS

Dust and lint can be removed from air intake openings with a small brush or vacuum cleaner brush attachment. DO NOT allow moisture or additional debris to enter the unit while cleaning.

WARNING: If any malfunction occurs, do not attempt to repair it. This the appliance has no user-serviceable parts.

STORAGE

Unplug the appliance when not in use. Allow appliances to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle the cord carefully for a longer life and avoid jerking, bending sharply, twisting, or straining the cord, especially at plug connections.

Limited 24-Month Warranty

This appliance is warranted against defects in material or workmanship for 24 months from the date of purchase. Any problems arising from misuse, attempts at repair, dropping, or extreme wear are not covered by this warranty. The store where the item was purchased is authorized to make an exchange only if the return is made within 30 days from the purchase date. For exchanges after 30 days, send the appliance postage paid along with proof of purchase, a note explaining the reason for return, and \$6.00 US to cover handling, insurance, and return postage costs to: Helen of Troy L.P., Consumer Service Department, 1 Helen of Troy Plaza, El Paso, Texas 79912 USA. (In US Only: California residents are not required to send \$6.00 US.) **Toll-free number:** 1-800-487-7273. This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live.

Product Registration – Go Online NOW!

Benefits of registering your new product:

- **Proof of ownership:** your model number, serial number, and other information will be kept in our files.

Your privacy is important to us and we will NOT share or sell this information. revlonhairtools.com/product-registration

NOTICE

- If your dryer unexpectedly stops, or if it is not blowing hot air, turn it off, unplug it, and CLEAN THE INLET while waiting 5 minutes for the dryer to cool down. Then press the red "reset" button on the ALCLsafety plug until it

clicks. Your dryer should resume operation.

IMPORTANT MESSAGE TO CONSUMERS THIS MESSAGE ABOUT

- GROUND FAULT CIRCUIT INTERRUPTERS
- CAN SAVE A LIFE
- IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW! Your local electrician can help you decide which type is best for you: a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires a GFCI in the bathrooms, garages, and outdoor outlets of all new homes. WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you... even if the switch is "off." A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.
- A GFCI CAN SAVE YOUR LIFE! COMPARED TO THAT, THE PRICE IS SMALL!
- **DON'T WAIT... INSTALL ONE NOW!** *GFCI (Ground Fault Circuit Interrupter) is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

FREQUENTLY ASKED QUESTIONS

What is the main focus of the REVLON RVDR5034 Compact Hair Dryer, and how does it contribute to styling?

The REVLON RVDR5034 Compact Hair Dryer is designed for drying, styling, and creating salon-style blowouts, waves, and curls, serving as a versatile tool for reinventing your hairstyle.

What is the color of the REVLON RVDR5034 Compact Hair Dryer, and how does it add to its aesthetic appeal?

The REVLON RVDR5034 Compact Hair Dryer comes in black, adding a sleek and classic aesthetic appeal to the design.

What material is used in the construction of the REVLON RVDR5034 Compact Hair Dryer, and how does it impact its durability and maintenance?

The REVLON RVDR5034 is constructed with plastic, making it lightweight for easy cleaning and maintenance, while still offering durability.

How much power does the REVLON RVDR5034 Compact Hair Dryer have, and what is its wattage?

The REVLON RVDR5034 operates at 1875 watts, providing ample power for efficient drying and styling.

What is the power source for the REVLON RVDR5034 Compact Hair Dryer, and how is it designed to be used?

The REVLON RVDR5034 is powered by corded electricity, making it suitable for use with standard electrical

outlets.

What are the product dimensions of the REVLON RVDR5034 Compact Hair Dryer, and how does its size contribute to its portability?

The product dimensions of the REVLON RVDR5034 are 3.38 x 9.38 x 7.25 inches, highlighting its compact and lightweight design for easy portability.

How much does the REVLON RVDR5034 Compact Hair Dryer weigh, and how does its lightweight construction benefit users?

The REVLON RVDR5034 weighs 1.18 pounds, making it lightweight and easy to handle during use, adding to user convenience.

What is the item model number of the REVLON RVDR5034 Compact Hair Dryer, and how does it help identify the specific model?

The item model number of the REVLON RVDR5034 is RVDR5034, serving as a unique identifier for this specific model.

How does the REVLON RVDR5034 Compact Hair Dryer contribute to easy cleaning, and what features enhance its maintenance?

The REVLON RVDR5034's lightweight and compact design contribute to easy cleaning, and its simple construction enhances overall maintenance.

What are the key features that make the REVLON RVDR5034 Compact Hair Dryer versatile for various hairstyling needs?

The REVLON RVDR5034 is versatile with 2 heat/speed settings, allowing users to quickly dry and style their hair according to their personal needs.

Can the REVLON RVDR5034 Compact Hair Dryer be used internationally, and what is its voltage compatibility?

The REVLON RVDR5034 is designed for 120 volts outlets only, so it may not be suitable for use in locations with different voltage requirements.

How does the compact and lightweight design of the REVLON RVDR5034 contribute to its suitability as a travel hair accessory?

The compact and lightweight design of the REVLON RVDR5034 makes it an ideal travel companion, allowing users to easily pack and carry it for on-the-go styling.

What type of styling can be achieved with the REVLON RVDR5034 Compact Hair Dryer, as mentioned in its features?

The REVLON RVDR5034 is versatile for achieving salon-style blowouts, waves, curls, and various hairstyles, providing a range of styling options.

How quickly can the REVLON RVDR5034 Compact Hair Dryer dry hair, and how does it cater to users with different styling preferences?

The REVLON RVDR5034 is designed for quick drying with 2 heat/speed settings, catering to users with different styling preferences.

What type of outlets is the REVLON RVDR5034 Compact Hair Dryer compatible with, and how does it accommodate voltage variations?

The REVLON RVDR5034 is compatible with 120-volt outlets, and its wattage may vary depending on the location of use, accommodating voltage variations.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: REVLON RVDR5034 Compact Hair Dryer Operating Instructions Compact-Hair-Dryer-Operating-Instructions.mp4](#)

REFERENCE: [REVLON RVDR5034 Compact Hair Dryer Operating Instructions-Device.Report](#)

References

- [User Manual](#)