



REVOX C100 Multiuser Remote Control Instructions

[Home](#) » [REVOX](#) » REVOX C100 Multiuser Remote Control Instructions 

Contents

- [1 REVOX C100 Multiuser Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 Battery replacement](#)
- [6 Button Description](#)
- [7 Power button](#)
- [8 TV Programming](#)
- [9 Code –List](#)
- [10 Contact Information](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

REVOX

REVOX C100 Multiuser Remote Control



Product Information

Specifications

- **Product Name:** C100 Multiuser Remote Control
- **Battery Type:** CR2032 / 3V
- **Battery Replacement:** Replace batteries in pairs

Product Usage Instructions

Battery Replacement

If the batteries of the remote control become weaker over time, which is noticeable in a shortened range, they can easily be replaced. Follow the steps below:

1. Remove the battery cover on the back of the remote control.
2. Use the tip of a biro to prise out the batteries at the points marked in red.
3. Insert the new batteries, making sure that the polarity is correct.
4. The batteries should be replaced in pairs.

Disposal of the Batteries

Original equipment batteries do not contain any harmful substances such as cadmium, lead, and mercury. To dispose of used batteries:

- Do not dispose of used batteries with household waste.
- Dispose of used batteries free of charge in the collection containers provided by retailers.
- You will also find a collection container for used batteries at your specialist dealer.

Button Functions

Button	Function	Command
Revox Off	Powers off Revox device	RC5 code: 1
Number 1	Number key 1	RC5 code: 29 / 01
Number 2	Number key 2	RC5 code: 29 / 02

Switching Modes

To switch between Multiuser mode and TV mode, follow the instructions below:

- C100 in Multiuser mode: Press the Power TV push button for less than 2 seconds to switch to TV mode.
- C100 in TV mode: Press the Revox Off push button for less than 2 seconds to switch to Multiuser mode.
- Alternatively, press one of the 8 user (favorite) buttons or one of the 3 input buttons to switch modes.

TV Programming

To program the remote control for your TV, you can use either the Search with manufacturer number method or the Automatic search method.

Search with Manufacturer Number

If you know the manufacturer number of your TV, follow these steps:

1. Press the respective manufacturer number (e.g. 0010, 0011, etc.)

Automatic Search

If you don't know the manufacturer number of your TV, follow these steps:

1. Press the Automatic Search button.

Resetting the Remote Control

If you need to reset the remote control to its original state, follow these steps:

1. Press and hold the und keys on the remote control for at least 5 seconds until the green LED flashes twice.
2. Enter the code 9 9 9 9.
3. The green LED will flash twice to confirm the code input.
4. The remote control is now reset to its original state. Note that the television mode will have no function as no code is programmed.

FAQ

- **Q: How do I replace the batteries?**

A: To replace the batteries, follow the battery replacement instructions provided in the user manual.

- **Q: How should I dispose of used batteries?**

A: According to the Battery Ordinance, used batteries must not be disposed of with household waste. Dispose of used batteries free of charge in the collection containers provided by retailers or at your specialist dealer.

- **Q: How do I switch between Multiuser mode and TV mode?**

A: To switch modes, follow the instructions provided in the user manual under the “Switching Modes” section.

- **Q: How do I program the remote control for my TV?**

A: There are two methods for programming the remote control for your TV: Search with the manufacturer number and Automatic search. Refer to the user manual for detailed instructions on each method.

- **Q: How do I reset the remote control?**

A: To reset the remote control to its original state, follow the instructions provided in the user manual under the “Resetting the Remote Control” section.

Introduction

C100 Multiuser Remote Control


The C100 IR remote control is a universal remote control for the Multiuser system from Revox. It can be used to control all Multiuser devices that have a built-in or external infrared receiver. The M300 and M500 have built-in IR receivers, but can also be supplemented with an external IR receiver M204 or the C18 Multiuser Wall Control. Our V219 or M30 side room amplifiers, as installation products, do not have built-in IR receivers, but can also be equipped with external IR receivers.

The C100 can be used to cover all the everyday basic functions provided by the Multiuser system. For example, the selection of up to 4 users and their user favorites is stored in the Multiuser App. These basic functions are already stored in the Multiuser Configurator. Through extended programming (by specialist personnel), many other additional functions can be handled by the C100. In doing so, the configurator determines which functions the IR command sent is to perform. Via a proxy, even IP commands can be sent to other units in the home network.

In addition to controlling the multi-user system from Revox, the C100 has an IR database for countless TV manufacturers. This means that a TV set can also be controlled in basic terms. An overview of the different manufacturers can be found at the end of these operating instructions. The selection is made by entering a 4-digit numerical code.

Battery replacement

If the batteries of the remote control become weaker over time, which is noticeable in a shortened range, they can easily be replaced. To do this, remove the battery cover on the back of the remote control and use the tip of a biro to prise out the batteries at the points marked in red. Insert the new batteries, making sure that the polarity is correct. The batteries should be replaced in pairs.

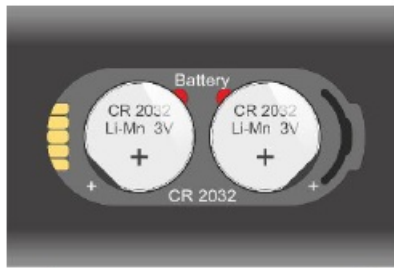

Back view : C100 remote control

- **Replacement batteries:** 2 St. CR2032/3V

Disposal of the batteries

Original equipment batteries do not contain any harmful substances such as cadmium, lead and mercury. According to the Battery Ordinance, used batteries must not be disposed of with household waste. Dispose of used batteries free of charge in the collection containers provided by retailers. You will also find a collection container for used batteries at your specialist dealer.

Button Description

Button	Print	Multiusers command - red LED -	Multiusers RC5 code Adr./ command	TV command - green LED -
	Revox OFF	Revox Off ¹	29 / 39	
	Power TV			Power TV ²
1		Number 1	29 / 01	1
2 ABC		Number 2	29 / 02	2 / ABC
3 DEF		Number 3	29 / 03	3 / DEF
4 GHI		Number 4	29 / 04	4 / GHI
5 JKL		Number 5	29 / 05	5 / JKL
6 MNO		Number 6	29 / 06	6 / MNO
7 PQRS		Number 7	29 / 07	7 / PQRS
8 TUV		Number 8	29 / 08	8 / TUV
9 WXYZ		Number 9	29 / 09	9 / WXYZ
0		Number 0	29 / 00	0
			29 / 50	Back
MENU			29 / 31	Menu
			29 / 40	Play
			29 / 48	Pause
			29 / 54	Stop
			29 / 35	Up
			29 / 37	Left
OK			29 / 45	OK
			29 / 38	Right
			29 / 36	Down
			29 / 29	Fast rewind
			29 / 28	Fast forward
			29 / 49	Recording
			29 / 41	Red
			29 / 42	Green
			29 / 43	Yellow



			29 / 44	Blue
		Volume up	29 / 20	Volume up ³
		Volume down	29 / 21	Volume down ³
		Mute ³	29 / 13	Mute ³
		AV	29 / 30	AV
		Channel_up	29 / 18	Channel_up
		Channel_down	29 / 19	Channel_down
		Favourite of User 1	29 / 56	
		Favourite of User 2	29 / 57	
		Favourite of User 3	29 / 58	
		Favourite of User 4	29 / 59	
		User 1	29 / 63	
		User 2	29 / 55	
		User 3	29 / 60	
		User 4	29 / 61	
		Analogue input	29 / 51	
		Coaxial input	29 / 52	
		Optical input	29 / 53	
		TV	63 / 03	
F1	Exit	Function 1	29 / 10	Exit
F2	Info	Function 2	29 / 11	Info
F3	EPG	Function 3	29 / 46	EPG
F4	Format	Function 4	29 / 47	Format



Power button

- C100 in Multiuser mode:** Multiuser power command is sent immediately.
 - C100 in TV mode:** Revox Off push button < 2 seconds, switch to Multiuser mode. Push button > = 2 seconds pressed, switch to Multiuser mode, and Multiuser power command is sent. Alternatively, one of the 8 user (favorite) buttons or one of the 3 input buttons can be pressed.
- TV model not programmed, C100 remains in Multiuser mode (TV-LED illuminates 3 seconds on release -> error detection)
 - C100 in TV mode:** Power TV command is sent immediately.
 - C100 in Multiuser mode:** Power TV push button < 2 seconds, changeover to TV mode. Push button > = 2 seconds, switch to TV mode and the TV Power command is sent. Alternatively, the TV source key can be pressed.
- Delivery status for volume function:**

The code 0 0 0 0 can be used to switch between the Multiuser and the TV volume functions so that in TV mode either the original TV commands or the RC5 commands for the Multiuser system are sent.

TV Programming

Programming by model number

Press the  and  keys on the remote control for at least 5 seconds, until the green LED flashes twice. Select and enter a 4-digit TV code corresponding to your television brand from the code list. The green LED flashes twice to confirm the code input.

- If an invalid 4-digit code has been entered, the LED lights up for 2 seconds to indicate an error, and the remote control returns to the original mode.
- If your television doesn't react or react incorrectly, repeat the programming and enter the next 4-digit code from the list. If none of the defined codes controls your television, use the automatic code search option. See Automatic search.
- If no key is pressed for 10 seconds during programming, the remote control automatically returns to the original mode.

Search with a manufacturer number

Switch your television on. Press the  and  keys on the remote control for at least 5 seconds, until the green LED flashes twice. Enter the four-digit manufacturer number from the manufacturer list (see list below). The LED flashes twice to confirm the input. Press and hold the Power TV until the television switches itself off. Then release the key immediately and press the OK key, to save the selected television code.

If a 4-digit code is not recognized, the green LED lights up for 2 seconds and the remote control is reset to the normal state (error display). If your television brand (manufacturer) is not in the code list, indicated by the remote control flashing 5 times at the end of the list, use the automatic search function.

0010	Blaupunkt	0015	Hitachi	0020	Panasonic	0025	Toshiba
0011	Daewoo	0016	LG	0021	Philips	0026	Vestel
0012	Emerson/Funai	0017	Loewe	0022	Samsung		
0013	GoldStar	0018	Metz	0023	Sanyo		

Automatic search

- Switch your television on. Press the  and  keys on the remote control for at least 5 seconds, until the green LED flashes twice. Enter the code 1 0 0 1. The green LED flashes twice to confirm the input.
- Press and hold the Power TV until the television switches itself off. This can take up to 15 minutes. Then release the key immediately and press the OK key, in order to save the selected television code.
- If the "Power TV" button is not released in time when the TV is turned off, restart the automatic search again. The search is continued at the place where it was interrupted.

Reading out the code

Reading out an already programmed remote control (code).

- Switch your television on. Press the  and  keys on the remote control for at least 5 seconds, until the green LED flashes twice. Enter the code 1 0 0 2. The 1 key has to be pressed to search for the first digit in the programmed code. The
- LED starts to flash, e.g. with the code 3 5 6 1, it flashes three times (3x). The 2 key has to be pressed to search

for the second digit in the programmed code. The LED starts to flash, e.g. with the code 3 5 6 1, it flashes five times (5x). The 3 key has to be pressed to search for the third digit in the programmed code. The LED starts to flash, e.g. with the code 3 5 6 1, it flashes six times (6x). The 4 key must be pressed to search for the third digit in the programmed code.

- If the digit has the value 0, the LED doesn't flash. If no key is pressed for 10 seconds during programming, the remote control automatically returns to the original mode.

Reset

- Press the  and  keys on the remote control for at least 5 seconds, until the green LED flashes twice. Enter the code 9 9 9 9. The green LED flashes twice to confirm the code input. The remote control is now reset to its original state.
- The television mode now has no function (no code is programmed).

Switch volume control between Multiuser and TV

For description see Button description.

Code –List

TV brand	Code	TV brand	Code
A		Logik	1471 1594 1936 1166 2002 1360 2003 1160
Acer	1589 1590 2097 1591 1160		1167 1389 1944 1560 1485 1351 1304
Aconatic	2202 1892 2091	Logix	1490
Adler	1503 2018 1928 1592 1258	Lumatron	1116 1541 1540
ad notam	1588 1810 1809	Luxor	1159 1160 1135 1130
AEG	1544 1215 2044 1391 1126 1115	M	
AG	1631	Maginon	1251
Agath	1272	Magnasonic	2115
AgfaPhoto	1445 1356	Magnavox	1818 1601 1951
AG Neovo	2180 1745 1992	Magnum	1215 1126 1124
Airis	1343 2028 1262 1599 1486 1347 1246	Majestic	2064
Aiwa	1928 1964 2147 1919 1794 1969 1918 1619	Man City	1489
	1424	Manhattan	1159
Akai	1159 1160 2095 1347 1489 1412 2094 2064	MANTA	2025 2000 1931 2057 2008 2013 2093 1892
	2063 1351 1313 1215 1126 2022 1989 1974 1238		1794 2056 1947 1899 1476 2072
	1161 2154 1839 1523 1219 1218 1213	Mark	1215 1126

Akira 1540 1461	1262 1616 1789 1618 1544 1541	MarQ	2004 2147 2048
Akura	1159 1848 1215 1248	Mascom 412	1117 1184 1420 1212 1197 1193 1
Alba	1489 1264 1304 1160	Master	1396 1549
ALGARA BEACH	1935	Matsui	1594 1752 1389 1116
ALHAFIDH	2204	Maxess	1859 2101
Allview	2064 2147 2148	Medialine	1812
Alpha	2082	Media Station	1435
Alphatronics	2040 2039 1232	Medion	1381 1163 1166 1160 1161 1511 1159 1828
Altek	1542		1208 1245 1923 1380 2077 1135 1981 1463
Altimo	1944 1564		1116 1215 1347 2041 1495 1456 1389 1153
Altus 1124	1215 1126 1206 1201 1216 1190		1126 1626 1258 1190 1124
Amoi	1565	MEGASAT	1511
Andersson	1159	Melectronic	1126 1215
Ansonic	1455 1160	Memorex	1347 1192
AOC 1518	1519 1746 2043 1517 2042 2041	Metz	2147 1816 1732 1804 1817 1805 2150 2148
Apro	1485		2145 1934 1803
Aquavision	1444	Micromax	2202
Arcelik 1196 1215	1206 1199 1201 1126 1124 1197	Microspot	1417
	1202 2147 1216 1847 1846 1195 1184	Miia	1592
Arctic	1216 1126 1215	Minerva	1437 1558 1103
Arena	1160 1159 1215 1126	Minsonic	1628
Aristona	1115	Mirage	1215
Arrow	1969 2050	Mirai	1752 1255 1755 1576
Arrqw	1969 2050	Mitchell & Brown	1160 1167
ASANZO	2147 1432 1583	Mitsai	1159 1424 1160 1116 1491 1135
Astra	1216 1215 1126	Mitsubishi	1644
Atec	1686	Mivar	1551
Atron	1165	Motorola	2147
Atvio	1794	mpman	2064 1545 1489
Audiola	2064	MT Logic	1374 1184 1352 1537 1375 1480 1250 1476
Audiosonic	1351 1215 1126 1124		1346 1196 1160

Autovox	1159	Multynet	2030
Avera	2019 2067 1280	Murphy	1160
Aver Media	1548	Mustek	1343
AviSMART	1162	Mx Onda	1214 1679 1361 1246 1185
AVtex	1382 1856		
AWA	1560	N	
axen	1892	Nabo	1160 1166 1167
Axxion	1511 1458	National	1616
AYA	1166 1160	NCE	2109 2108
		NEC	2122 1954 1641 1403 1642 2123
B		Neckermann	1215
Baird	1266	NEO	1215 1632 1628 1622 1618 1616
Bang & Olufsen	1780 1778 1779 1777 1781	1615 1160	
Basic Line	1159 1116	1126 1124	

Bauer	1684	NEOM Digital	1135
BAUHN	1989 1892 1974 1406 2010 1979	NEON	1462
2004 1891		Nevir	1503 2045 1864 1549 1159 1391
2022 1944 1313		1269 1963	
BEC	1424	1160 1854 2072 1867 1367	
Beko	1215 1126 1124 1190 1216 1184	Nikai	1928 1892 1899 1508
1219 1206		Nikkai	1215 1126 1124
1197 1201 1196 1195 1189 1422 1218 1202		Nikkei	1540 1215 1819 1542 1385 1269
1199 1352 1221 1847 1141 1137		1216 1167	
Belson	1592 1539 1239 1783 1812 1785	1166 1159 1126	
1623 1583		Noblex	2055 1794
1577 1488 1487 1470 1392 1358 1347 1258		Nokia	1829 2202
1240 1159 1130 1112		Nordmende	1166 1909 1384 1215 1386 1159
BenQ	1521 1969	1569 1427	
Beston	1899 1892	1392 1387 1345 1126 1124	
Bexa	2098 1922	Notts Forest	1489
BLAUBERG	2000 1931	Novox	1359 1260
Blaupunkt	1489 2017 1490 2020 2004 2036	NPG	1424
1891 1195			
2077 1864 2147 1197 1191			

Blue Sky 1130 1116	1126 1215 1216 1159 1613 1476	O	
Blusens 1294 1447	1320 1293 1570 1283 1322 1286	Oceanic	1160
1287 1319 1451 1449 1315 2085 1321 1464		ODYS	1356 1235 1814 1813 1357 1354 1237 1236
1231 1230 1476 1450 1448 1394 1298 1295			1815 1812 1611 1566 1553 1495 1391 1355
BOLVA	1561 2077 2022		1353 1346 1305
BPL	1969	ok.	1160 1471 1166 1489 1969 1836 1974 1351
Brandt 1159 1132	1190 1518 1135 1728 1216 1215		1159 1424 2150 2145 2147 1167 1925 2025
Brigmtton	1446 1347 1243		1934 1794
Brionvega	1181	Okano	1944 2098 2005 1860 2104 2101 1850 1262
Broksonic	2154	OKI	1159 1184 1424 1135 1262 1160 1161 1141
Brother	1212		1461 1495 1189 1138 1124
Bush 1836 1519	1489 1160 1126 1166 1215 1304	Ölevia	2080 1885 1886 1887 1347 2081
1124 1216 1141 1184 1137 1115		OnePlus	2014
C		Onida	2147 2150
Caixun	2030 2022 1975	ONN	2159 2207 1699 2206 2197 1485
Campomatic	1406	Opera	1540 1146
Canox	2064	Opticum	2025 2064 2000
Caratec	1351	Orava	1166 1160 1828 1545
Casio	1278	orca	1975
Casper	2202	Orian	1617
Celcus	1160 1166	Orion	1690 1564 1215 1693 1110 1694 1692 1389
cello	1462 2114 1944 2003		1688 1645 1159 2154 1867 1758 1726 1680
CG	2202		1130 1124
Changhong 1502 1969	1424 1407 1964 1419 1974 1545	Oscar	2029
1979 1975 1973 1477		Otake	1694
Changhong Ruba	1975	Oxygen	2030 1499
Charisma	2166	P	
Charpy	1342	Pacific	1215
CHIMEI	1255	Palladium	1215 1116 1132 1126
CHIQ	1974 1979 1969 1975 1424 1973	Panasonic	1669 2133 2139 1673 1676 1672

1964		1828 1675
Citizen	2157 1192	1176 2142 2141 2140 2134 1674 2153 2112
ClassPro	1975	2135 1160 2212 1671 2138 2136 2137 1670
Clatronic	1215 1126 1185 1243	Panavision 1215 1126
CMX/Commax 1482 1481	1592 1229 1545 1391 1583 1483	Panavox 1905
1683 1351		PC World Essentials 1594 Peacock 1686
Coby	1889 1337	PEAQ 1160 1794
Combi	1557	peerless-AV 1938 1892 1313
COMPAQ	2202	Philco 1934
Conia	1215	Philips 1748 1746 1115 1741 1736 1745 1737 2176
Continental	1215 1126	2180 1117 1136 1743 1161 1742 1747 2179
Continental Edison	1160 1159 1828 1544 2030 2025 1545 1500	1107 1740 2177 1834 1831 1826 1744 1818
coocaa	2150 2147 2148 2145 2149	1140 1739 2184 2181 1122 1127 1125 1172
Cranker	1160 1166	1157 1133 2183 1142 2159 1751 1750 1749
Croma	1969	1131 1992 1111 2178 1520 1145 1699 1738
Crosswood	1215 1190 1126	1123 1198 2185 2182 1633 1154 1150
Crown 1342 1221	1215 1422 1126 1216 1683 1476	Phocus 1215 1216 1190 1184 1141 1126 1124
1189 1124 1110		Phonola 1215
Currys Essentials	1594 1471	Phonotrend 1580

Curtis 1508 1371	1772 1368 1774 1911 1501 1373	
1370 2061 2060 1851 1715 1507 1495 1266		
Cybercast	2098	Pioneer 2166 2170 1796 2172 1797 2173 1801 2168
Cyberpix	1159	1794 2174 2171 2169 1800 1799 2175 2167
D		1798
Daenyx	2061	PKS 1110
Daewoo 1811 1638	1634 1635 1527 1633 1455 1636	Platinum 1554
1640 1637 1227 1215 1445 1184 1109 1639		Playsonic 1215 1216 1126 1189 1124
1582 1485 1404		Polaris 1187
DAIJITSU	2109 2027	Polaroid 1347 2064 1373 1160 1862 1958 2004 1159
		2010 1892 1432 1406 1184 2091 2062 2017

Dalco	1617 1616	1989 1899 1706 1545 1522 1344
Dangaard 1301 1294	1556 1542 1453 1452 1445 1347	Powerpoint 1215 1541
Dantax	1215 1135 1126 1124	Princess 1215 1124 1219
DCE	1126 1215	Princeton 1160
Denon	1758	PRISM+ 2147
Denver 1445 1294	1511 1523 1301 1489 1452 1456	ProCaster 1160 1828 1167 1166
1524 1494 1351 2091 1323 1295 1881 1493		Profectis 1159
1283 1247 1200 2163 2077 1476 1465 1458		Profilo 1179 1407 1212
1446 1412 2022 1899 1504 1495 1352 1307		ProLine 1159 1113 1475 1215 1135 1130 1485 1468
1258 1246 1243		1224 1214 1126
DEVANTI	1976 1965	ProScan 1772 1397 1775 1370 1724 1997 1593 1371
DEXP	2025 1424 2050	1774 1508 1715 1563 1845 1373 1934 1773
DGM	1369 1352	1503 1331 1501 1398 2107 1995 1958 1931
Diamant	2025 2022	1561 1266 2088 1959 1930 1857 1265 1258
Diboss	1183 1185	Prosonic 1126 1494 1489 1445 1184 1452 1294 1159
Digiality	1596	1215 1197 1493 1455 1323 1295 1124 1160
Digihome	1160 1222 1159 1166 1135	1135 1495 1216 1828 1542 1301 1166 1116
Digiloc	1407 1223	Protek 1476
DigiQuest	1160	Protron 1893
Digital	1215 1124	Provision 1215
Digitech	1116	PYE 1125
Digitrex	1351	
DIKOM	1391	Q
DLD	1349	Q.Bell 1891 1899 2022 2090 2064 2004 1892 2030
DMTech 1211 1135	1159 1175 1116 1994 1559 1446	1258
DQT	1806 1469	QILIVE 1160 1166 2030 2022
Dual 1124 1135	1159 1116 1160 1215 1167 1216	Quadro 1573 1106 1422 1681
1351 1222 1190 1166 1161 1126		Quelle 1128 1116
Durabase	1160	Quigg Electronics 1395
Durabrand	1215 1124 1216 1126 1116	
Dynatron	1603	R

Dynex 1378 1698	1606 1605 1610 1697 1609 1567	Radiola	1739 1125 1123
1608 1607		RadioMarelli	1106
Dyon 2007 1977	1925 1547 2091 1937 1965 1892	RCA	2193 1998 1997 1772 1397 1775
2092 2051 1926 1495		2159 1370	
E		1724 1593 1313 1934 1715 1563 1508 1794	
Eas Electric	1828 1166 1160	1774 1503 2015 1958 2107 1501 1995 1371	
easy touch	1484	2194 1940 1773 2023 1944 1561 1398 1373	
ECG	1545 1412	2195 1959 1943 2022 1930 1507 1368 2149	
ECHOSONIC	1424	2087 2004 1845 1699 1372 1331 1265 1424	
Ecron	1215 1445	1347	
Edenwood	1166 1160	realme	1978
EDUK	1166	Rediffusion	1944 1564 2077
EKO 2022	2004 1891 2150 1899 2147 2077	Reflexion	1351 1915 1458 1916 1511 1489
Elbe 1234 1193	1159 1160 1135 1215 1184 1476	Regal	1166 1215
1185 1141 1126 1124 1116		RFT	1129 1136
Electric CO	1426	Roadstar	1215 1216 1126 1124
Electric Mirror	1579	ROKU 2160	2159 1699 2116 2158 2161 2127
electriQ	1166	RUBIN	2025
Electrohome	1159	S	
ELECTRON	2061 1911 2023	SABA	1974 1159 1975 1215 1135 1166
Elekta	1866 1545 1124	1730 1518	
Elektroland	1160	1424 1190 1216 1160	
Element Electronics	2069 1561 2159 1347 1958 2068	Sagem	1604 1473 1597
2070 1996		Saivod	1456 1455 1283
1338			

		Salora	1160 1412 1159 1166 1508 1420
		1828 1352	
Elemis	1159	1184 1376 1167 1161 2025 1457 1351 1211	
Elfunk	1135	1233 1501 1368 1298 2072 2037 1193 1991	
ELITELUX	2030 2022 2036	1622 1425 1346 1253 1222 1117 1110 1620	
Elta	1215 1126	1480 1476 1254 1135	

Emerson 1126	1601 1215 1480 1818 1951 1603	Samsung 1704 1701 1702 1734 1705 1708 1707 1735
E-motion	1489 1490 1491 1476	1709 1717 1700 1710 1711 2164 1715 1714
Emtronics	1564 2077	1716 1720 1721 1718 1722 1733 1719
Energy Sistem	2059 1980 1876 1553	Sandstrøm 1471 1530 1420
Engel	1925	Sansui 1503 2154 2147 2022 2109 1975 1229
Engel Axil	1925	Sanyo 1949 1159 1951 2159 2153 1952 1950 1955
ENGLAON	2109 2108 2110 2111	1402 1215 1953 1135 2151 1401 1216
ENIE	1424	
enox	1462 1347	Saturn 1929
Essentiel b 1110 1530	1166 1581 2199 1622 1412 1160	Scansonic 1790 1784
1347 1159 1149 2202 1511 1135		Sceptre 2187 1773 1943
eSTAR	2025	Schadler 1166 1160
Eternity	1489 2020 1490	Schaub Lorenz 1160 1159 1126 1215 1197 1540 1407 1412
Euroline	1215 1556 1126	1542 1268 1216 1189 1124 1141 1116 2064
Europa	1215 1126	1541 1539 1505 1350 1190 1184 1166 1137
Everton	1489	Schneider 1920 1503 1215 1159 1146 1160 1180 1482
EVOTEL	1258 1266	2199 2004 1581 1391 1126 1123 2064 1899
evvoli	1794 2202 1508	1739 1185 1183 1161 1135
F		SCHULTZ 1892
FAR	1160	Scientific Labs 1117
Fenner	1215 1126 1124	Scott 1159 1581 1390 1283
Ferguson	1462 1160 2089 1489	SEG 1159 1116 1462 1130 1184 1424 1135 1445
FFALCON	2199 1794	1552 1476 1346 1228 1215 1170 1138 1126
Fiblux	1166	Seiki 1563 2079 1958 2076 1564 2068 1313 2074
Finlux 1135 1126	1159 1160 1167 1166 1161 1215	2073 2066 1891 1865 2186 1966 1561
1828		Seizo 1564 2077 2079 2076 2074
First Line	1126 1215 1124 1216 1159	Sèleco 1171
Fluid	1561 1584 1563 2162 2066	Sencor 2145 1351 1412 1788 1424 1583 1540 1197
FOX	2025 1508 1351 1422	1545 1420
Fred.Olsen Cruise Lines	1277	
F&U	1166 1828 2030 2025 1160 2078	Senzu 2101 2098 2021 1788 2104 1860

2022		Sharp	1489 2017 1646 1654 2124 1652 1
Fujitsu	1678 1752 1677	338 1653	
Fujitsu Siemens	1383 1625 1752	1656 1647 1159 2125 1657 2020 1699 1160	
Funai	1600 1602 1159 1116 1601 1215	1655 1520 1898 2126 1519 2127 1888 2130	
1808 1752		2131 1658 1900 2143 2129 1689 1651 1649	
1160 1126 1603 1445 1124		1648 1650 2128	
FURRION	1941 1313 1942 1397	Shinco	1892
		Shivaki	2025 1549 1794 1258 2202 1124
G		Siemens	1752 1173
GEEPAS	1549	SIGCUS	1606
Gelhard	1351 1166	Silva Schneider	1160 1412 1420 1159 1179 1183
General	1197 1616	1528 1495	
General Electric	2196	1261 1212 1185 1447 1833 1346 1622 1529	
Gericom	1477	1526 1476 1456 1408 1407 1222 1209 1184	
gettco	1508 1207	1117 1620 1527 1459 1350 1268 1263 1227	
G-GUARD	1906	1226 1166 1135 1110	
GoGEN	1166 1160 1159 1828	SilverCrest	1159 1116 1135 1380 1166 1130
GoldStar	1443 1217 1180 1627 1284 1276	Sinotec	2145 1934
Goodmans	1215 1462 1725 1389 1159 1126	Sinudyne	1215 1190 1124 1110
1114 1113		SITRONIC	1424
1703 1555 1490 1489 1474 1256 1224 1184		SKY	2210 1389 1684 1225
1182 1124		Sky Media	1489 1479 1490 1491 1480 1467
Gorenje	1159	1389 1360	
Graetz	1867 1159 2199 2145 2025 1892	1241 1687 1684 1575 1574 1492 1478 1476	
1503 1269		1454 1446 1417 1416 1383 1348 1346 1257	
1135 1124 1215 1130 1126		1242 1225	
Grandin	1215 1159 1160 1443 1135 1424	Skyworth	2147 2145 2149 1683 1840 2150
1184 1126		2146 1106	
1124		Smartbook	2064
Gran Prix	1526 1528 1529 1527 1420	Smart Tech	2022 1503 2030
Grundig	1100 1206 1191 1195 1201 1199	SMARTVISION	1407 1187
1197 1836		Sogo	2064 1215 1931 1126
1846 1216 1202 1196 1101 1847 1184 1624		Sole	1629
1389 1102 2147 1189 1280 1159 1112 1104		Soniq	2098 2105 1891 2101 1944 1860
1620 1274 1210 1174 1141 1105		2104 1933	
		1861 2103 2102 2100 2099 2021 1932 1924	

	1922 1910 1899 1859 1850 1383 1260 1182
--	---

		Sony	1761 1753 1762 1776 1758 1770
		2190 1764	
Grunkel	2030 1503 2025 1159 2036 1931	1756 1765 1754 1760 1766 1763 1769 1757	
1464 1347		2191 1767 1768 1759	
1455 1393 1477 1463 1456 1135		SOS Remotes	1178 1177
		Soundcolor	1126 1215 1190 1116
H		Spectroniq	1893
Haier	1872 1877 1160 1891 1890 1544	Speler	1724
1297 1873		Splash Vision	1516
1837 1875 1841 2165 2189 2152 1520 1685		Standard	1404
2162 1547 1880 1882 1902 1874 1725 1684		Star	1124 1616 1573 1180
1495 1838 1519		Star General	1617
Hannspree	1400 1794 1575 1517	Star-Light	2022
Hanseatic	1166 1126 1634 1519 1221 1215	STARWORTH	1424
Hantarex	1438	Strato	1124 1539
HB	1216 1184 1116 1219 1190 1189	Strong	1471 2145 2198 1794 2199 2004
1540 1539		1945 2202	
1215 1137		SulpiceTV	1160 1835 1832 1827 1165 1159
Hisawa	1215	SunBriteTV	2187 1906
Hisense	2048 1536 1699 1338 2046 2050	Sungoo	1436
1906 1205		Sunkai	1215 1126 1351
1900 2054 1888 1203 1331 1330 2052 1898		Sunny	1892 1867 1476
1535 2160 1155 1204 1530 1333 1533 1531		Sunstech	1503 1447 1446 1283 1445 1456
1525 2053 1545 1532 1207 2065 2055 2049		1159 2025	
1905 1534 1501 1334 1332 1156 1149		1544 1258 1455 1294 1214 1160	
Hitachi	1160 1833 1159 1982 1166 1440 1	Supersonic	1503
828 1135		Supra	1939 1964 1424 1432 2145 1925
1439 1985 1984 1209 1983 1441 1988 1167		Supratech	1351 1349 1595 1571 1363 1362
1351 2202 2004 1986 1688 1519 1987 1974		1244 1547	
1969 1693		1365 1364 1228	
HKC	1946 1940 1925	SWEDX	1273
Höher	1159	Sweex	1351 1258 1238
homeX	1166 1836	Swisstec	1479 1417 1687 1446 1389 1684
Horizon	1160 1166 1167 1828 2025		

Horizont	2025 1215 1126 2147 1424	1478 1467
Humax	1513 1512 1515 1514	1575 1491 1416 1383 1348 1257 1225 1580
Hypson	1215 1159 1126 1216 1130	1574 1480 1466 1215
Hyundai 1135 1839	1215 1159 1126 1892 1124 1965	Synix 1969
1510 1216 1166 2091 2064 1899 1807 1783		Sylvania 1601 1997 1775 1563 2107 1943 1593 1397
1682 1616 1542 1509 1433 1313 1267 1160		1959 1958 1603 1503
I		Symphonic 1603 1601
IDHD	1160	Syntax-Brilliant 1886 1885 1887 1347
Ilekei	1783	T
iFFALCON	2202 2199	Tandberg 1344
Iiyama	2180	Targa 1380
i-Joy	1931 1258 1927 1503 1482	Tatung 1706 1630
Ikea	1795	Taurus 1408
Ikon	1549	TCL 1794 2199 2159 2209 2200 2197 2202 1699
Impecca	1397	2161 2208 2203 2201 1792 1731 1729 2205
Imperial	1271 1410 1187 1411	2204 1544 1159
Infiniton	2025 1864 1166	TCM 1124
Infinix	1975 1964	TD Systems 2083 2064 2035 1160 2034 1913 2033 2026
Ingelen	1126 1215	2072 1925 2038 2027 1999 1857 1222 1209
Inno Hit	1159 1130	2025 1161
Inovtech	1283	Teac 1460 1160 1812 1241 1899 1539 1965 1304
Insignia 2016 2120	1606 2116 2065 1605 1610 2117	1130
2119 1786		Techline 1159 1135 1184 1116
InterACTV	1171	Technical 1159 1135 1130 1160
Intertronic	1106	Technicolor 1563 1775 1997 1593 1397 1503
INTEX	1892	Technics 1669
Inves	2025 1931	Technika 1489 1490 1491 1241 1159 1304 1480 1446
Ipure	1587 1420 1352 1346 1233	1539 1492 1454 1344 1311 1160 1811 1497
Iris	2147	1420 1242
Irradio	1215 1124	Technisat 1152 1585 1136 1142 1107
ISIS	1160	

Iskra	1215 1126	Technisson	1126 1216 1215
ISP	1115	Technotrend	1580 1463
iSymphony	1715	Techwood	1159 1135 1166 1160 1116 1130 1 828 1112
itel	2147	TECO	1351
ITT	1160 1167 1159 1215 1729 1126	Telefunken	1160 1159 1166 1828 1179 1215 1 518 1190
1216 1195			1728 1222 1216 1167 1165 1135 1119
1191		Telestar	1447

J		Telesystem	1429 1424 1347 1184 1159
		Teletech	1159 1135 1116
		Telio	2024
	James	Tensai	1215 1219 1190
	Jay-Tech	Terra	1366 1297 1377 1143
	Jensen	Terris	1546 1545 1159
	JMB	Tesco	1489
	John Lewis	Tesla	2145 2030 1794 1215 2147 1899 1892 1583
	JTC		1549 2000 1917 1216 1190 2148 2025 1126
	JVC	Tevion	1490 1135 1489 1126 1613 1542 1 216 1215
	1661 1471		1546 1383 1208
	1828 2132 1668 1928 1664 2003 2001 1663	Thomson	1794 2199 1793 1729 1792 1728 1730 2200
	2159 1666 1836 1667 2004 1969 1940 1794		1731 2147 1727 2209 1634 1518 1146 2205
	1976 1665 1159 2145 1974 1724 1643 2006		2204 2203 1480 1392 1384 1345 1216 1190 1180
	1979 1975 1964 1948 1892 1691 1545	Tilevision	1249
JVL	2008 1849 2113 2105 2000	Tokai	2064 1135
K		Toshiba	1405 2096 1431 1956 1159 1586 1828 1409
KAGIS	2030 1975		1421 1971 2065 1166 1832 1827 1165 1418
Kalley	2202 1536		1957 1961 1958 1967 1428 1972 1970 1414
Karcher	1184 1124		2155 1962 1415 1413 1103 1960 1671 1440
Kendo	1159 1160 1116 1135 1166 1730 1215		1430 1215 1160
Kenmark	1113 1475		
Kenstar	1345 1387 1385		

Kenwood	1281	Trevi	1352 1457 1425 1258
Kernau	1864	Trilux	1412
KIANO	2025	Tristan Auron	2025
Kishu	1540	TruTech	1852
KIVI	2009	Tucson	1159
Kodak	2147	Turbo-X	1828 1160 2025 1931
Kogan 1406 2022	1432 1969 1545 2025 2147 1975	TV Star	2025 1503 1931
1891 1976 2031 1974 1917 1902 1424 2091		TWF	1613 1539
2032 1931 1925 1899 1892 1495			
Konka	2004 1788 1614	U	
Kopernikus	1423 1148	UMC	1489 1491 1490 1241 1479 1480
Kortek	1578	1446 1360	
Kotron	1223	1417 1687 1492 1467 1389 1257 1225 1684	
Kriminal Forsorgen	1214	1575 1574 1478 1476 1454 1416 1383 1348	
KTC	1583	1346 1242	
KUBO	1160 1166	United	1215 1126 1294 1258 1116 1159 1
KUNFT	1424 1160 1503 1166	347 1216	
		1135 1542 1452 1424 1931 1453 1445 1301	
L		1298 1124	
Laurus	1160	Universum	1128 1116 1159
Lazer	1160		
LCD	1259	V	
Legend	2019	Vanguard	1159
Lenco	1159 1855 1160 1811 1458 1628	VD Tech	1367
1581 1564		Vector	1283
1511 1495 1494 1489 1482 1298 1215		Veltech	1564 2074 1944 2077 2076
Lenuss	1713 1723 1712	Veseg	1135
Level	1550	Vestel	1160 1159 1166 1135 1165 1835 1
LG	1280 1278 1892 1275 1904 1318	832 1827	
1328 1313		1116 1828 1130 1833 1167 1209 1161 1472	
1868 1326 1277 1314 1281 1899 1312 1324		1222 1170 1169 1168 1164 1158	
1878 1276 1870 1316 1310 1329 1443 1188		Vidao	1280
1300 1274 1296 1292 1896 1315 1302 1186		VIDEOCON	1387 1545 1485
1897 1279 1284 1883 1306 1291 1317 1289		Vidoseven	1389
		ViewSonic	1825 1143 1849 1843 1992 1824

1288 1282 1327 1180 1895 1285 1894 1325	1144 2156
1217 1303 1290 1903 1621 1568 1345 1299	1695 1844 1328 1842 1822 2180 2120 2084
1215	1821 1598 2144 2086 1858 1823 1745 1696
Lifetec	1522 1225
1215 1126	
LIN	Viore
2197	1715 1724 2162
Linsar	Vision
1161 1167	1215
1160 1159 1989 1979 1892 1166	Vision Plus
2010	1489 1491 1935 2192 2025 1928
Listo	Visitech
1159 1135 1160 2025 2030	1160 1166
Lloyd	Vispera
1536 1921 2150 1892 1338	1564 1944
Loewe	Visual Innovations
1802 1139	1491
1118	VIVAX
	1396 1269 1342 2197 2012 1476
	1187 2071
	2011 1543 1931 1496 2025 1867 1525 2204
	1947 1545 1351 1151 2036 1612 1569 1562

		1527 1432 1423 1407 1399 1270 1194 1148
		1787 1538 1506 1422 1350 1190 1124
	Vivid	2064
	Vizio	1335 1879 1308 1336 1339 1907 1340 1309
		1901 1884 1341 1442 1869 1572 1252 1522
	Vogells	1388
	VOX	1160 1968 1432 1166 2192 1892 1830 1159
		1434 1147
	Voxson	1126 1124 1216 1215
	Vsmart	1990
	VU	2052
	W	
	Waltham	1159 1160 1135
	WALTON	2121
	Watson	1126 1215 1467 1159 1153 1116
	WE.	2058

	WELLINGT ON	1160
	Westinghous e	1771 2186 2159 1724 1561 2187 1863 2065
		2188 1564 1993 1944 2189 2075 2019 1262
		2077 2087 2047 1334
	Wharfedale	1135 1124
White-Westinghouse 1134 1108		
Wilson		1476
Windsor		1160 1116
Wissen		1908
Wolf Power		1929
World of Vision		1215
X XD		1160
Xiaomi		2211
Xoro		1864 1854 2091 1583 1351 1912 1853 1347
Y Yalos		1613
Yamaha		1439
YASIN		1925
Yoko		1159
Z Zenith		1791
Zephir		2064

Contact Information

- Revox Deutschland GmbH | Am Krebsgraben 15 | D-78048 VS-Villingen | Tel.: +49 7721 8704 0 | info@revox.de | www.revox.com.
- Revox (Schweiz) AG | Wehntalerstrasse 190 | CH-8105 Regensdorf | Tel.: +41 44 871 66 11 | info@revox.ch | www.revox.com.
- Revox Handels GmbH | Josef-Pirchl-Straße 38 | AT-6370 Kitzbühel | Tel.: +43 5356 66 299 | info@revox.at | www.revox.com.

Documents / Resources

	REVOX C100 Multiuser Remote Control [pdf] Instructions C100 Multiuser Remote Control, C100, Multiuser Remote Control, Remote Control, Control
---	---

References

-  [Revox - originalgetreue Studio-Klangqualität erleben](#)
- [User Manual](#)