

REXING V1 Dash Camera User Guide

Home » Rexing » REXING V1 Dash Camera User Guide The state of the stat



V1

Quick Start Guide

Contents

- 1 Overview
- 2 What's in the box
- 3 Camera Overview
- 4 Installation
- **5 Basic Operation**
- 6 Documents /

Resources

- 6.1 References
- **7 Related Posts**

Overview

Thank you for choosing RACING! We hope you love your new product as much as we do.

If you need assistance or have any suggestions to improve it, please contact us. You can reach us via care@rexingusa.com or call us at (203) 800-4466. Our support team will respond to you as soon as possible. Always a surprise in Rexing. Check us out here.


https://www.facebook.com/rexingusa/

https://www.instagram.com/rexingdashcam/

https://www.rexingusa.com/support/registration/




What's in the box

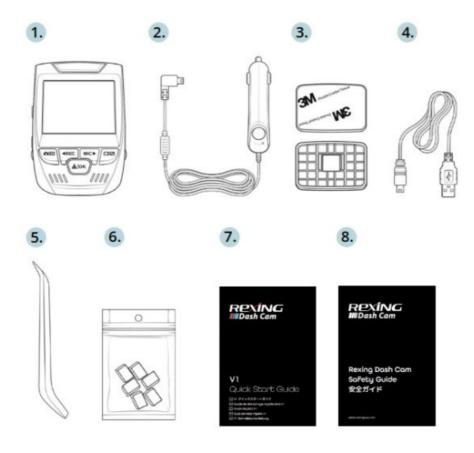

- 1. Rexing V1 Dash Cam
- 2. Car Charger
- 3. Dash Cam Mount Plate & 3M Adhesive
- 4. Mini-USB Cable
- 5. Cable Management Tool
- 6. Cable Clips©
- 7. V1 Quick Start Guide
- 8. V1 Safety Guide

1.

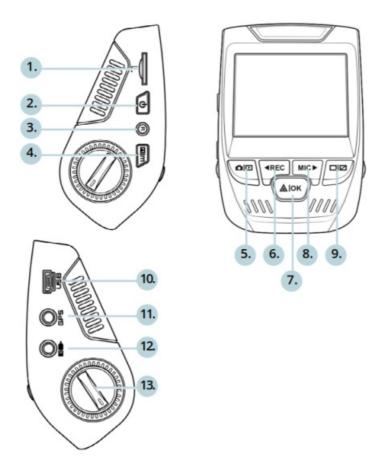

Micro SD Card Slot

- 2. Power Button
- 3. Reset Button
- 4. Menu Button
- 5. Mode Button
- 6. REC (Record) Button *
- 7. OK (Confirm) Button **
- 8. MIC (Microphone) Button ***
- 9. Screen Button
- 10. Mini-USB Port
- 11. GPS Logger Port
- 12. Rear Camera Port (Not Support)
- 13. Lens Angle Adjustment
- * The Camera is recording when the LED is flashing red.
- ** The Camera is recording when the LED is flashing red. The device charges or is powered on when the LED is solid blue.
- *** The device is charging or powered on when the LED is solid blue.


Installation

Step 1: Install the Dash Cam

Place the 3M adhesive on the mount and properly orient the mounting straight to the roof and hood line of the vehicle. Important! Ensure the T-interlock on the Mount is oriented in the correct direction (as shown below).

Firmly press the mount onto the windshield. Wait at least 20 minutes before mounting the camera.


Orientation mount as shown

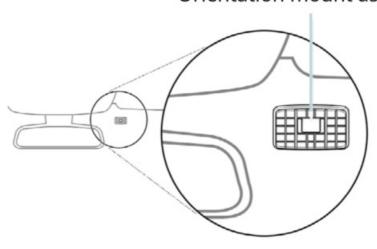

Step 2: Insert the Memory Card

The Rexing V1 accepts [Class 10/ UHS-1 or higher] Micro SD memory cards up to 256 GB. You will need to insert a memory card before you can begin recording. Before inserting or removing a memory card, first ensure you've powered down the device.

Gently push the memory card in until you hear a click, and allow the spring release to push the card out.

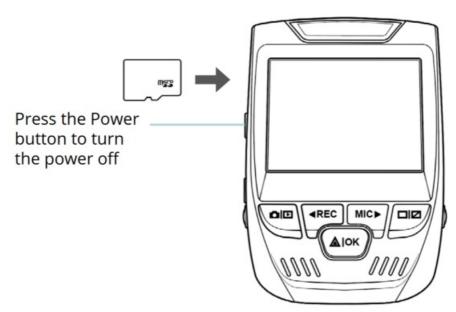

Step 3: Power the Camera and Format the Memory Card

Power the camera by connecting the charger to the car cigarette lighter and camera.

To ensure the V1 records to your memory card properly and without error. Before you start using a new memory card, you must format the card within the camera using the

format function. Always backup important data stored on the memory card before formatting.


To format the memory card, make sure you have inserted your memory card, then turn on the device by connecting to a power source. Press REC to stop recording. Then press the MENU button twice to enter the System Setup Menu. Use the REC and MIC buttons and go to the Format setting. Press the OK Button to confirm the selection.

You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin recording automatically the next time it is powered on.



Step 4: Installing the Camera onto the Windshield

Place the camera on the mount and carefully route the power cable around the windscreen and tuck in under the trim. Plug the Car Charger Cable into a 12V DC power outlet or the car cigarette lighter. Connect car charger to the camera. The camera will auto-start the recording once powered on.

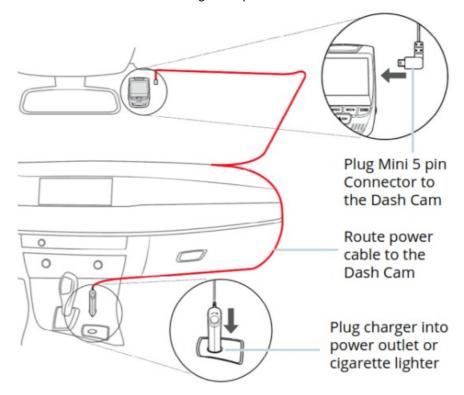


Basic Operation

Device Power

The device is automatically powered on when plugged into a 12V accessory socket or cigarette lighter and receives a charge (i.e.: the vehicle is started.)

To turn the device on manually, press and hold the POWER button until the welcome screen appears. The camera will automatically start recording when powered on.

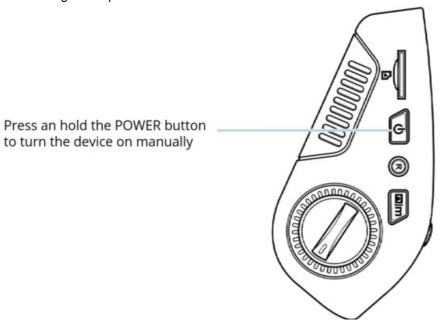

Menu Settings

Power the camera on. If the camera is recording, press the REC button to stop recording. Press the MODE button and toggle to the desired mode.

Press the MENU button once to enter the settings menu for a Mode. Press the MENU button twice to enter the System Settings.



Press the Mode button and toggle to the desired Mode



The camera automatically start recording when powered on

Video Playback

Playback of videos can be done on the device or a computer. Also, if you have purchased a Rexing GPS Logger you may playback the recordings in a specialized application.

To playback, a video on the device, toggle to the Playback mode. Use the REC and MIC buttons to toggle to the desired video. Press the OK button to play.


Video Recording

The camera will automatically start recording when the device receives a charge. The LED lights and the red dot will blink when the device is recording. Press the REC button to stop recording.




Control playback with these buttons

During playback use the OK (pause), MIC (fast forward) and REC (rewind) buttons to control the video playback. To playback, a video on the computer either use an SD card adapter or connects the device to the computer directly using the USB to Mini B 5pin male cable.

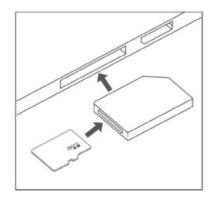

To playback, a video using USB to Mini B 5pin male cable, connect the USB to Mini B 5pin Male Cable to the device and the USB connector to the computer. After the device powers up, press the OK Button to select Mass Storage. On the computer, navigate to the device drivers. The videos are stored at: \CARDV\ MOVIE. Select the video to playback.

To playback, a video using an SD card adapter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer.

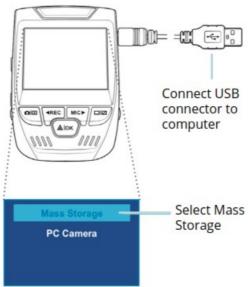

Parking Monitor

Connect the dashcam to the smart hardwire kit to activate the parking monitor function (Need to purchase the Smart Hardware Kit separately. ASIN: B07RN24B7V) Please visit support.rexingusa.com to watch a video tutorial.

Wi-Fi Connect

Download the "Rexing Connect" app from the App Store/Google Play Store.



- 1. To access or exit the Wi-Fi feature, hold down OK.
- 2. Open Wi-Fi settings on your phone, find "SSID: B50 _ XXXX" from the list, tap to connect. (Default password: 12345678)
- 3. Open the Rexing Connect app, tap "Connect to enter the real-time video streaming page.
- 4. Once connected, the dash cam screen will switch to the camera view and will display a "Wi-Fi Connect" message.

Using the Rexing Connect app, you can view a live preview of the dashcam screen, start/stop recording, as well

as view and save your captures with your mobile device.

For further instruction regarding the Wi-Fi Connect feature, please visit www.rexingusa.com/wifi-connect/.







GPS Logger

(Need to purchase separately. ASIN: B07BL4NCMD)

When connected to the camera, it will record the speed and location of your vehicle as you drive.



You can then access this information while playing back your recordings using the GPS Video player (For Windows and Mac, available at <u>rexingusa.com</u>).

Press the MENU button twice and enter the System Settings. Toggle to the GPS Speed Unit setting and select your preferred speed unit.



After a GPS signal is found, the screen icon will turn from blue to green. Please visit **_gpsa.rexingusa.com** to watch a video tutorial.



Taking Photos


To take a photo, stop video recording and toggle to the Photo Mode. Press the OK button to take a photo. To view a photo, stop video recording and toggle to the Playback Mode.



Press the REC and MIC Buttons to toggle through your photos.

To delete a photo, stop video recording and toggle to the Playback Mode and toggle through the videos and photos to the one you want to delete.

Press the MENU button once and toggle to the Delete option. Press the OK Button and select Delete Current or Delete All.

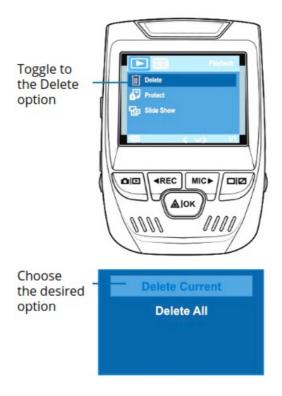

FCC ID: 2AW5W-V1P

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



MADE IN CHINA

Documents / Resources



REXING V1 Dash Camera [pdf] User Guide V1 Dash Camera, V1, Dash Camera

References

- O GPS Player Type A
- Rexing USA | Your Roadside Eyewitness
- O Product Support | Rexing USA
- Mash Cams from Rexing USA Top Rated Front, Rear and Internal facing Dash Cameras w/ GPS, Wifi
 Support and more.
- Wi-Fi Connect
- O Yuhe Sun (@rexingdashcam) Instagram photos and videos
- Rexing USA

