



REXING V1P-4K UHD Front and Rear Dash Cam User Guide

[Home](#) » [Rexing](#) » REXING V1P-4K UHD Front and Rear Dash Cam User Guide 

Contents

[1 REXING V1P-4K UHD Front and Rear Dash Cam Overview](#)

[2 What's in the box](#)

[3 Camera Overview](#)

[4 Screen Icons](#)

[5 Installation](#)

[6 Basic Operation](#)

[7 Menu Settings](#)

[8 Video Playback](#)

[9 Video Recording](#)

[10 Parking Monitor](#)

[11 Wi-Fi Connect](#)

[12 GPS Logger](#)

[13 Taking Photos](#)

[14 Documents / Resources](#)

[14.1 References](#)

[15 Related Posts](#)

REXING

REXING V1P-4K UHD Front and Rear Dash Cam



Overview

Thank you for choosing REXING!

We hope you love your new products as much as we do. If you need assistance, or have any suggestions to improve it, please contact us.

Mail: care@rexingusa.com

Phone: (877) 740-8004

Our support team will respond you as soon as possible.

Always a surprise in Rexing.

Check us out here

- <https://www.facebook.com/rexingusa/>
- <https://www.instagram.com/rexingdashcam/>
- <https://www.rexingusa.com/support/registration/>
- <https://www.rexingusa.com/support/product-support/>



Facebook



Instagram



Site



Product Support




What's in the box




1. Rexing V1 P-4K Dash Cam
2. Car Charger
3. Mount Plate & 3M Adhesive
4. Mini-USB Cable
5. Rear Camera
6. Cable Management Tool
7. Cable Clips®
8. Quick Start Guide
9. Safety Guide

Camera Overview

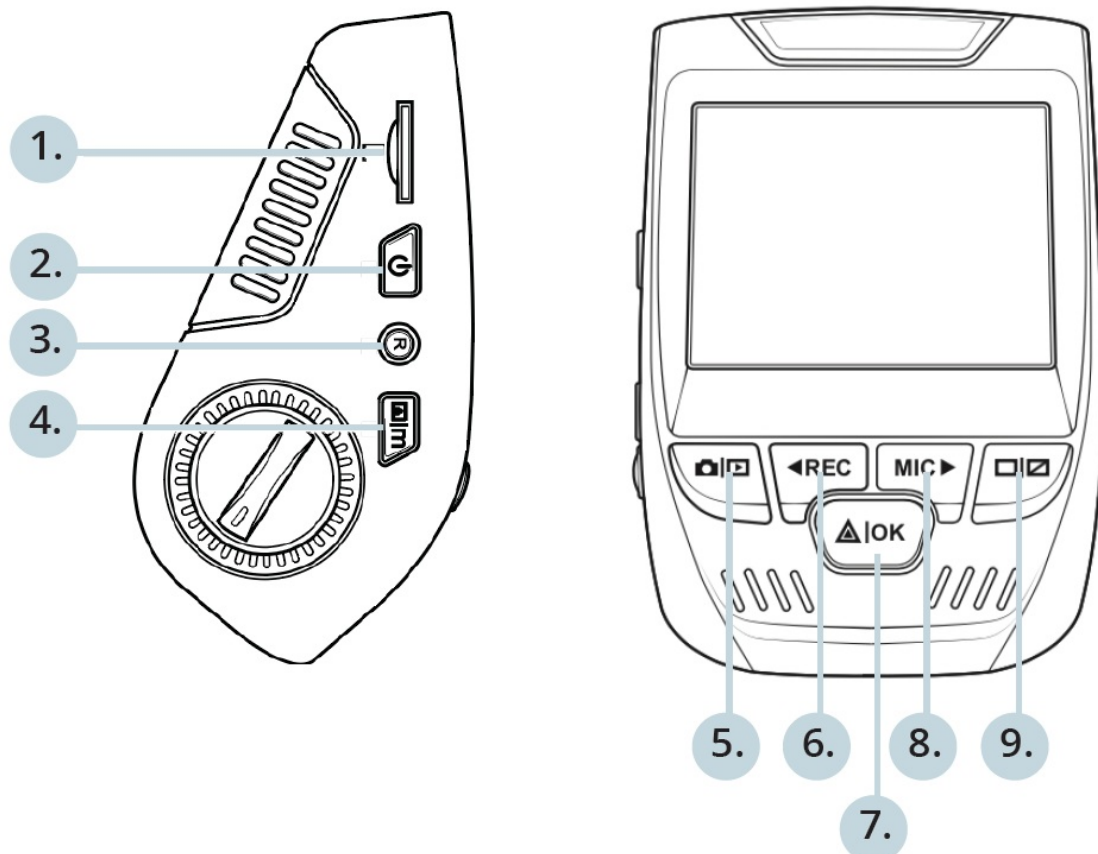

1. Micro SD Card Slot
2. Power Button
3. Reset Button
4. Menu Button
5. Mode Button
6. REC (Record) Button*
7. OK (Confirm) Button **
8. MIC (Microphone) Button ***
9. Screen Button

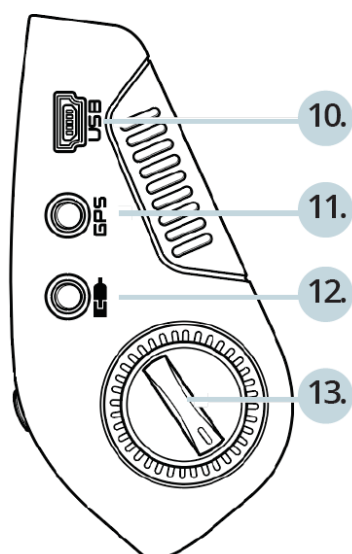

10. Mini-USB Port
11. GPS Logger Port


12. Rear Camera Port
13. Lens Angle Adjustment


*The Camera is recording when the LED is flashing red.

** The Camera is recording when the LED is flashing red. The device charging or powered on when the LED is solid blue.

*** The device is charging or powered on when the LED is solid blue.

Screen Icons

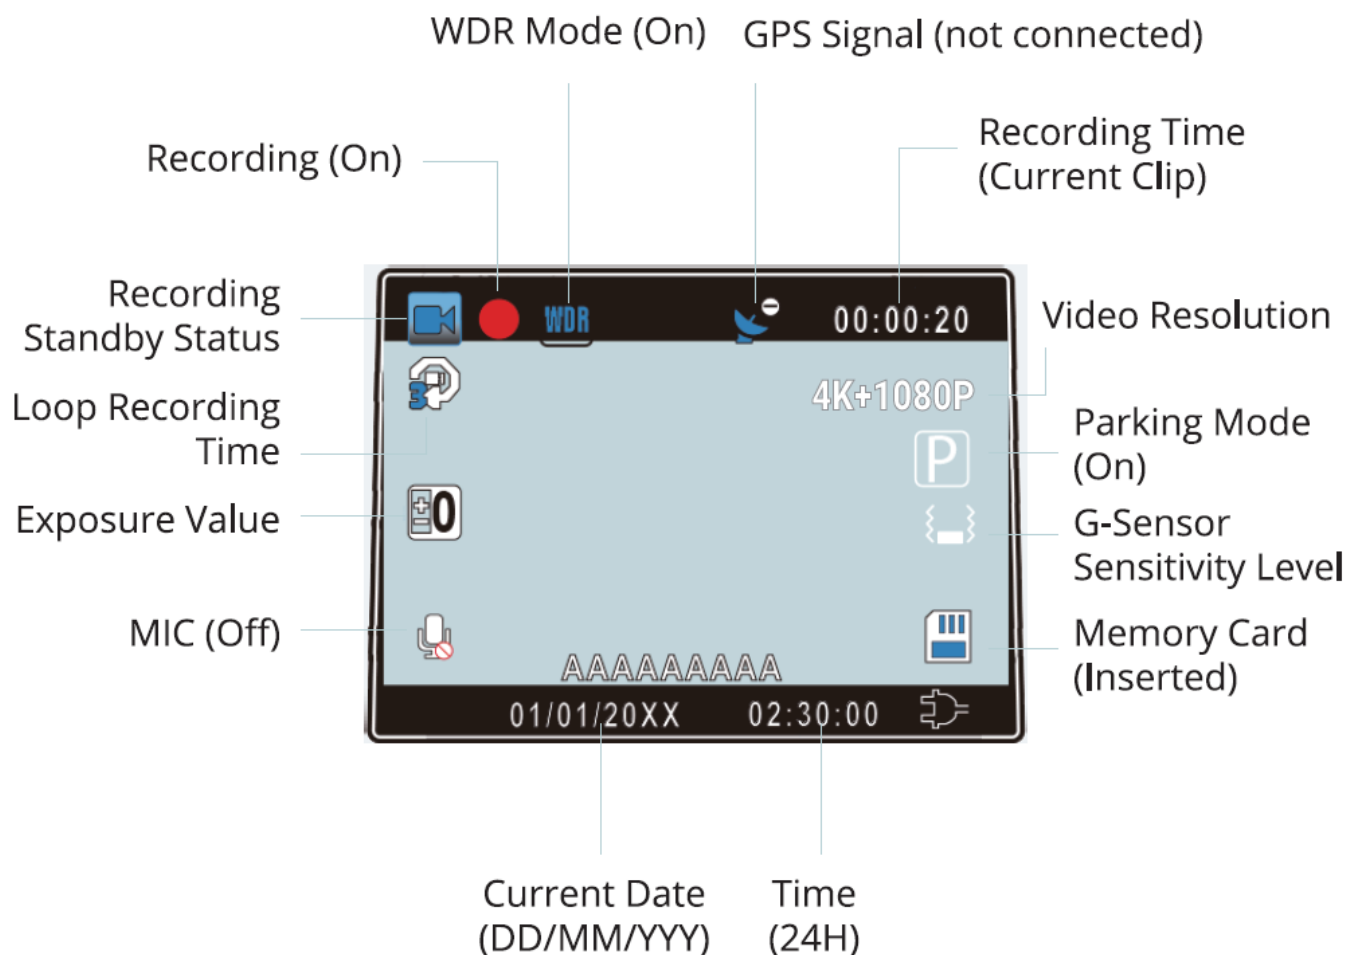


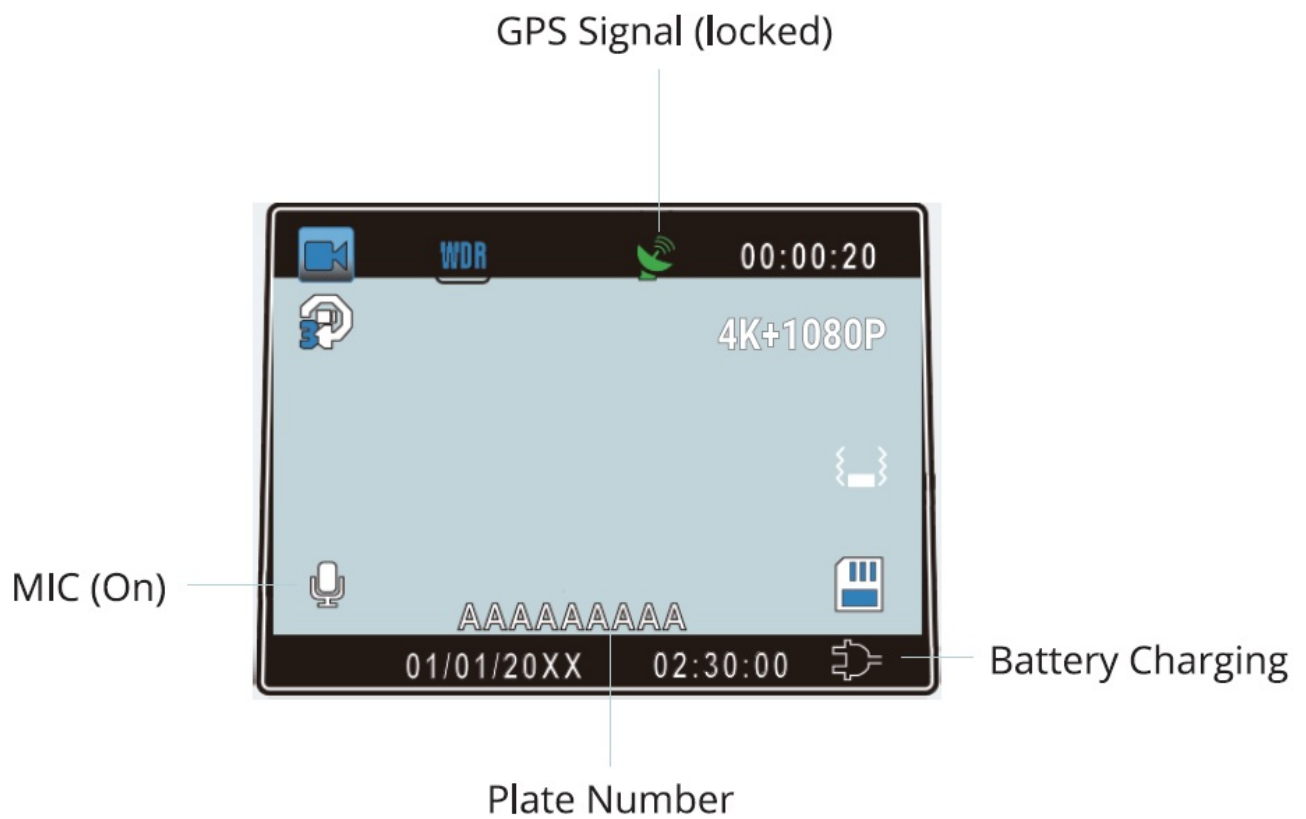

Installation

Step 1: Install the Dash Cam


Place the 3M tape on the Mount and properly orient the Mount square to the roof and hood line of the vehicle. Important! Ensure the T-interlock on the Mount is oriented in the correct direction. Firmly press the Mount onto the windshield. Wait at least 20 minutes before mounting the camera.

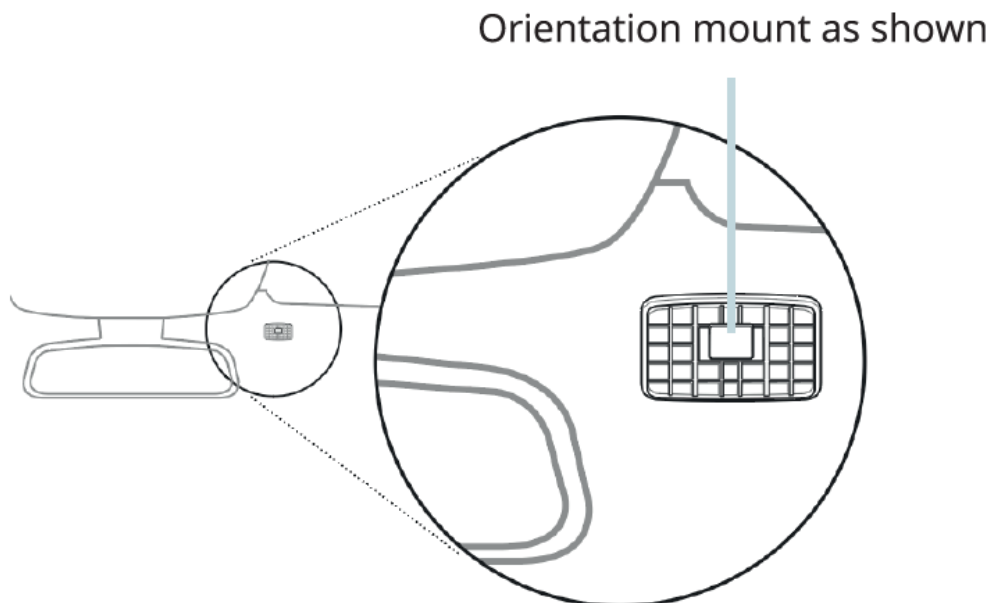

Step 2: Insert the memory Card

The Rexing V1 P-4K accepts [Class 10/ UHS-1 or higher] Micro SD memory cards up to 256GB. You will need to insert a memory card before you can begin recording. Before inserting or removing a memory card, first ensure you've powered down the device.

Gently push the memory card in until you hear a click, and allow the spring release to push the card out.

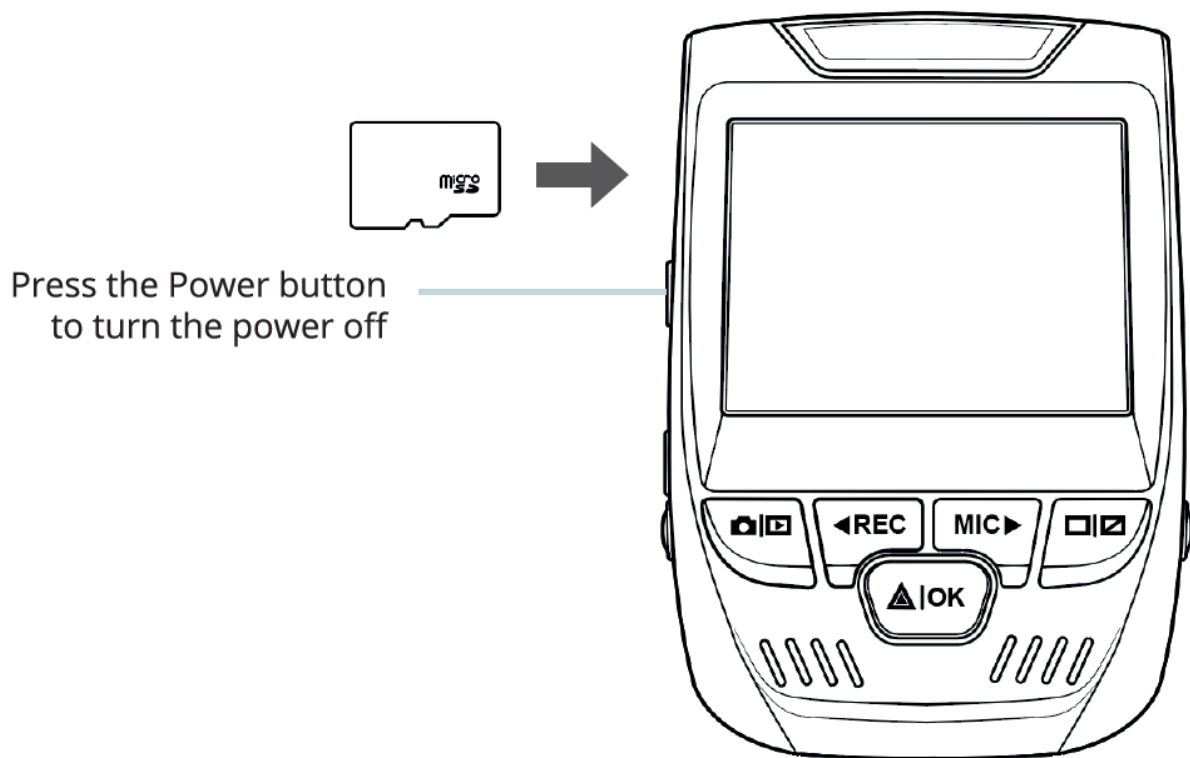


Step 3: Power the Camera and Format the memory Cord

Power the camera by connecting the charger to the car cigarette lighter and camera.

To ensure the V1 P-4K records to your memory card properly and without error. Before you start using a new memory card, you must format the card within the camera using the format function. Always backup important data stored on the memory card before formatting.

To format the memory card, make sure you have inserted your memory card, then turn on the device by connecting to a power source. Press REC to stop recording. Then press the MENU button twice to enter the System Setup Menu. Use the REC and MIC buttons and go to the Format setting. Press the OK Button to confirm the selection.

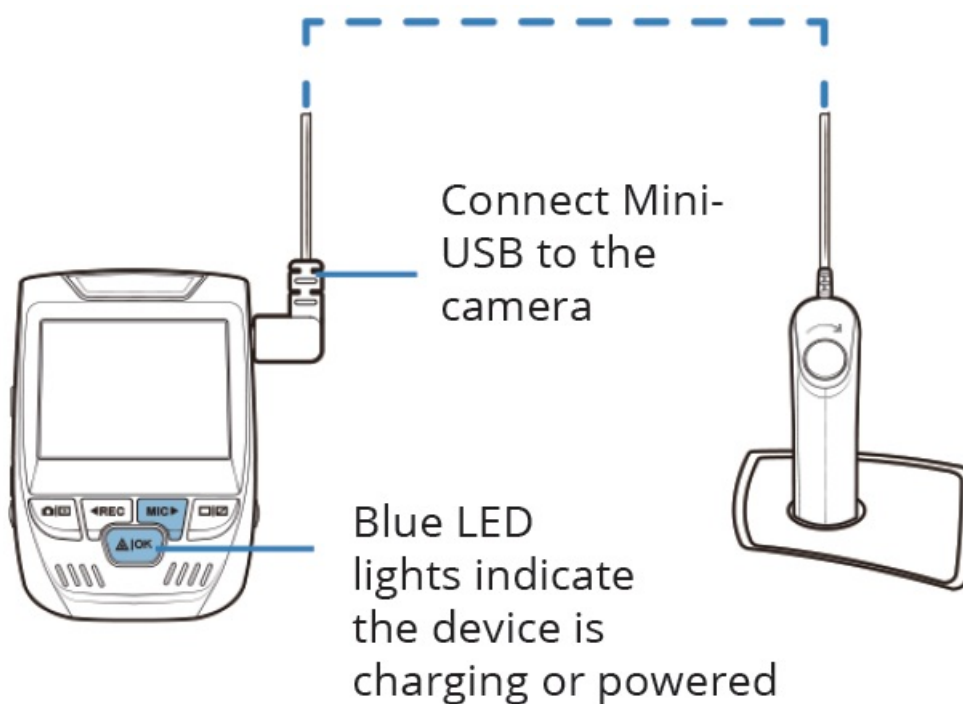


You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin recording automatically the next time it is powered on.

Press the Menu button twice




Press the OK button to
confirm formatting
the card

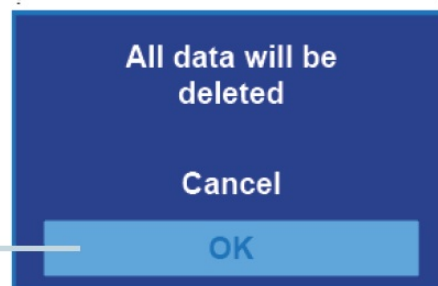


Step 4: Mount the Rear Camera

Mount the rear camera as shown below. Use the provided rear camera cable to connect the rear camera to the front camera.

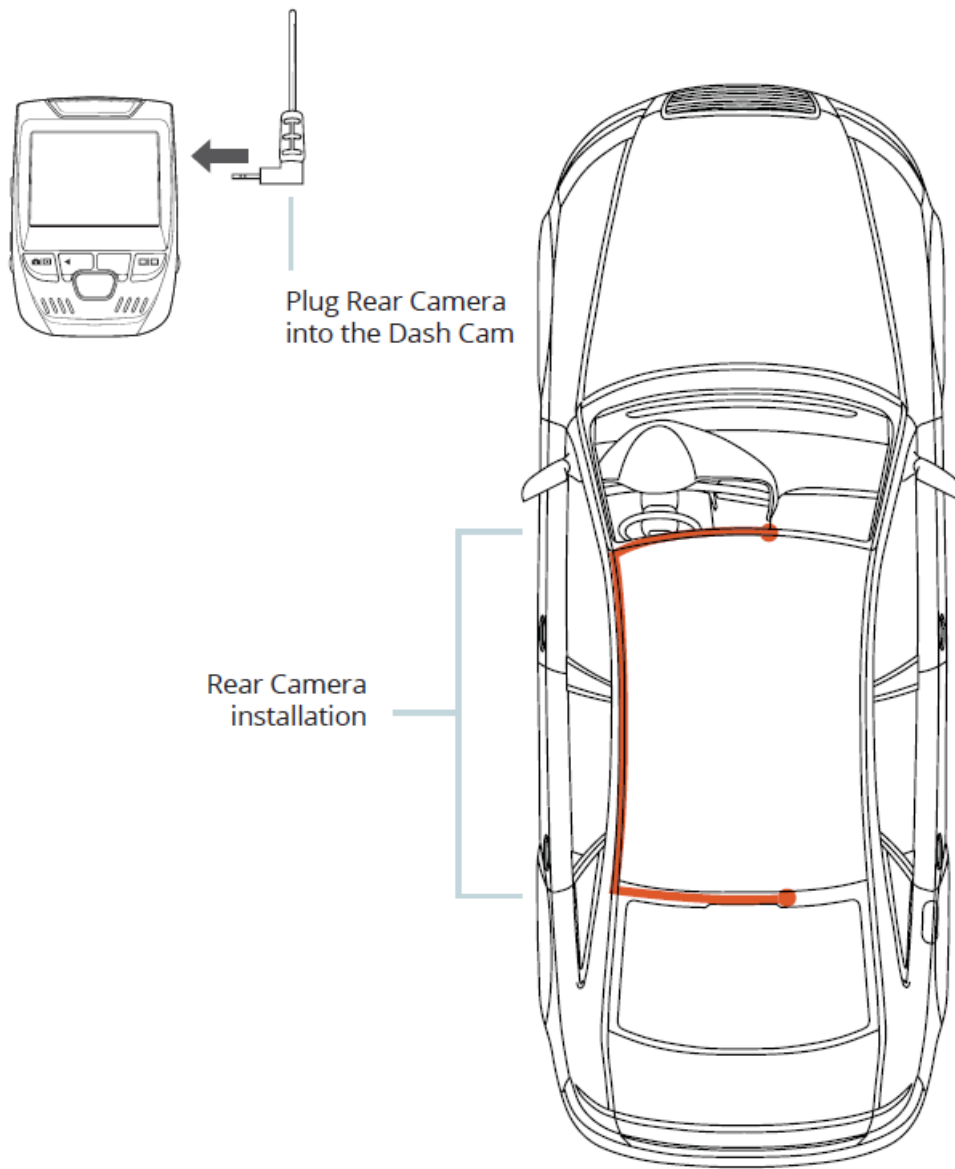

Step 5: Installing the Camera onto the Windshield

- Place the camera on the mount and carefully route the power cable around the windscreen and tuck in under the trim.
- Plug the Car Charger Cable into a 12V DC power outlet or the car cigarette lighter.
- Connect car charger to the camera. The camera will auto-start recording once powered on.

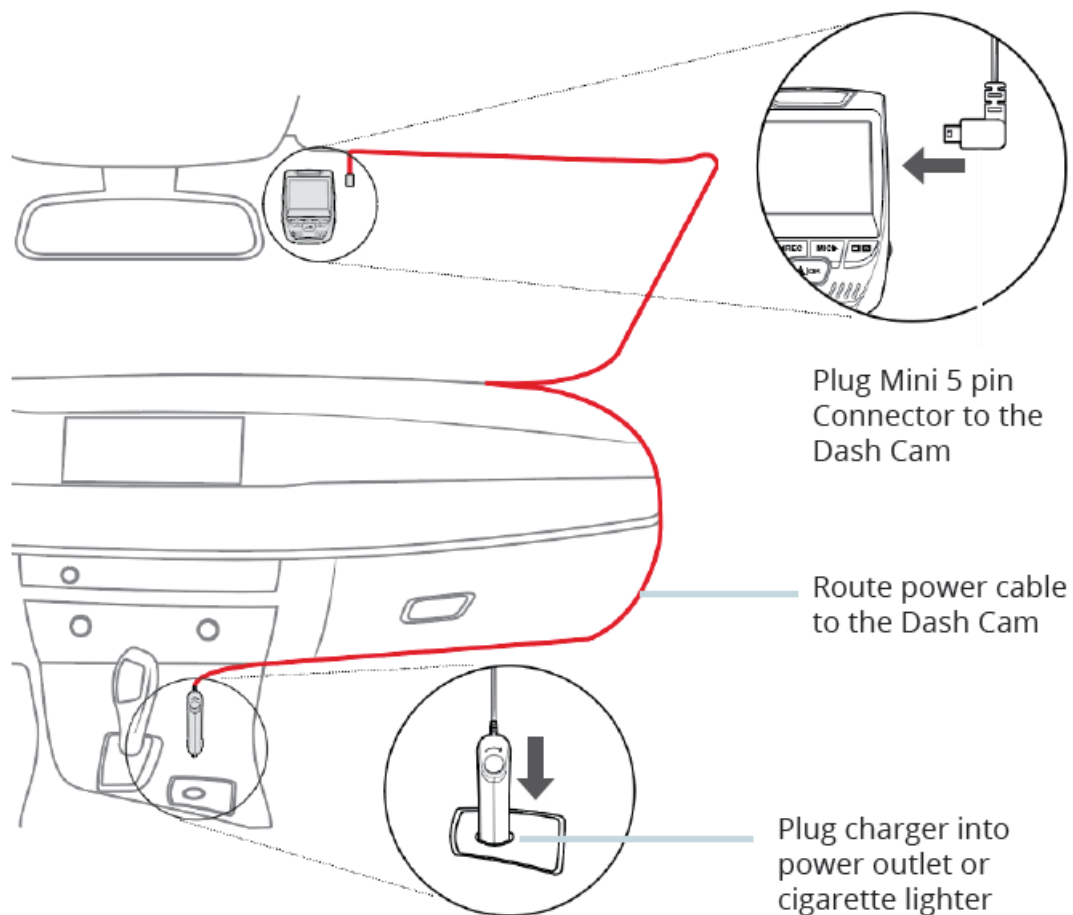


Basic Operation

Device Power

The device is automatically powered on when plugged into a 12V accessory socket or cigarette lighter and receives a charge (i.e.: the vehicle is started.)

To turn the device on manually, press and hold the **POWER button** until the welcome screen appears. The camera will automatically start recording when powered on.

Press an hold the POWER button to turn the device on manually

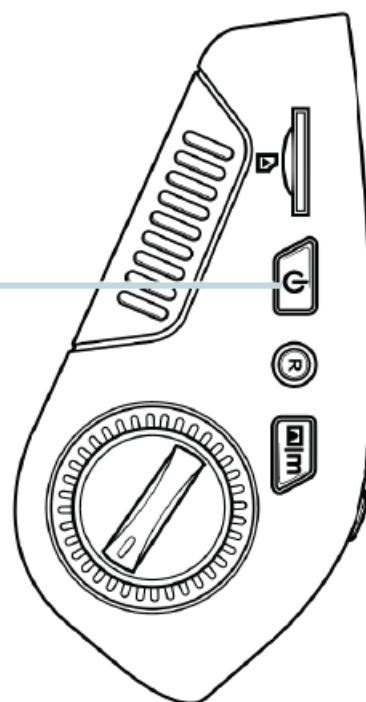

Menu Settings

Power the camera on. If the camera is recording, press the REC button to stop recording. Press the MODE button and toggle to the desired mode.

Press the MENU button once to enter the settings menu for a Mode. Press the MENU button twice to enter the System Settings.



Press the Mode button and toggle to the desired Mode



The camera automatically start recording when powered on

Video Playback

Playback of videos can be done on the device or a computer. Also, if you have purchased a Rexing GPS Logger

you may play back the recordings in a specialized application.

To Play Back a Video on the device toggle to the Playback mode. Use the **REC** and **MEC** buttons to toggle to the desired video. Press the **OK** button to play.


Video Recording

The camera will automatically start recording when the device receives a charge. The LED lights and the red dot will blink when the device is recording. Press the **REC** button to stop recording.




During playback use the **OK** (pause), **MIC** (fast forward) and **REC** (rewind) buttons to control the video playback. To playback a video on the computer either use an SD card adapter or connect the device to the computer directly using the USB to Mini B 5pin male cable.

To playback a video using an SD card adapter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer.

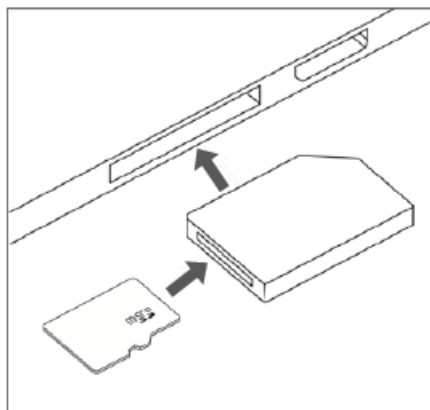

To playback a video using USB cable, connect the USB Cable to the device and the computer. After the device powers up, press the **OK** Button to select Mass Storage.

On the computer, navigate to device drive. The videos are stored at: \CARDV\ MOVIE. Select the video to playback.

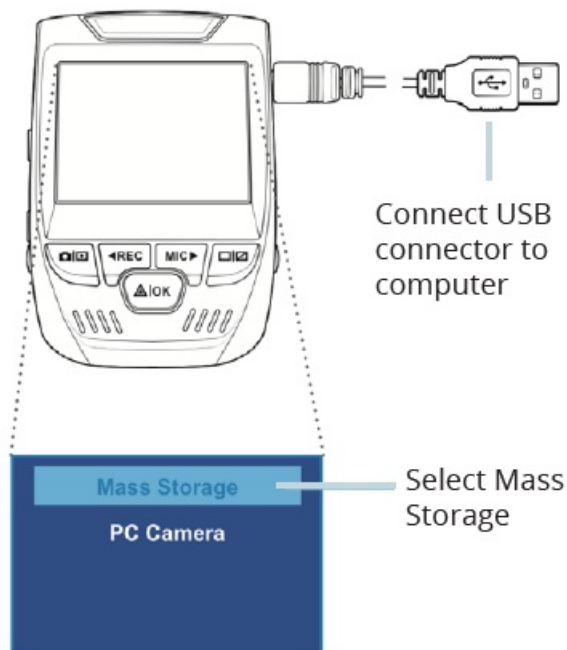

Parking Monitor

Connect the dash cam to the smart hardware kit to activate the parking monitor function (Need to purchase the smart hardware kit separately).


Please visit support.rexingusa.com to watch a video tutorial.

Wi-Fi Connect

Download “Rexing Connect” app from the App Store/Google Play Store.



1. To access or exit the Wi-Fi feature, hold down **OK**
2. Open Wi-Fi settings on your phone, find “SSID:B50XXXx” from the list, tap to connect. (Default password: 12345678)

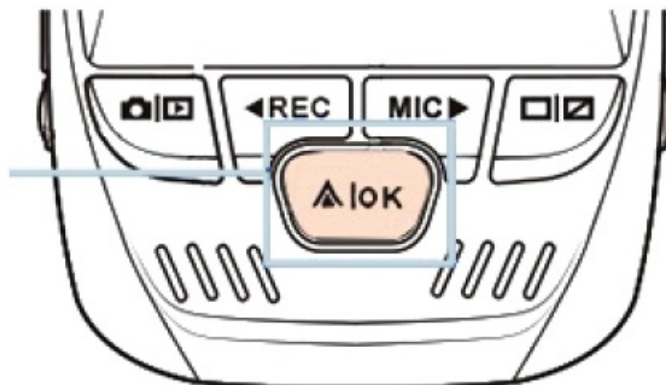

3. Open the Rexing Connect App, tap “Connect to enter realtime video streaming page.
4. Once connected, the dash cam screen will switch to the camera view and will display “Wi-Fi Connect” message.



Using the Rexing Connect app, you can view a live preview of the dash cam screen, start/stop recording, as well as view and save your captures with your mobile device.

For further instruction regarding the Wi-Fi Connect feature, please visit www.rexingusa.com/wifi-connect/.



GPS Logger

(Need to purchase separately)

When connected to the camera, it will record the speed and location of your vehicle as you drive.

GPS Signal
(not connected)



You can then access this information while playing back your recordings using the GPS Video player (For Windows and Mac, available at rexingusa.com).

Press the **MENU button** twice and enter the System Settings.

Toggle to the GPS Speed Unit setting and select your preferred speed unit.

GPS Signal
(active)



After a GPS signal is found, the screen icon will turn from blue to green.

Please visit gpsa.rexingusa.com to watch a video tutorial.

Taking Photos

To take a photo, stop video recording and toggle to the Photo Mode. Press the OK Button to take a photo.

Toggle to the Playback mode and select a photo to view




To view a photo, stop video recording and toggle to the Playback Mode. Press the REC and MIC Buttons to toggle through your photos.

Toggle to the Delete option



To delete a photo, stop video recording and toggle to the Playback Mode and toggle through the videos and photos to the one you want to delete. Press the MENU button once and toggle to the Delete option. Press the OK Button and select Delete Current or Delete All.


Choose the desired option

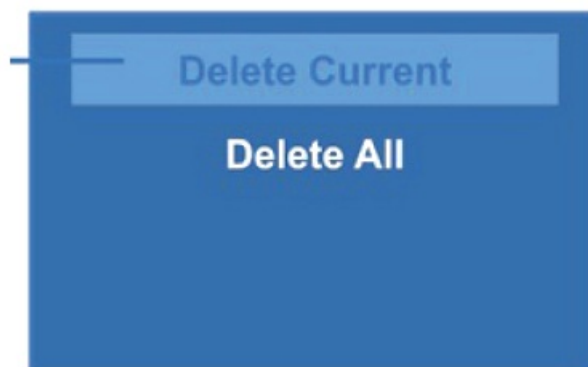




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
 - 2. this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

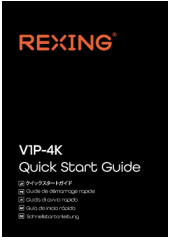Documents / Resources

	<p>REXING V1P-4K UHD Front and Rear Dash Cam [pdf] User Guide V1P-4K UHD, Front and Rear Dash Cam, Rear Dash Cam, V1P-4K UHD, Dash Cam, Cam</p>
---	--

References

-  [GPS Player Type A](#)
-  [Rexing USA | Your Roadside Eyewitness](#)
-  [Product Support | Rexing USA](#)