



REXING V5 3-Channel Dash Camera User Guide

[Home](#) » [Rexing](#) » REXING V5 3-Channel Dash Camera User Guide 

Contents

- [1 REXING V5 3-Channel Dash Camera](#)
- [2 Overview](#)
- [3 What's in the box](#)
- [4 Camera Overview](#)
- [5 Installation](#)
- [6 Basic Operation](#)
- [7 GPS Logger](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



REXING V5 3-Channel Dash Camera



Overview

Thank you for choosing REXING! We hope you love your new product as much as we do. If you need assistance, or have any suggestions to improve it, please contact us. You can reach us via care@rexingusa.com or call us at (203) 800-4466. Our support team will respond you as SOon as possible. Always a surprise in Rexing. Check us out here.

 
<https://www.facebook.com/rexingusa/>

<https://www.instagram.com/rexingdashcam/>

<https://www.rexingusa.com/support/registration/>


<https://www.rexingusa.com/support/product-support/>

What's in the box

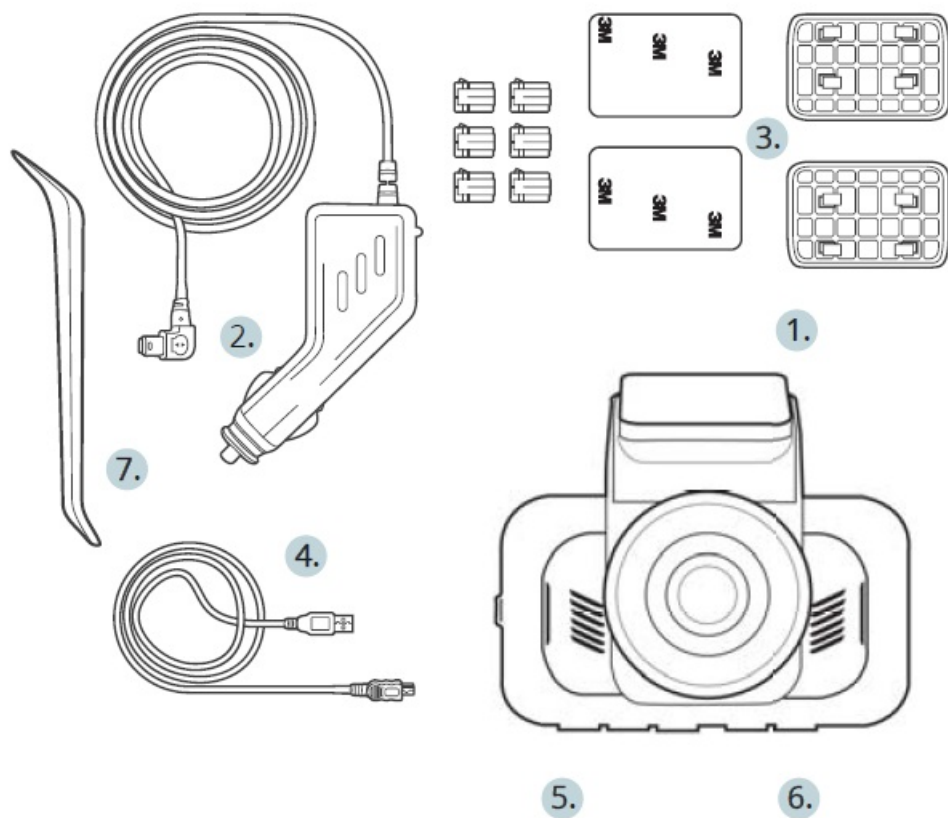


1. Rexing V5 Dashboard camera
2. Car Power Connector (12ft)
3. 3M Adhesive Mount
4. USB Cable
5. User Manual
6. Safety Guide
7. Cable Management Tool

 Camera Overview

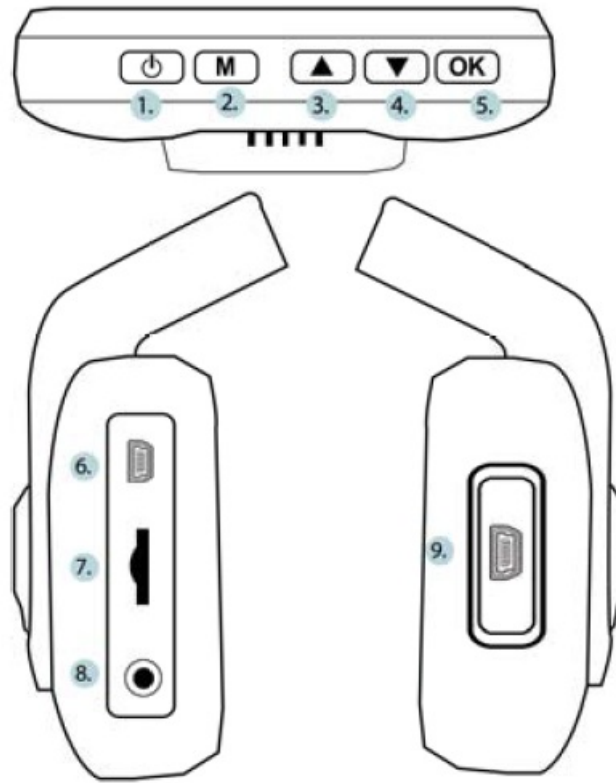


1. Power Button/Screen Toggle Button
2. Menu Button/ Mode Button
3. Up Navigation Button / Emergency Lock Button
4. Down Navigation Button
5. OK (Confirm) Button / Record Button
6. USB Charging Port
7. Micro SD Card Slot
8. Rear Camera Port (Rear camera need to purchase separately)
9. Cabin Camera Port(Cabin camera need to purchase separately)

 Screen Icons

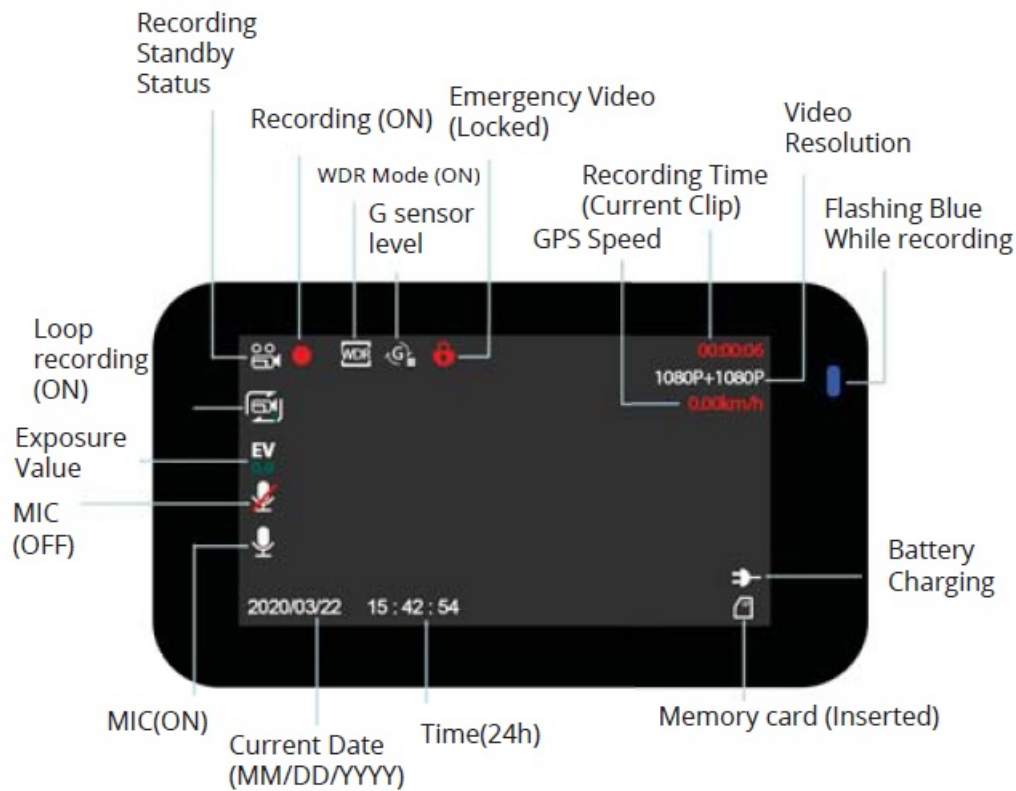


Installation

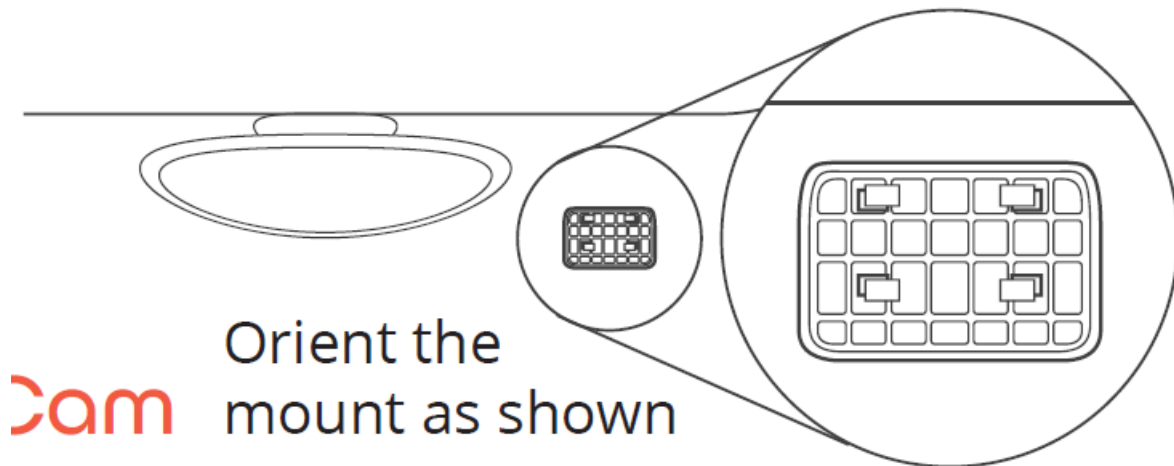 

Step 1: Install the Dash Cam

 Place the 3M tape on the Mount and properly orient the Mount square to the roof and hood line of the vehicle. Important! Ensure the T-interlock on the Mount is oriented in the correct direction. Firmly press the Mount onto the windshield. Wait at least 20 minutes before mounting the camera. On the illustration Orient the mount as shown.

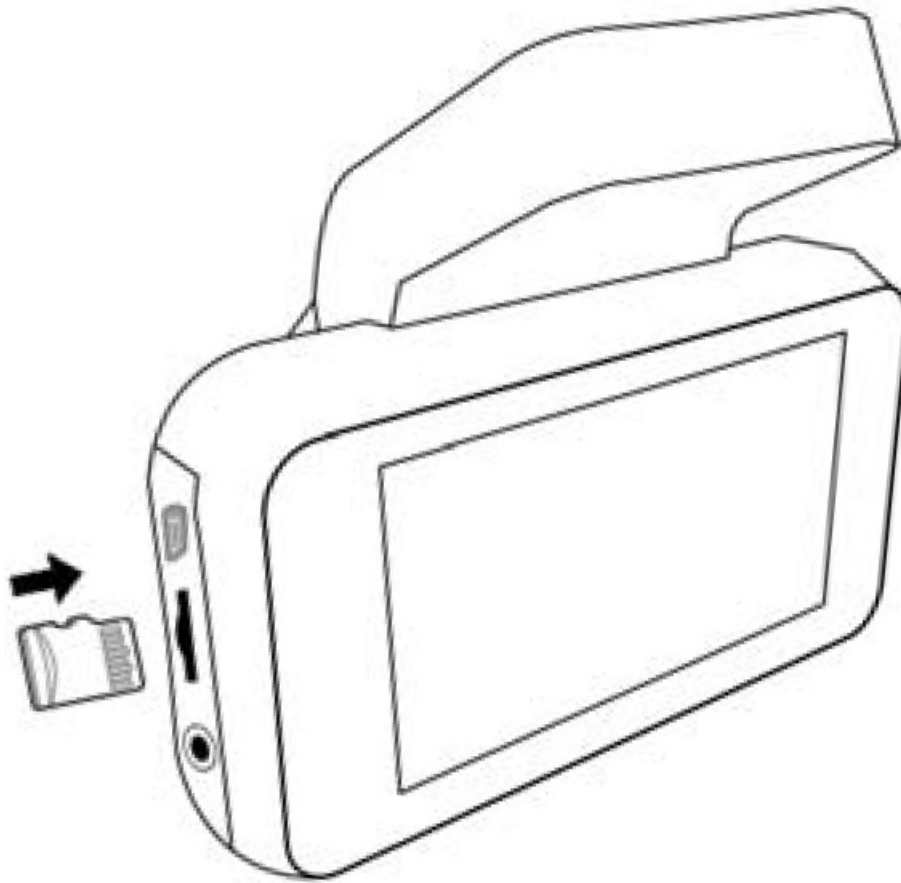


Step 2: Insert the Memory Card

The Rexing V5 accepts [Class 10/UHS-1 or higher] Micro SD memory cards up to 256GB. a memory card before you can begin recording. Before inserting or removing a memory card, first ensure you've powered down the device. Gently push the memory card in until you hear a click, and allow the spring release to push the card out. You will need to insert

Step 3: Power the Camera and Format the memory Card

Power the camera by connecting the charger to then car cigarette lighter and camera. To ensure the V5 records to your memory card properly and without error.

 
Before you start using a new memory card, you must format the card within the camera using the format function. Always backup important data stored on the memory card before formatting. To format the memory card, make sure you have inserted your memory card, then turn on the device by connecting to a power source. Press OK to stop recording. Then press the MENU button twice to enter the System Setup Menu. Use the and buttons and go to the Format setting. Press the OK button to confirm the selection. You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin after recording automatically the next time it is powered on.

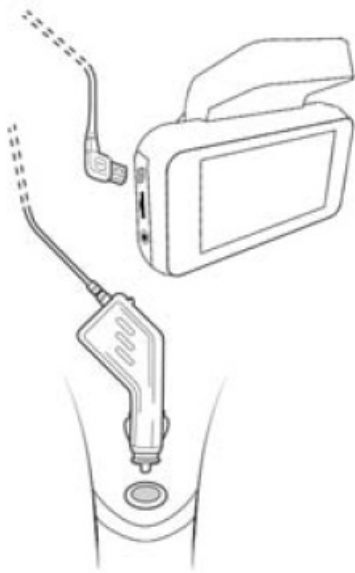

Press the
OK button
to confirm
formatting the
card


Step 4 mount the Rear Camera/ Cabin Camera

 (Rear camera or Cabin camera need to purchase separately) Mount the rear camera/cabin camera as shown below. Use the provided rear camera cable to connect the rear camera to the front camera. You can attached the cabin camera to front camera directly. You can connect all three channels together, you may choose any two of them to record at the same time.

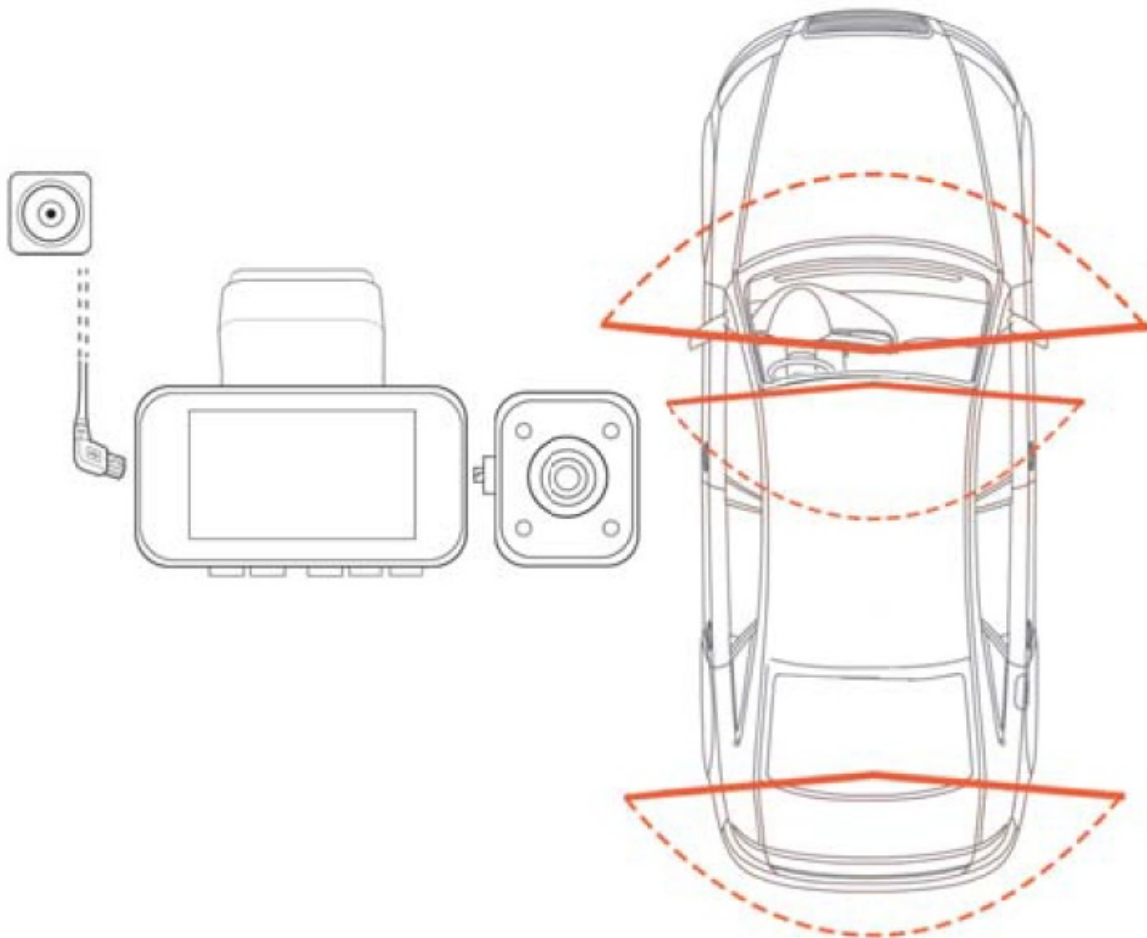

Step 5: Installing the Camera onto the Windshield

 
Place the camera on the mount and carefully route the power cable around the windscreen and tuck in under the trim. Plug the Car Charger Cable into a 12V DC power outlet or the car cigarette lighter. Connect car charger to the camera. The camera will auto-start recording once powered on.

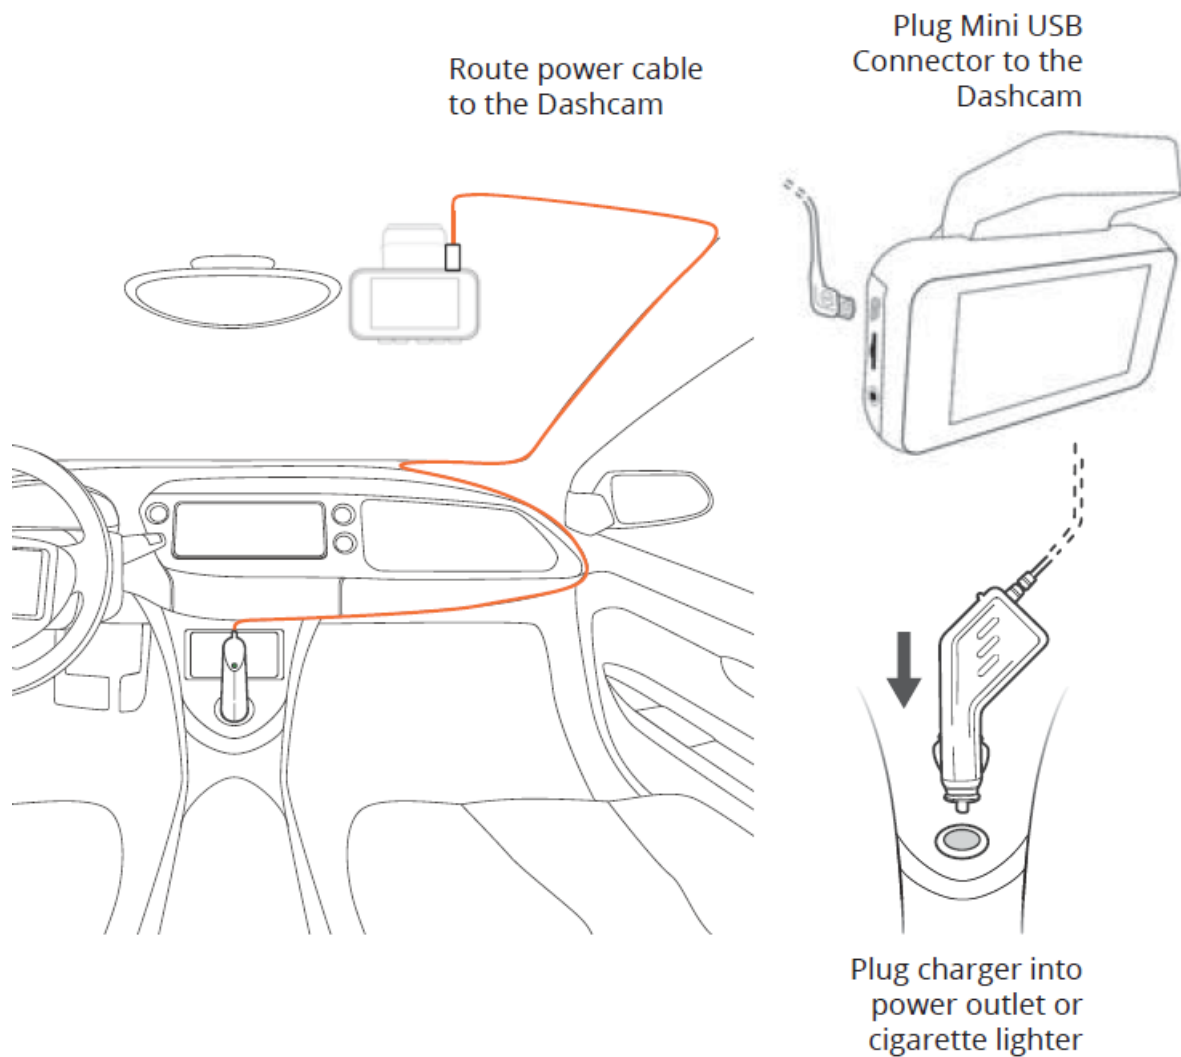

Basic Operation

Device Power

 The device is automatically powered on when plugged into a 12V accessory socket or cigarette lighter and received a charge (i.e.: the vehicle is started). To turn the device on manually, press and hold the Power button until the welcome screen appears. The camera will automatically start recording when power on.

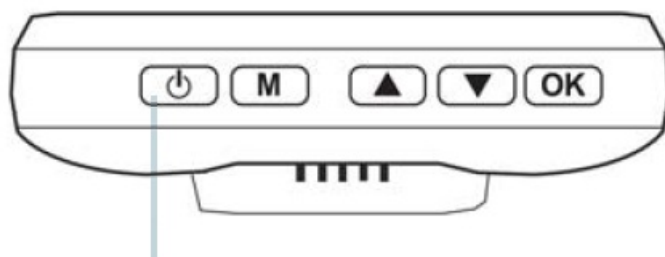


Press and hold the Power button to turn the device on manually

menu Settings

Power the camera On. If the camera is recording, press the OK button to stop recording. Hold the MENU button and toggle to the desired mode. Press the MENU button once to enter the settings menu for a Mode. Press the MENU button twice to enter the System Settings (Set up).

Video Recording

 The camera will automatically start recording when the device receives charge. The LED lights and red dot will blink device when reCording. Press the OK button to stop recording.

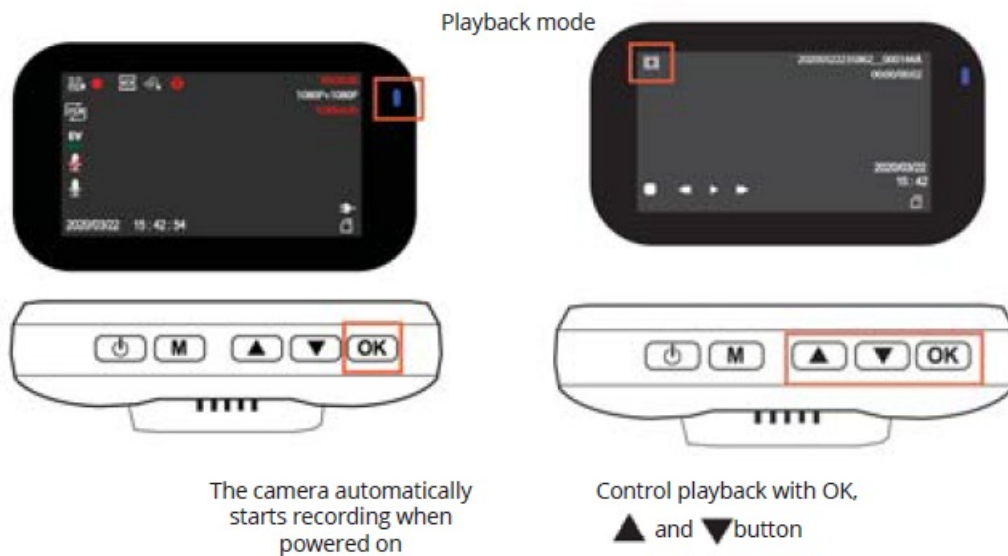

EMR Mode

To use the Emergency Record Mode, hold the "A" button to manually record a 20 second video that is automatically saved and locked. View EMR recordings by pressing the menu/playback button.

Video Playback

 
Playback of videos can be done on the device or a computer. To playback a video on the device, toggle to the Playback mode. Use the A and buttons to toggle to the desired video. Press the OK button to play. During playback use the OK (pause), A (rewind) and V (fast forward) buttons to control the video playback.

To playback a video on the computer either use an

SD card adapter or connect the device to the computer directly using the USB cable.

To playback a video using an SD card adapter,

remove the memory card and insert it into an SD card adapter. Place the adapter in the computer.

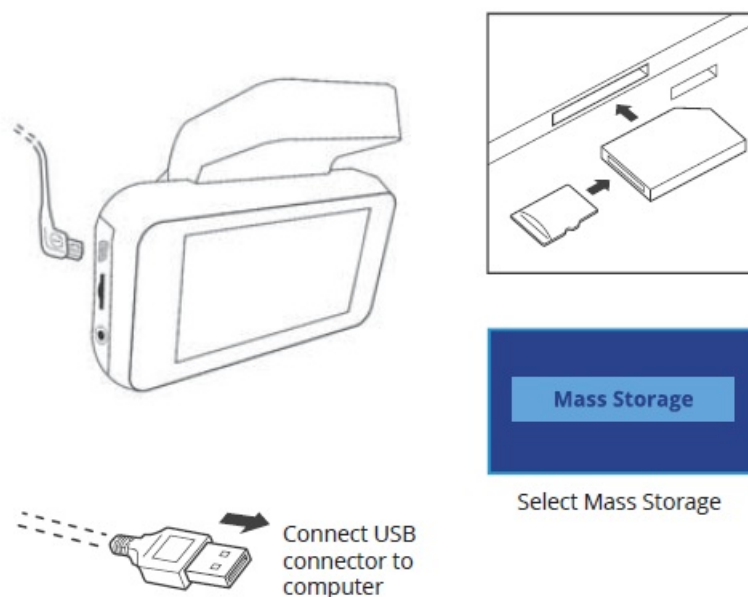


To playback a video using USB cable, connect the USB

Cable to the device and the computer. After the device powers up, press the OK Button to select Mass Storage. On the computer, navigate to device drive. The videos are stored at: \CARDV\MOVIE. Select the video to playback.

Wi-Fi Connect

Download "Rexing Connect" app from the App Store/Google Play Store.

 1. To access and exit the app, hold down OK Button
2. Open Wi-Fi settings on your phone, find "SSID" from the list, tap to connect. (Default password: 12345678)
3. Open the Rexing Connect app, tap "Connect" to enter the realtime video streaming page.

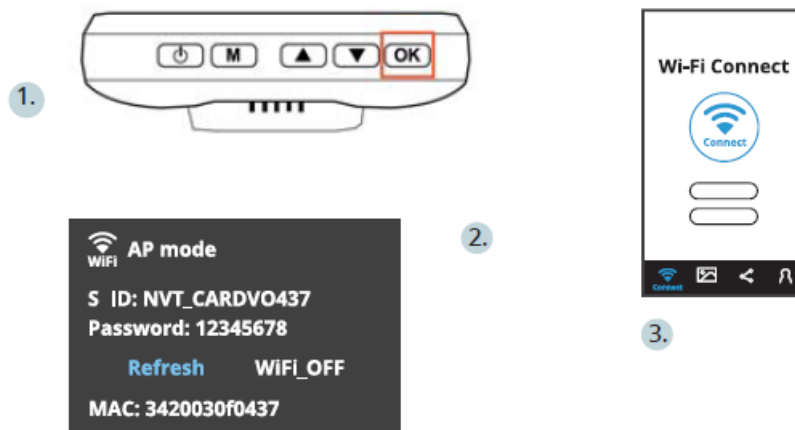

4. Once connected, the dash cam screen will switch to the camera view and will display "WiFi Connected" message. Using the Rexing Connect app, you can view a live preview of the dash cam screen, start / stop recording, as well as view and save your captures with your mobile device. For further instruction regarding the Wi-Fi Connect feature, please visit www.rexingusa.com/wifi-connect.

GPS Logger

When connected to the camera, it will record the speed and location of your vehicle as you drive. You can then access this information while playing back your recordings using the GPS Video player (For windows and Mac, available at rexingusa.com). The dash cam will automatically search for the GPS signal once it's connected to the power source. Press the MENU button twice and go to System Settings. Toggle the GPS Speed Unit setting, and select your favorite speed unit.

After a GPS signal is found, the screen icon will turn from red to green- as per the below icons.

Parking monitor

Connect the dash cam to the Smart Hardwire Kit (need to purchase separately) to activate the parking monitor function. Please visit www.support.rexingusa.com to watch a video tutorial.

Taking Photos

- To take a photo, stop video recording and hold down the MENU button.
- To view a photo, stop video recording and hold on MENU button to the Playback Mode.

 


- Press the A and Buttons to toggle through your photos.
- To delete a photo, stop video recording and toggle to the Playback Mode and toggle through the videos and photos to the one you want to delete.
- Press the MENU to toggle the Delete option.
- Press the OK Button and select Delete Current or Delete All.


Press the **OK** Button and select Delete Current or Delete All.



Choose
the desired
option



Documents / Resources

	<p>REXING V5 3-Channel Dash Camera [pdf] User Guide V5, 2AW5W-V5, 2AW5WV5, V5 3-Channel Dash Camera, 3-Channel Dash Camera</p>
---	--

References

- [Dash Cams from Rexing USA - Top Rated Front, Rear and Internal facing Dash Cameras w/ GPS, Wifi Support and more.](#)