




Rexitee CD909 Bluetooth CD Player Instruction Manual

[Home](#) » [Rexitee](#) » Rexitee CD909 Bluetooth CD Player Instruction Manual 

Rexitee

Bluetooth CD Player
Instruction Manual

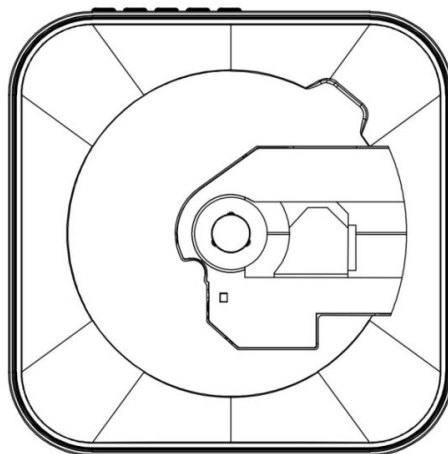

Contents


- [1 Parameters](#)
- [2 Tutorials](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)


Parameters


Machine Net Weight: 525g
Rated Power: 10w
Size: 170*170*40mm
Rated Voltage: 5V/2A

Speaker Rated Output Power: 5w


Tutorials


Power on/off: Long press the mode button  on the machine to turn on the machine, long press the M mode button to turn off the machine.

CD mode: install the CD disk on the CD player, make sure it is tight, long press the mode button  to turn on the machine (the machine defaults to CD mode), start to rotate and read the disk for about 10 seconds to start playing music.


 
Bluetooth Mode: Short press the Mode button  to switch to Bluetooth mode, search CD909 in the Bluetooth interface of your cell phone, click pairing to connect.


USB flash disk playback: Insert the USB flash disk under power on state.

Loop Mode: Short press the Loop Mode button , each press switches a kind of playback mode, which are Random Play, All Loop, Single Song Loop and Normal Play.

Play/Pause: Short press the button  to play or pause.

Fast Forward/Fast Reverse: Long press  to fast forward; long press  to fast reverse.

Volume: short press the key  to decrease the volume, short press the key  to increase the volume.

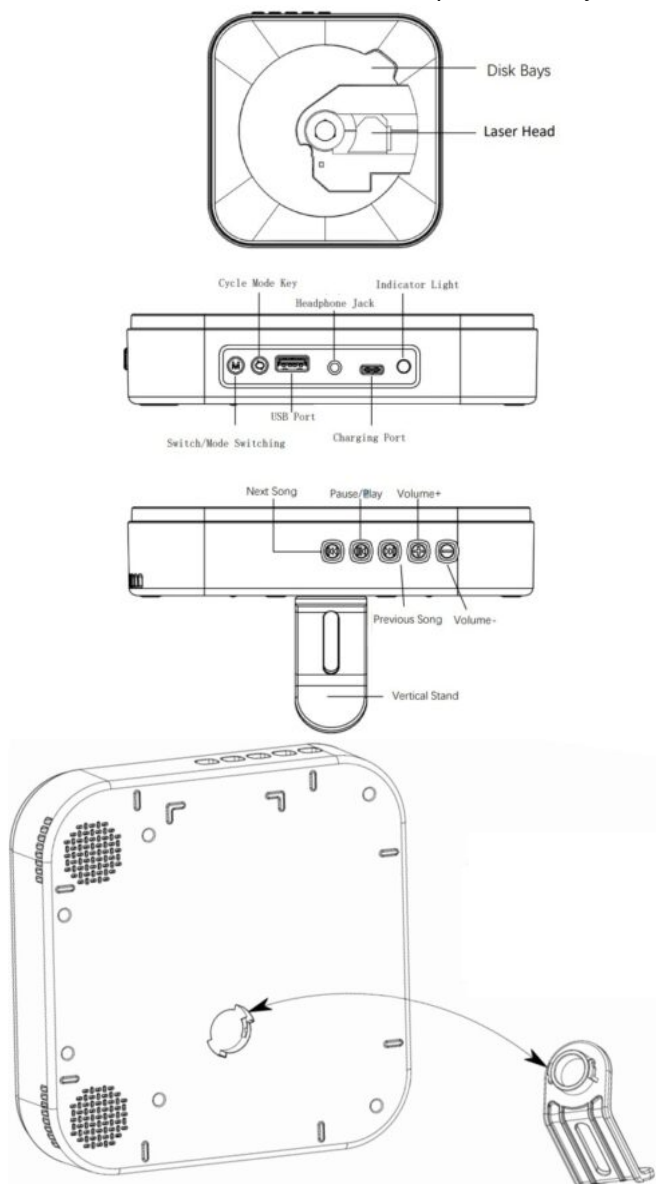

Bracket Installation: Align the bracket with the slot at the back of the machine, rotate it to the designated position, and then it can be used.

****Notes**:**

1. The CD player may perform differently in various environments. Do not use it in harsh conditions such as high volume, dust, humidity, high temperature, or low temperature to prevent malfunctions and abnormal operation.
2. Some frequency bands of certain songs may cause resonance tremors and disc skipping when the volume is high. You can reduce the volume to alleviate or avoid this.
3. If the CD player is not used for a long time, please disconnect the power supply and charge it in advance before the next use to improve the battery life.
4. Bluetooth transmission: In the CD mode, press and hold the play/pause button to enter the pairing mode to connect other devices for music playback.
5. The speaker outlet is on the back of the machine. To achieve a good playback effect, do not place the machine flat when playing.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

Rexitee

Documents / Resources

	<p>Rexitee CD909 Bluetooth CD Player [pdf] Instruction Manual CD909, CD909 Bluetooth CD Player, Bluetooth CD Player, CD Player, Player</p>
---	--

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.