

RF-Star BLE5.0 Asynchronous Wireless Controller Installation Guide

[Home](#) » [RF-star](#) » RF-Star BLE5.0 Asynchronous Wireless Controller Installation Guide 




RF-star BLE5.0 Asynchronous Wireless Controller Installation Guide


Contents

- [1 Dimensions:](#)
- [2 Connection:](#)
- [3 Wireless sensor installation:](#)
- [4 Wireless sensor function description:](#)
- [5 Controller match code:](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)


Dimensions:

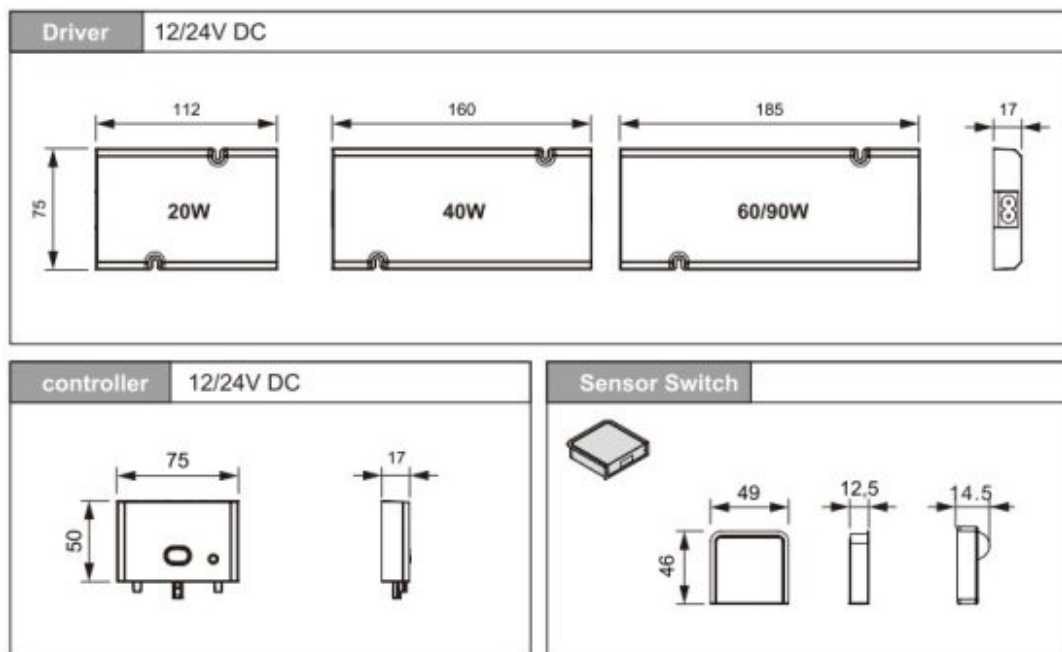

Connection:

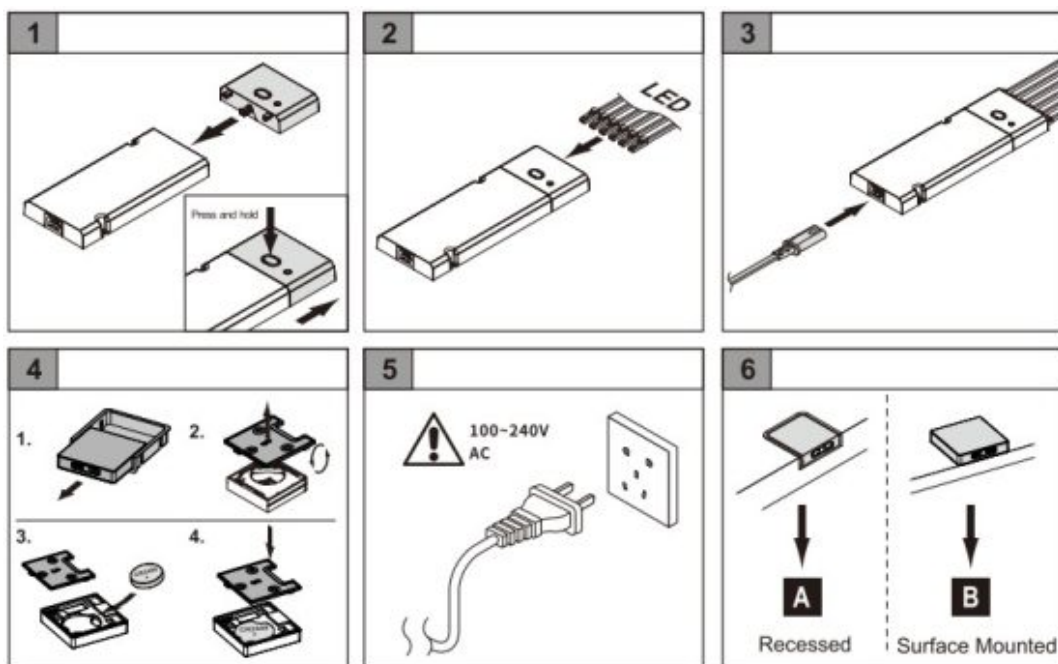


Wireless sensor installation:

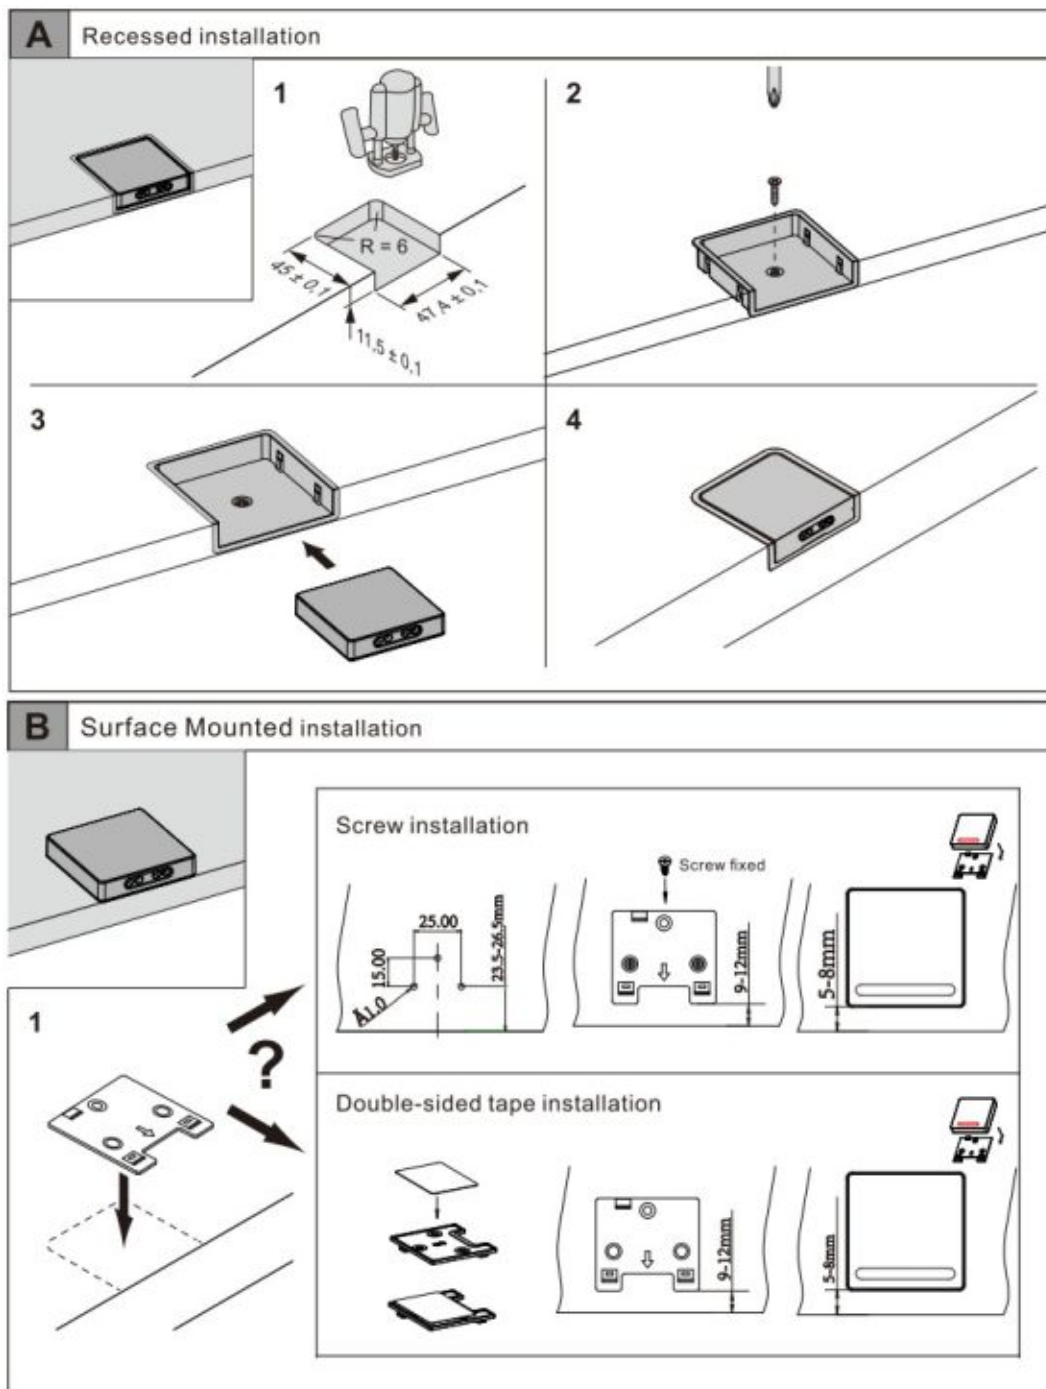


Wireless sensor function description:

Door sensor

Distance range: 0-12cm

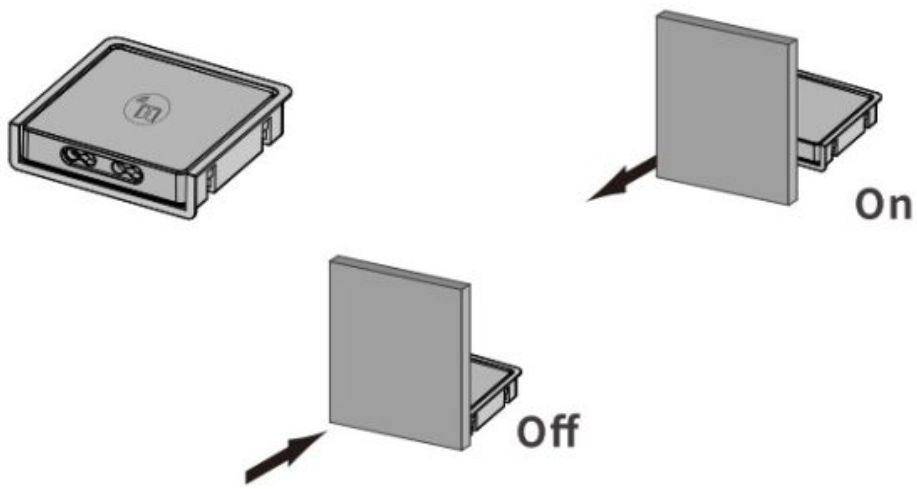



Dimming & CCT variable sensor

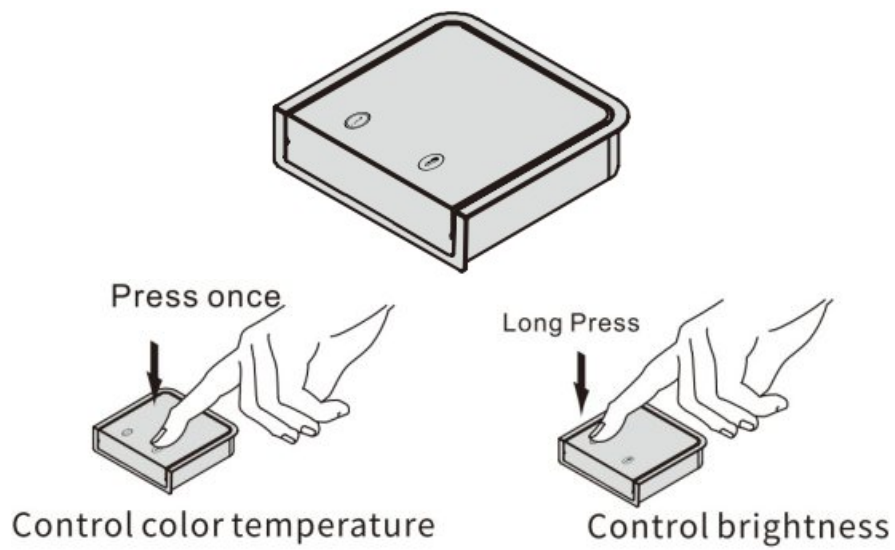


Side IR sensor

Distance range: 3-12cm

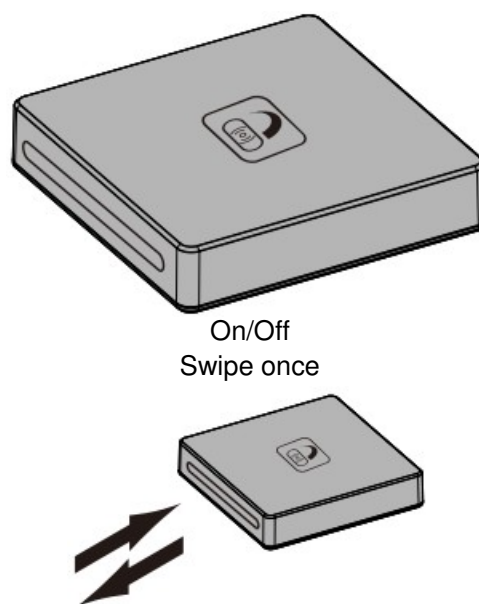


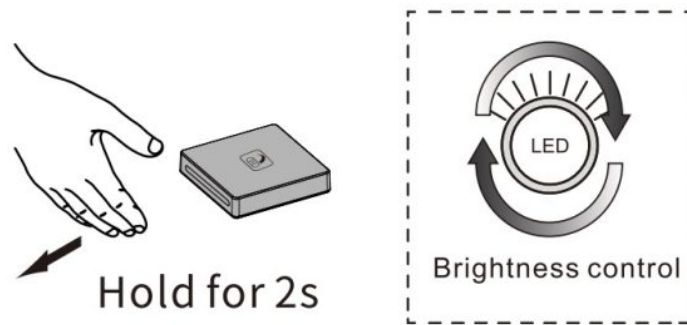

PIR sensor

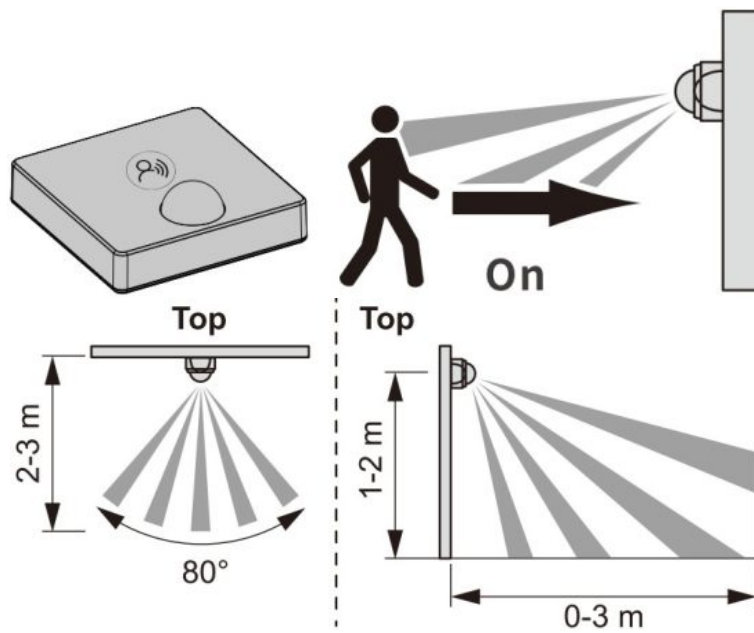


Touch sensor

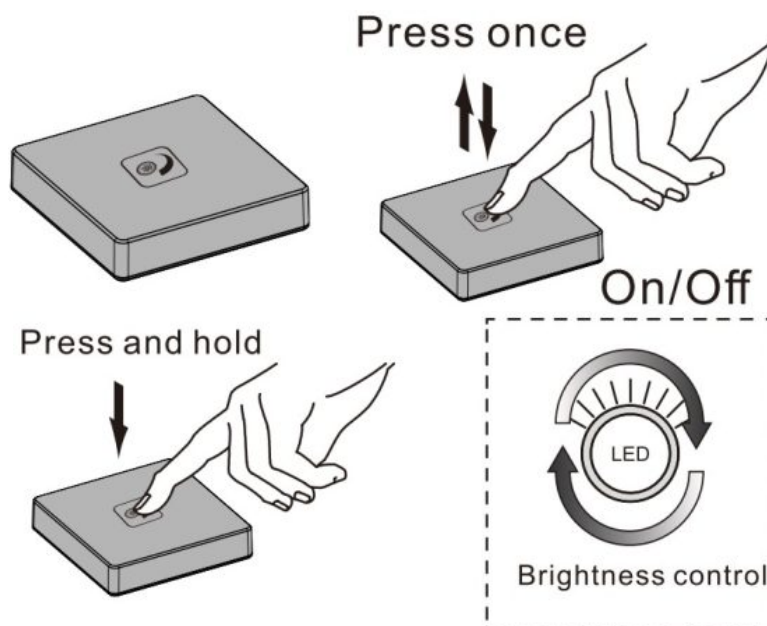


Front IR sensor

Distance range: 3-12cm


Distance range:3-12cm

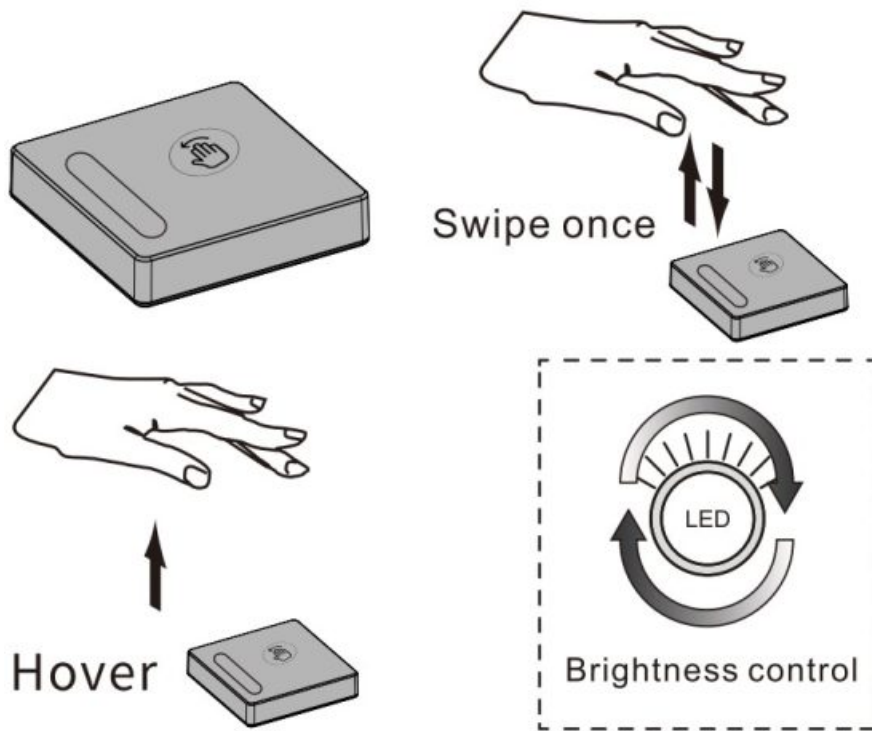

Side IR-Touch sensor
Distance range: 3-12cm

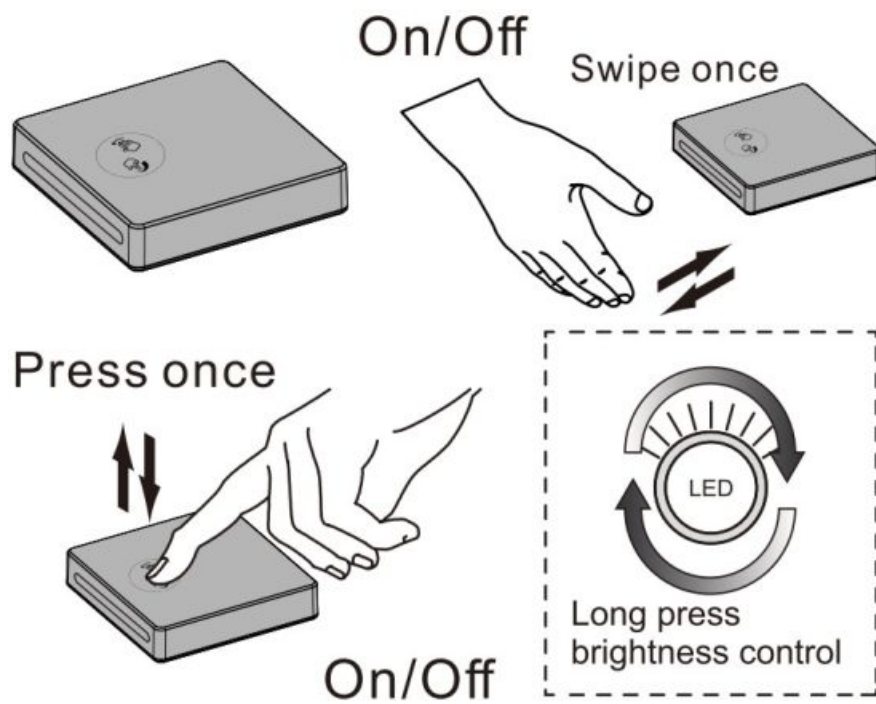

Controller match code:

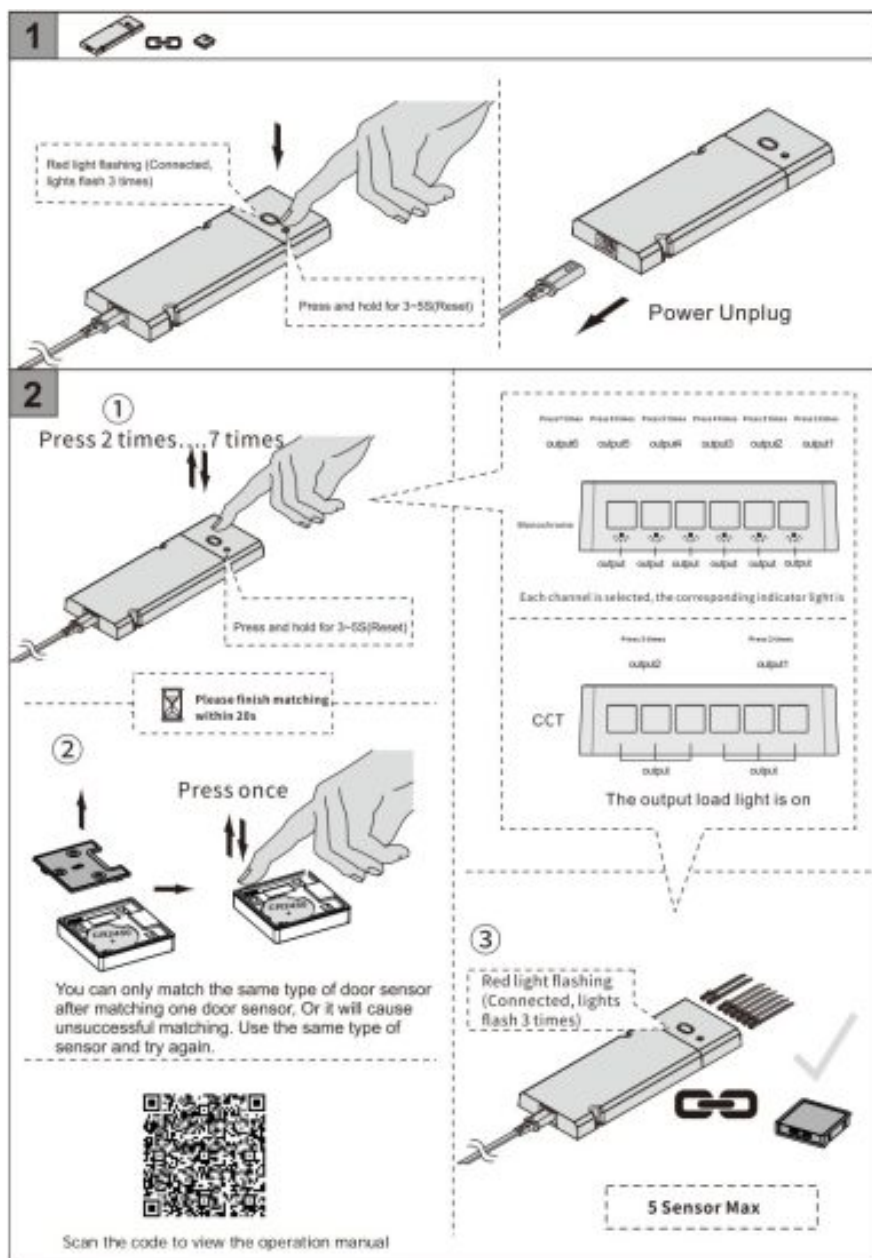

<https://drive.google.com/file/d/1vsV3NLRE-7GwzKmzhYSvl75Coch4nqwR/view?usp=sharing>



Documents / Resources

	RF-Star BLE5.0 Asynchronous Wireless Controller [pdf] Installation Guide BLE5.0 Asynchronous Wireless Controller, BLE5.0, Asynchronous Wireless Controller, Wireless Controller, Controller
--	--

References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.