



# RFID SecureEntry-CR40 Reader with Access Control User Manual

[Home](#) » [RFID](#) » RFID SecureEntry-CR40 Reader with Access Control User Manual 

# RFID

User Manual  
RFID reader with access  
control  
SecureEntry-CR40

## Contents

- [1 Specifications:](#)
- [2 Set contents:](#)
- [3 Features:](#)
- [4 Installation](#)
- [5 Function Table](#)
- [6 Wiring Diagram](#)
- [7 Data Signal](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## Specifications:

- Warranty: 1 year
- RFID Card Supported: 125 kHz
- Device Type: Access Control RFID Card Reader
- Interface: Wiegand 26

- Verification Type: RFID Card
- Access Control: Yes
- Voltage: 9~24V DC
- Ingress protection: IP66
- Reading Distance: > 3cm
- Operating current: 25 mA
- Operating temperature: -40°C~60°C
- Operating humidity: 10% to 95%
- Product dimensions: 105 x 20 mm
- Package dimensions: 103 x 48 x 19 mm
- Product weight: 180 g
- Product weight with packaging: 260 g

### **Set contents:**


- RFID reader with access control
- Screws and mounting plugs
- Manual

### **Features:**

- The RFID reader can be combined with an electric lock, thanks to which we will obtain a device that allows us to manage access to rooms and buildings.
- The device supports RFID cards with 125 kHz frequencies
- The access control system has a water-resistant housing with IP66 protection, so it can be installed outdoors.
- The reader is equipped with a Wiegand 26 interface, which allows it to be connected to a time recorder and transfer data.

### **Installation**


- Drill 2 holes in the wall for screws (A, C) and one hole for wire (B)
- Drive the rubber pins into the holes (A, C)
- Attach the back cover to the wall with 2 screws
- Insert the wire through the cable hole (B)
- Attach the device to the back cover

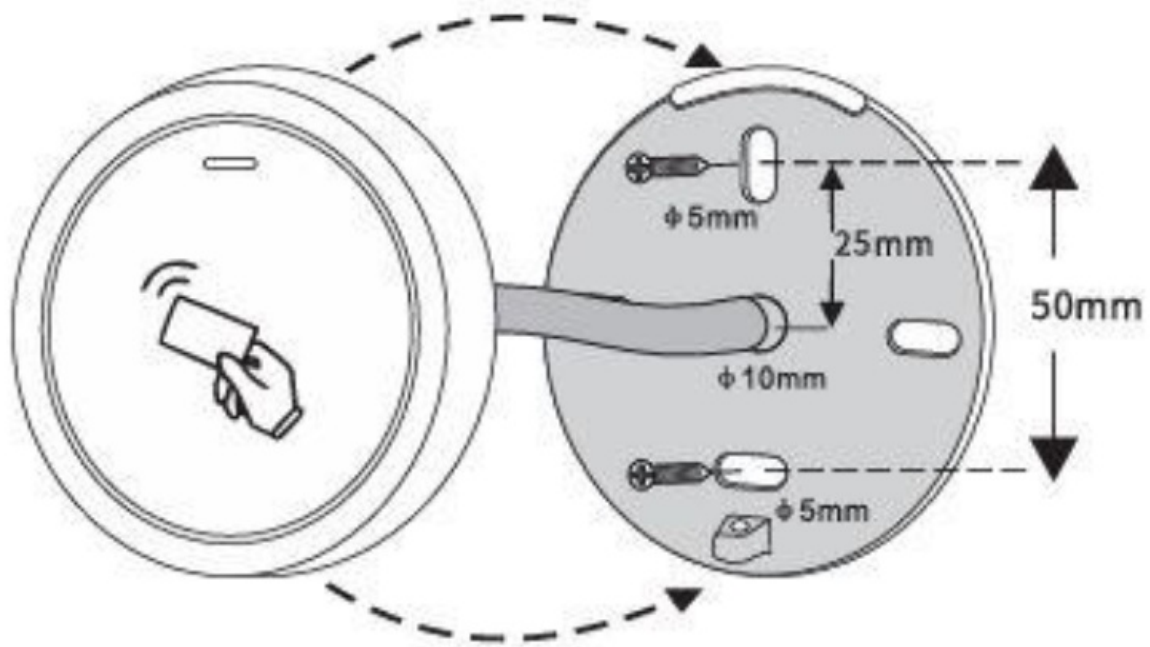

## Function Table

Reading the card	The LED will turn green and the buzzer will beep, meanwhile, the reader will send a Wiegand signal.
External LED Control	When the input voltage for the LED is low, the LED will turn green
External buzzer control	When the input voltage for the buzzer is low, the buzzer will make a sound
Wiegand Data Output	The factory default setting is 26 bits.

## Wiring Diagram

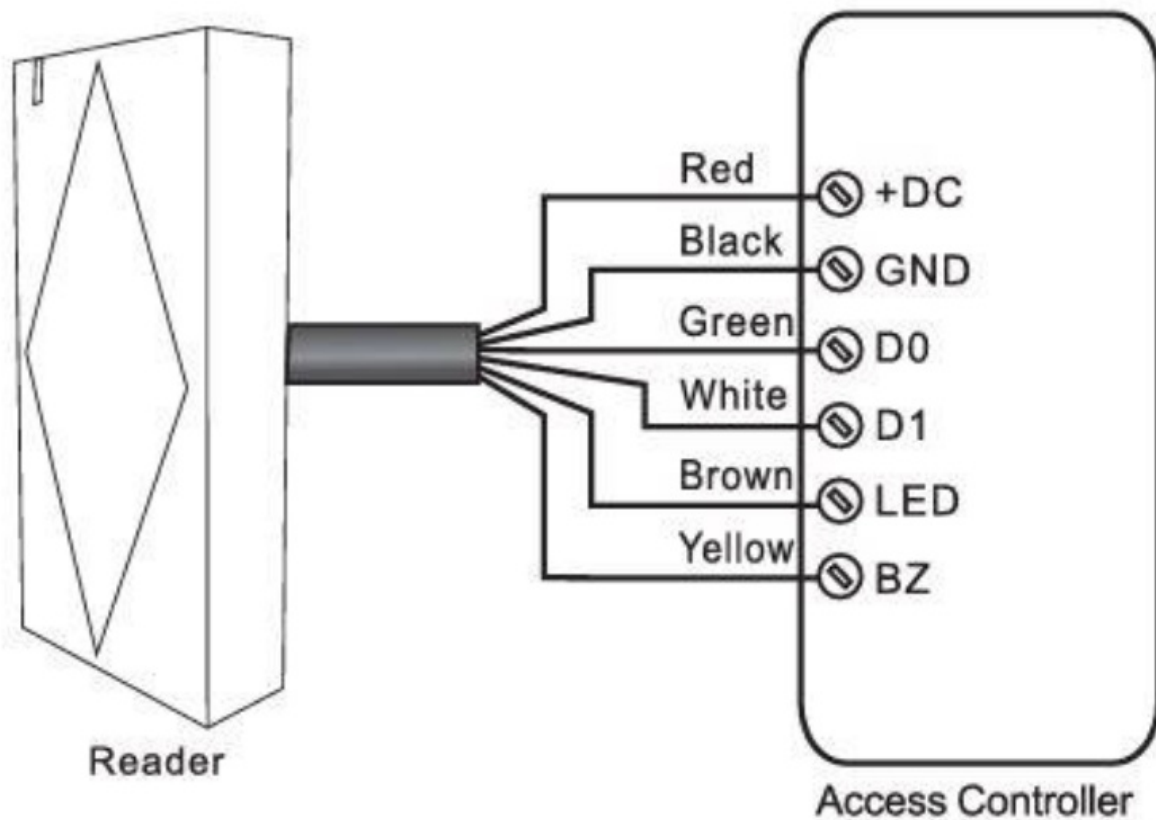


Colour	Function	Comments
Red	Power	+DC (9-24V)
Black	GND	Ground
Green	D0	Data 0
White	D1	Data 1
Brown	LED	Green LED control
Yellow	Buzzer	Buzzer control

**(Note:** The brown and yellow wires are optional connections.)


## Data Signal

Description	Reader Typical Time
Pulse Duration	42 $\mu$ S
Pulse Interval Time	2 mS

The table above shows the waveform of time, pulse width (pulse duration), and interval time (time between pulses) of Wiegand data sent from readers. (Example 1010)

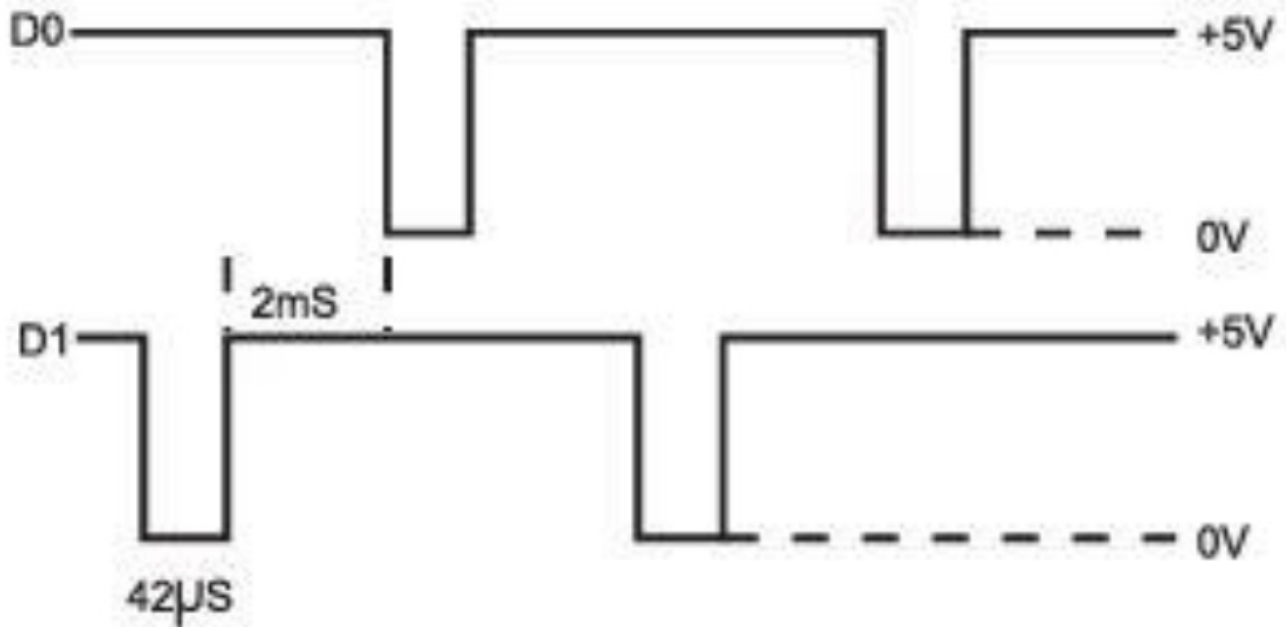

## Documents / Resources

<p>User Manual</p> <hr/> <p>RFID reader with access control</p> <p>SecureEntry-CR40</p> <hr/> <p></p>	<p><a href="#">RFID SecureEntry-CR40 Reader with Access Control</a> [pdf] User Manual</p> <p>SecureEntry-CR40 Reader with Access Control, Reader with Access Control, Access Control, Control</p>
--	---

## References

- [User Manual](#)

### Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.