



RHINO RAV3TX 4-Button Rolling Code Remote Control Instructions

[Home](#) » [RHINO](#) » RHINO RAV3TX 4-Button Rolling Code Remote Control Instructions 

RHINO



RAV3TX REMOTE CODING PROCEDURE

Alarm JAGv2/RAv3

Programming Additional Remote Controls / Erasing Lost Remote Controls

Your JAGv3, JAGv2/RAv3 is supplied standard with 2 remote controls – Up to a maximum of 5 remotes can be used. To add a new remote to your alarm, simply follow the procedure below:

1. Turn the vehicle's ignition on.

Immediately press and hold the  /  button on the original remote control until the indicators start to flash (approximately 4 seconds) and then release the button.

2. Immediately press and hold the  /  button on the new remote control for at least 4 seconds.
3. Turn the vehicle's ignition off.
4. The new remote control is now programmed into the immobiliser.

Erasing Lost Remote Controls

If you lose a remote control or perhaps have your car keys stolen, you can simply erase the lost/stolen remotes by repeating the procedure above 10 times. This will fill the system memory with remotes that only you have in your possession.

Learning in a new remote when no working remote is available

You may learn in a remote without having an already learned-in remote. Please see "Overriding the Immobiliser" for more information.

Overriding the Immobiliser

Your alarm has been loaded with a randomly generated 5-digit override code. This feature enables the owner to override their immobiliser and start the vehicle in the case of lost or damaged remote controls. The customer must be made aware of this code, which is placed, on the front of this manual and the supplied override code card.

1. Enter the vehicle. If the alarm is armed the siren will sound – this may be turned off using your siren key but will not affect the procedure.
2. Ensure that the bonnet and boot are shut, your vehicle’s doors may be open or closed.
3. Turn the ignition from ON to OFF in a quick steady rhythm an equal number of times to the first PIN digit
4. Wait for the indicators to flash once. If the alarm is armed you will not be able to see the flash, instead watch for a flash on the red dash LED
5. Repeat steps 3 and 4 for the second PIN digit, remembering to wait to see the indicators or dash LED flash.
6. Repeat until all five PIN digits have been entered.
7. If the code has been entered correctly, the alarm will disarm. Start the vehicle within 38 seconds or the alarm will automatically immobilize, and the procedure will need to be repeated. If you make a mistake during code entry and the alarm does not disarm, please wait at least one minute before trying again.


NOTE: This procedure will have to be repeated each time you wish to start the vehicle without a working remote. To learn in a new remote when all remotes have been lost, repeat the above procedure with the door and the bonnet open. After the final pin digit has been entered the indicators will begin to flash – Immediately press the / button on the new remote control twice and hold this button on the second press for three seconds. The new remote should now be learnt to the system.

Contents

1 Documents / Resources

2 Related Posts

Documents / Resources

	RHINO RAV3TX 4-Button Rolling Code Remote Control [pdf] Instructions RAV3TX, 4-Button Rolling Code Remote Control
---	--