



RhinoCo GTSTX 2 Button 433MHz Rolling Code Genuine Remote Instructions

[Home](#) » [RhinoCo](#) » RhinoCo GTSTX 2 Button 433MHz Rolling Code Genuine Remote Instructions 



GTSTX 2 Button 433MHz Rolling Code Genuine Remote
Instructions



Contents

- [1 GTSTX REMOTE CODING PROCEDURE](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

GTSTX REMOTE CODING PROCEDURE

Alarm: GTS

No. Remote: 3

Before entering this mode, make sure you have all remotes present that you wish to utilize with this alarm system, as the alarm automatically erases all remotes when you enter this mode.

1. The arm then disarms the alarm system. While the system is disarmed, open and close your driver's door (get inside the vehicle), making sure the interior light is coming on as you open the door.
2. Within 30 seconds, turn the car ignition key from the off position to the ignition on position **20 times**.
3. 30 seconds later, the blinkers will flash 3 times to confirm that you have entered the remote learning mode. Repeat steps 1 & 2 if you do not receive the flashes.
4. Now press and hold the button on the new remote you wish to learn in. The siren will beep once to confirm the code has been learned. Repeat this step for up to 3 remotes. You can use this process to delete lost remote controls by learning in the same remotes in succession to replace each of the 3 memory locations so that the old remote code/s are erased.
5. The system will automatically exit the learning mode 15 seconds after the last press of a remote



Documents / Resources

| | |
|--|--|
| <p><small>GTSTX REMOTE CODING PROCEDURE By: Rhinoco Enter a code page number, then hit enter. All remote control codes are stored in the memory of the alarm system. When you enter a code page number, the alarm system will erase all remotes that are currently stored in that memory location.</small></p> <ol style="list-style-type: none">1. Turn the ignition key from the off position to the ignition on position. The interior light should come on. Within 30 seconds, turn the ignition key from the off position to the ignition on position 20 times.2. 30 seconds later, the blinkers will flash 3 times to confirm that you have entered the remote learning mode. Repeat steps 1 & 2 if you do not receive the flashes.3. Now press and hold the button on the new remote you wish to learn in. The siren will beep once to confirm the code has been learned. Repeat this step for up to 3 remotes. You can use this process to delete lost remote controls by learning in the same remotes in succession to replace each of the 3 memory locations so that the old remote code/s are erased.4. The system will automatically exit the learning mode 15 seconds after the last press of a remote | <p>RhinoCo GTSTX 2 Button 433MHz Rolling Code Genuine Remote [pdf] Instructions GTSTX, 2 Button 433MHz Rolling Code Genuine Remote</p> |
|--|--|