




RICE LAKE LaserLight3 Series Remote Display Installation Guide

[Home](#) » [RICE LAKE](#) » RICE LAKE LaserLight3 Series Remote Display Installation Guide 

Contents

- [1 RICE LAKE LaserLight3 Series Remote Display](#)
- [2 INTRODUCTION](#)
- [3 DIMENSION](#)
- [4 Installation](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



RICE LAKE LaserLight3 Series Remote Display



INTRODUCTION

This document contains instructions for installing the optional visor kit (PN 214693). The optional visor provides additional shading for the display to improve visibility and reduce internal heat from sunlight. The visor weighs 9.31 lb (4.22 kg).

NOTE: The optional visor kit is compatible with the standard bracket mount, VESA pole mount kit (PN 212745) or flange pole mount kit (PN 75856).

Manuals and additional resources are available from Rice Lake Weighing Systems at www.ricelake.com/manuals. Warranty information can be found at www.ricelake.com/warranties.

CAUTION: The LaserLight3 does not have a power switch. Before working with the unit, ensure the power cord is disconnected from the power outlet.

DIMENSION


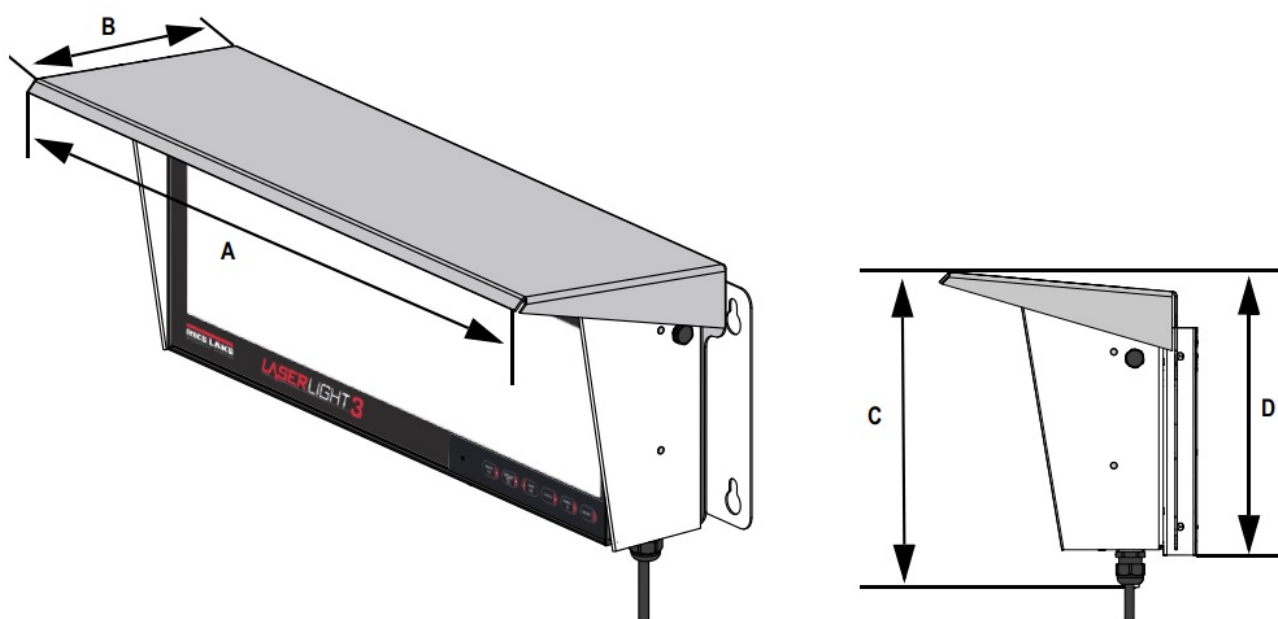


Figure 1. Visor Dimensions Diagram


Item	Inches	Millimeters
A	25.1	638
B	9.6	244
C	11.0	280
D	10.0	254

Installation

1. Unplug LaserLight3 from power source.
2. If needed, remove LaserLight3 from mounted surface.
3. Remove the six mounting screws with flat washers and lock washers securing the standard mounting bracket or VESA mount to the LaserLight3 and retain for reuse.
4. Remove mounting bracket from LaserLight3.
5. Align visor and mounting bracket with mounting holes on the back of the LaserLight3.
6. Secure each mounting hole with previously removed hardware (Step 3).
7. Torque the 6 mounting screws to 20-30 in-lb (2.26-3.39 N-m).

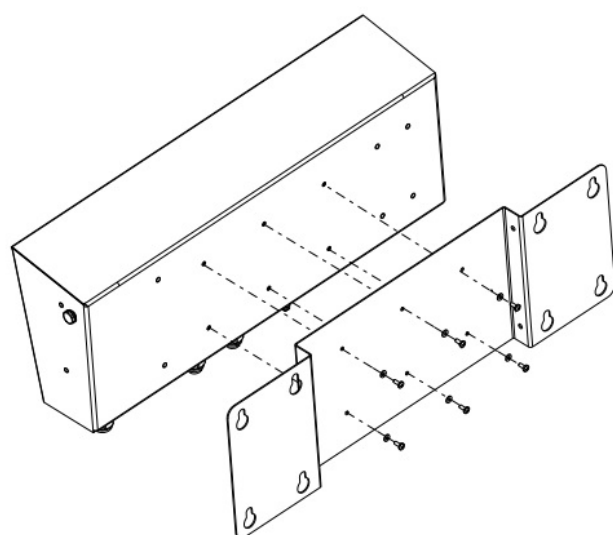

Remove Mounting Hardware and Bracket

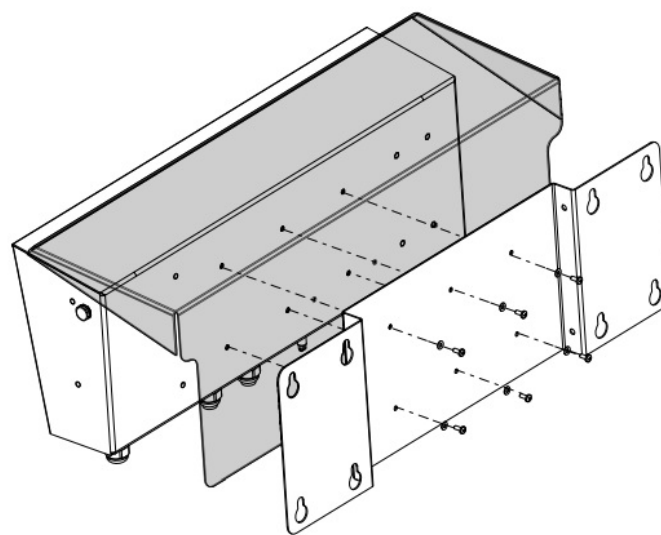

Align Visor with Bracket and Install with Mounting Hardware

Figure 2. Visor Installation

© Rice Lake Weighing Systems Specifications subject to change without notice.

230 W. Coleman St.

Rice Lake, WI 54868

USA

U.S. 800-472-6703

Canada/Mexico 800-321-6703

International 715-234-9171

Europe +31 (0)26 472 1319

www.ricelake.com

Documents / Resources



[RICE LAKE LaserLight3 Series Remote Display](#) [pdf] Installation Guide
LaserLight3 Series Remote Display, LaserLight3, Series Remote Display, Remote Display

References

- [Rice Lake Weighing Systems](#)
- [Rice Lake Manuals | Rice Lake Weighing Systems](#)
- [Rice Lake Warranties](#)
- [Rice Lake Manuals | Rice Lake Weighing Systems](#)

Manuals+,