

Contents [[hide](#)]

- [1 RICHIXIN X17 Keyboard Case Instruction Manual](#)
- [2 Package contains:](#)
- [3 Specifications](#)
- [4 Operations](#)
- [5 Keyboard Layout](#)
- [6 Features](#)
- [7 Indicators Descriptions](#)
- [8 Charging precautions](#)
- [9 Touch pad gestures](#)
- [10 Cleaning and maintenance](#)
- [11 Troubleshooting](#)
- [12 FCC Warning Statement:](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

RICHIXIN X17 Keyboard Case Instruction Manual



Package contains:

- Instructions * 1
- Bluetooth keyboard * 1
- USB charging cable * 1



Specifications

1. Bluetooth standard port 5.2
2. Operation Range: within 10 meters
3. Modulation Mode: GFSK
4. Work Current: <10mA
(During Touch board is working)
5. Standby Current: <2mA
6. Sleep Current: <40uA
7. Charge Current: 100mA/200mA (with Backlight)
8. Standby Time: >100 days
9. Charge Time: 2~3 hours
10. Work time: $\geq 30/100$ hours (Shut down backlight)
11. Lithium battery life: 3 years
12. Key strength: 80+10g
13. Key life: 500 million clicks
14. Working Temperature: -10°C+55°C

Operations

 
For the first time use, charge it for 3~4 hours to make sure sufficient power.

Keyboard use:

1. Press the switch to power on/off the keyboard.
2. Press the buttons "Fn+C" to enter bluetooth pairing mode, the indicator  will start to flash blue color.
3. Open Settings---Bluetooth---My devices. Tap "Bluetooth Keyboard" to connect.
4. After paired successfully, the indicator  will be turn Off.



Keyboard Layout

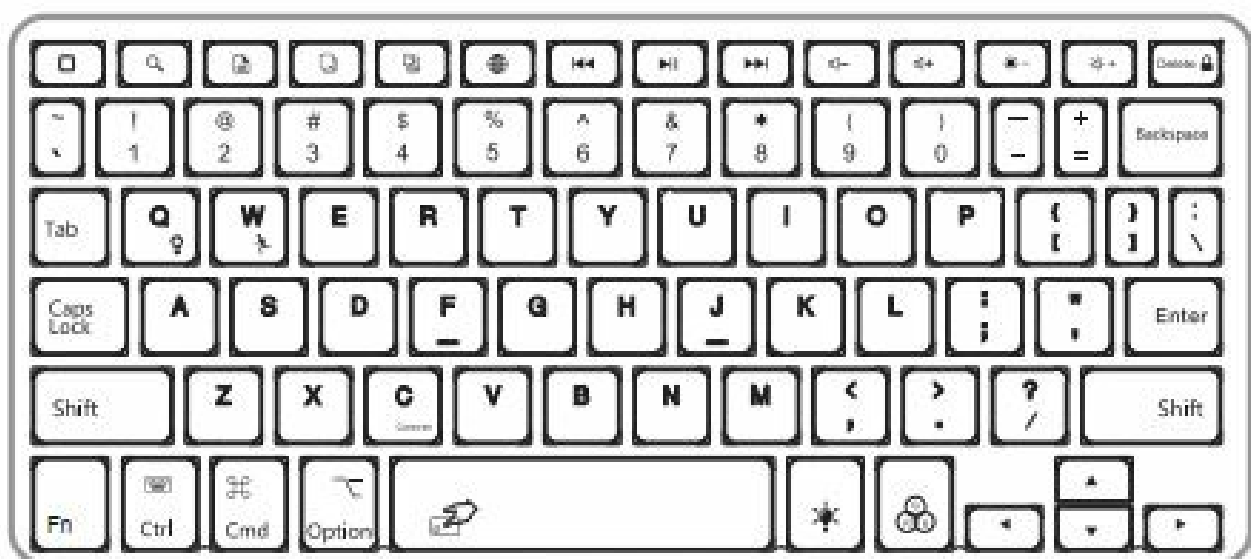

Note: The above is the function reference table, which shall be subject to the actual situation

Features

 Home/Esc	 Change Language	 Volume -
 Search	 Previous Track	 Volume +
 Select All	 Play/Pause	 Brightness -
 Copy	 Next Track	 Brightness +
 Paste	 Fn+ Lock Screen	 Fn Function key
Fn+  Virtual Keyboard On / Off		
Fn+  Touchpad On / Off		

Backlight adjustment (optional)



Adjust three modes: press once to turn ON the light, press twice to make the light brighter, press three times to turn OFF the light;



Adjusting colorful light colors



Turn ON/OFF colorful breathing backlight

 


Adjust colorful light speed

Note:

1. Operation System: IOS15.0 or above (The device must support Touch feature).
2. Tap settings (after successful wireless paired): settings – general – touch pad – tap/double finger auxiliary point (open).
3. Sensitivity setup: setting – general – touch pad – tracking speed (adjust to appropriate speed).
4. Touch pad (no physical buttons): no “drag” gesture function option.

Indicators Descriptions

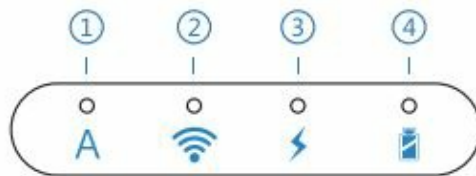




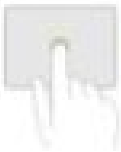 
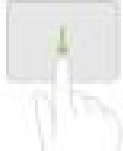 
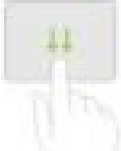 
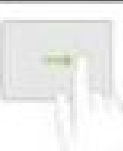 



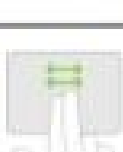 
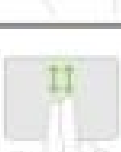 
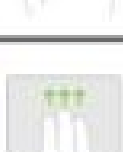 





① A	Case indicator	Press "Caps Lock" on the keyboard, and the indicator turns white.
②	Bluetooth Indicator	Press Fn+C to enter Bluetooth pairing mode, the indicator starts to flash blue, after successfully paired, the indicator will be turn OFF.
③	Charging Indicator	The indicator is always on during charging, it will turn green or turn off after charging finished.
④	Power Indicator	Flashing blue means "Low Power" .

Charging precautions

1. For the first time use, charge it use only the cable from manufacture. Charging indicator will turn green or turn off after fully charge.
2. When charging, check whether the charging port is powered normally.

Note: Do not charge the keyboard for a long time. Plugging in the keyboard for a long time will deplete its battery life.

Touch pad gestures

 <p>Tap: Press with a single finger until you feel a touch.</p>	 <p>Press: Press and hold with a single finger</p>
 <p>Drag: Drag and hold the item, then slide on the touch pad to move it</p>	 <p>Wake up the iPad: Click the touch pad or tap any key if you are using an external keyboard.</p>
 <p>Open the dock: Swipe the pointer with a single finger across the bottom of screen</p>	 <p>Go to the home screens: Swipe the pointer with a single finger across the bottom of screen. After the dock appears, swipe the pointer across the bottom of screen again.</p>
 <p>Display side pull: Use a single finger to swipe the pointer over the right edge of the screen. To hide the side pull, swipe right again.</p>	 <p>Zoom: The two fingers are placed close, spread out to put large, or pinched to shrink.</p>
 <p>Open Control Center: Move the pointer with a single finger to select the status icon at the top right, then click, or select the status icon at the top right, and then swipe up.</p>	 <p>Open the Notification Center: Move the pointer near the top center of the screen with a single finger, or select the status icon at the top left, and then click.</p>
 <p>Scroll left or right: Swipe left or right with two fingers.</p>	 <p>Scroll up or down: Swipe up or down with two fingers.</p>
 <p>Go to the home screen: Swipe up with three fingers.</p>	 <p>Open the app switcher: Swipe up with three fingers, pause and then lift your finger, or pinch your finger, pause and then lift your fingers.</p>
 <p>Switch APPs: Swipe left or right with three fingers.</p>	 <p>Open "Today" view: Swipe right with two fingers on the home screen or the visible lock screen.</p>
 <p>Turn on search from the home screen: Swipe down with two fingers.</p>	 <p>Auxiliary tap: on the home screen, tap the icons, the mail in the mailbox, or the "Camera" in the "Control Center" and other items to display its quick operation menu. Then press and hold the Control key and click the touch pad.</p>

Cleaning and maintenance

In order to make your keyboard awesome and easy to use, please keep good use habits

and pay attention to protecting the keyboard.

Keyboard and cover care

The keyboard is relatively light and thin. Please be careful not to use it on uneven surfaces to avoid bending the keyboard. Do not apply the liquid directly on the keyboard. Use a lint free cloth dipped in alcohol or mild soapy water to wipe the keyboard and shell for maintenance. Clean your keyboard cover in this way often to make it look great.

Battery maintenance

Operating temperature: the operating temperature of the keyboard is 0 ° C~35 ° C.

Lithium battery is very sensitive to high temperature, so keep its surface away from the sun and do not put it in a hot car. Charging at any time: You can charge the battery at any time even its power is not zero. However, do not charge for a long time, which will reduce the battery life.

Troubleshooting

About Connections

The keyboard only supports Bluetooth connection. Confirm that the keyboard and tablet are paired and connected before use. If the keyboard has the connection delay or input delay:

1. Fully charge the keyboard for 3-4 hours.
2. Delete all Bluetooth connections on the tablet, eliminate signals interference, turn off the Bluetooth function, and restart the tablet.
3. Close and open the keyboard, and press “Fn+C” to reopen the keyboard Bluetooth.
4. Open Settings – Devices- My Device, find the “Bluetooth Keyboard” and click to connect.

Use of touch pad

Before using, make sure the touch function is turned on. If the cursor moves randomly, use a lint free cloth dipped in alcohol or mild soapy water to wipe the touch pad. Keep your hands dry during use to avoid incorrect gestures recognized by the touch pad.

Due to the upgrade of the system version or special customization of the APP program, it is normal that some shortcut keys cannot be used due to different functions. Please refer to the product details and function introduction, or consult the merchant customer service

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following


two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.


Read More About This Manual & Download PDF:


Documents / Resources

	RICHIXIN X17 Keyboard Case [pdf] Instruction Manual X17, X17 Keyboard Case, Keyboard Case, Case
---	--

References

- [User Manual](#)

 Case, Keyboard Case, RICHIXIN, X17, X17 Keyboard

 RICHIXIN Case

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.