

Richmat HJC56 Bluetooth Control Box User Manual

Home » Richmat » Richmat HJC56 Bluetooth Control Box User Manual

Contents

- 1 Richmat HJC56 Bluetooth Control Box
- 2 Dimension:(mm)
- 3 System configuration diagram
- 4 Fixed position size
- 5 Remote control function description
- 6 Caution:
- 7 Documents / Resources
- **8 Related Posts**




Richmat HJC56 Bluetooth Control Box




Remark:

Up to 4 motors BLE control available Memory function Color: black

Dimension:(mm)

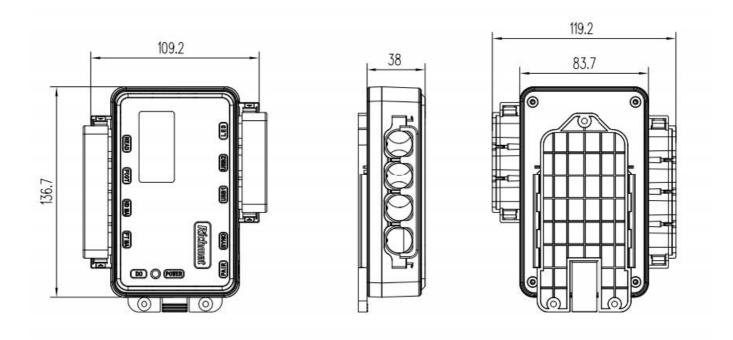


System configuration diagram

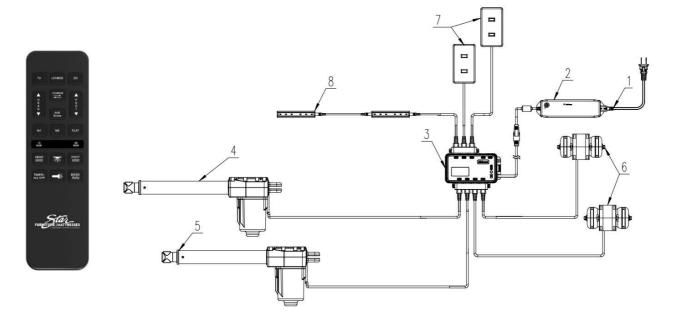

Before powering on, please install the accessories in place according to the system configuration diagram

Remote control button silicone diagram

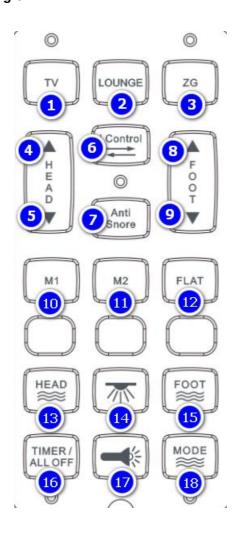

Fixed position size

	ZG	LOUNGE	TV	SNORE
Head mm	49	127	149	30
Foot mm	125	83	94	0

Remote control function description

Button	
label	Function
	Press the button, the motor will run to the TV position with one button (there is an initial position) Multiplexing function: Press and hold the FLAT button while pressing the TV button, the buzzer sounds, the backlight flashes, and the current motor status is
1	recorded to the TV position. (Power-off memory clear)
2	Press the button, the motor will run to the LOUNGE position with one button (there is an initi al position) Alternate function: Press and hold the FLAT button while pressing the LOUNGE button, the buzzer sounds, the backlight flashes, and the current motor status is recorded to the LOUNGE position. (Power-off memory clear)
3	Press the button, the motor will run to the ZG position

	with one button (there is an initial position) Alternate function: Press and hold the FLAT butt on while pressing the ZG button, the buzzer sounds, the backlight flashes, and the current motor status is recorded to the ZG position. (Power-off memory clear)
4	Press the button to extend the back motor, and the back motor extends to the position of m aximum stroke to stop. Release the button in the middle to stop the motor.
5	Press the button to retract the back motor, and the back motor retracts to the 0mm position to stop. Release the button in the middle, and the motor stops.

6	The Partner Control key has three options: ①Press the Partner Control key, the -10min light on the left side of the decorative strip will light up, and you can control bed A at this time; ② Press the Partner Control button again, the -20min light on the right side of the decorative st rip will light up, and the B bed can be controlled; ③Press the Partner Control button again, the left side + right side of the decorative strip -10min+20min lights at the same time, you can control the AB bed at the same time.
7	Press the button, the motor will run to the SNORE position with one button (there is an initia I position) Alternate function: Press and hold the FLAT button while pressing the SNORE button, the buzzer sounds, the backlight flashes, and the current motor status is recorded to the SNORE position. (Power-off memory clear)
8	Press the button to extend the leg motor, and the leg motor extends to the maximum stroke position to stop. Release the button in the middle to stop the motor.
9	Press the button to retract the leg motor, and the leg motor retracts to the 0mm position to s top. Release the button in the middle, and the motor stops.
10	Press the button, the motor will run to memory position 1 with one button (no initial value) Al ternate function: Press and hold the FLAT button while pressing the M1 button, the buzzer s ounds, the backlight flashes, and the current motor status is recorded to the memory position 1. (Not cleared after power failure)
11	Press the button, the motor will run to memory position 2 with one button (no initial value) Al ternate function: Press and hold the FLAT button while pressing the M2 button, the buzzer s ounds, the backlight flashes, and the current motor status is recorded to the memory position 2. (Not cleared after power failure)

13	Multiplexing function: press the button, if the head massage motor is not activated, it will start the head massage motor and enter the "CONSTANT" mode, if the head massage motor is activated, the vibration intensity of the head massage motor will be enhanced, a total of 3 in tensities, When the intensity increases to the maximum, press the button to turn off the mas sager. (Default 30min is off)
14	Bed bottom lamp on/off (default 5min off)
15	Multiplexing function: Press the button, if the foot massage motor is not activated, the foot massage motor will be activated and enter the "CONSTANT" mode. If the foot massage mot or has been activated, the vibration intensity of the foot massage motor will be increased, w ith a total of 3 intensities. When the intensity increases to the maximum, press the button to turn off the massager. (Default 30min is off)
16	Reuse function button: Before pressing the button, if the massager is in working state, after pressing the button, all massagers will be turned off, and the working time of the next mass age motor will be set to 10min, 20min and 30min respectively. The timing time is displayed by two indicator lights, and the maximum timing time is 30min.
	If the massager is not in working state, it will directly time the next massage motor working t ime.
	Press the button to turn on the flashlight, release the
17	button to turn off the flashlight.
18	Adjust the massage motor mode. After the massager has been turned on, press this button, the working massage motor enters the "PULSE" mode, press the button again, the massage motor enters the "WAVE" mode, press the button again, the massage motor enter s In "CONSTANT" mode, after pressing the button again, the massage motor enters the "PULSE" mode and cycles in sequence.
	•

Coding method: 1. First press the light on the left side of the Partner Control decorative strip for -10 minutes to light up, then press [remote control head up + foot up (4, 8) + control box code key] the buzzer will sound, indicating that it is paired with control box A The code is successful; press the light on the right side of the Partner Control decorative strip again for -20 minutes, and then press the [remote control head up + foot up (4, 8) + control box code key] buzzer sounds, indicating that it is with control box B The code pairing is

successful. 2. The remote control is powered off, and the default mode is A+B. 3. The control box has a reset function for the code key.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources



Manuals+,