



# Richmat HJSR69 Ble Smart Home Remote Control User Manual

[Home](#) » [Richmat](#) » Richmat HJSR69 Ble Smart Home Remote Control User Manual 

Richmat HJSR69 Ble Smart Home Remote Control



## Contents

- [1 Remote control button map](#)
- [2 Remote control function description](#)
- [3 Caution:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

## Remote control button map



## Remote control function description

Button label	Function
1	<p>The motor runs to the ZG position with one key (with initial value).</p> <p>Multiplexing function: long press the flashlight for about 5s, the backlight flashes, press ZG within 2s, the buzzer sounds 3 times, and record the current motor position, massager, and light bar status to ZG. (Power off does not clear)</p>

2	<p>Button lock function: long press this button for 5 seconds, the backlight flashes 3 times, and the remote control buttons are locked, and the remote control buttons are unavailable at this time;</p> <p>Press and hold the button again for 5 seconds, the backlight flashes 3 times, unlock the remote control button, and the remote control button can be used at this time.</p>
3	<p>UBL: Under-bed light on/off (steady on)</p>
4	<p>The motor runs to the SNORE position (with an initial value) with one key. In the one-key release mode, the massager is leveled and turned off after 15 minutes. Press any key to exit the timing; there is no timing in the continuous pressing mode.</p> <p>Multiplexing function: long press the flashlight for about 5s, the backlight flashes, press SNORE within 2s, the buzzer sounds 3 times, and record the current motor position, massager, and light bar status to SNORE. (Power off does not clear)</p>
5	<p>The motor runs to the M1 position with one key (the initial value is 0).</p> <p>Multiplexing function: long press the flashlight for about 5s, the backlight flashes, press M1 within 2s, the buzzer sounds 3 times, and record the current motor position, massager, and light bar status to M1. (Power off does not clear)</p>

6	PILLOW up: Press and hold this key, the PILLOW motor starts to rise, release this key, the PILLOW motor stops rising
7	PILLOW descending: Press and hold this key, the PILLOW motor starts to descend, release this key, the PILLOW motor stops descending
8	Back up: Press and hold this key, the back motor starts to rise, release this key, the back motor stops rising
9	<p>Torch on/off (default 15s). Reuse function:</p> <p>① Press and hold the button for 5s, the backlight flashes, enter the memory mode, press ZG /SNORE/M1 within 2s, the buzzer sounds “di di di”, and the current position of the motor and the status of the massager and light bar can be memorized.</p> <p>② Press and hold the flashlight + M1 at the same time for about 3s, the backlight flashes twice, and the buttons on all positions of the remote control enter the one-key release mode, which can reset all memory positions to the factory default memory positions at the same time.</p> <p>③ Press and hold the flashlight + FLAT at the same time for about 3s, the backlight flashes three times, the buttons at all positions of the remote control enter the continuous pressing mode, and the motor stops when the button is released.</p>
10	Leg rise: Press and hold this key, the leg motor starts to rise, release this key, the leg motor rises and stops

11	Back down: press and hold this key, the back motor starts to descend, release this key, the back motor stops descending
12	FLAT one-key reset, all motors retract to the minimum stroke position, turn off the massager , and keep the under-bed light in the state before pressing the button (no reset after power-on)
13	Leg descend: Press and hold this button, the leg motor starts to descend, release this button, the leg motor descends to stop
14	LUMBAR rise: press and hold this key, the LUMBAR motor starts to rise, release this key, the LUMBAR motor stops rising
15	LUMBAR descending: Press and hold this key, the LUMBAR motor starts to descend, release this key, the LUMBAR motor descends and stops

16	<p>If the head massager is not turned on, press the button to turn on the massager, the massager defaults to the state when it was turned off last time, if the massager is turned on, press the button to increase the intensity of the head massager, 3 intensities, according to: low → Medium → High order, the default time is 15 minutes, and it will continue to run when it reaches the highest intensity.</p>
17	<p>Turn on and off the massager: click this button to turn on the back and leg massager; click this button again to turn off the back and leg massager</p>
18	<p>If the foot massager is not turned on, press the button to turn on the massager, the massager defaults to the state when it was turned off last time, if the massager is turned on, press the button to increase the foot massager intensity, 3 intensities, according to: low → Medium → High order, the default time is 15 minutes, and it will continue to run when it reaches the highest intensity.</p>
19	<p>Decrease the intensity of the head massager, 3 intensities, and press the massager again to turn off when the lowest intensity is reached.</p>
20	<p>Mode switch—CONSTANT-low-speed WAVE-medium-speed WAVE-high-speed WAVE</p> <p>Press and hold for 5s to turn off the massager. Intensity remains the same after mode switching</p>

21	<p>Decrease the foot massager intensity, 3 intensities, and press the massager again to turn off when the lowest intensity is reached.</p>
<p><b>Pairing method:</b></p> <p>1. Continue to press the head up and foot down buttons (8, 13) until the backlight flashes to clear the code matching information of the remote control; power on the control box again, the control box will be in the code matching state within 60s, keep pressing the head of the remote control Press the down and foot up buttons (11, 10) until you hear the buzzer and the backlight flashes, indicating that the pairing is successful.</p> <p><b>Decoding method:</b></p> <p>[Remote head up + foot down (8,13)] The backlight flashes, indicating successful decoding</p>	

### Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## Documents / Resources

<div data-bbox="167 210 245 219">  </div> <div data-bbox="140 230 272 237"> Product function manual </div> <div data-bbox="191 304 225 315"> Smart home HJ2589 Ble </div>	<div data-bbox="319 248 1458 329"> <p><a href="#">Richmat HJSR69 Ble Smart Home Remote Control</a> [pdf] User Manual  HJ8258, 2AJJGHJ8258, HJSR69 Ble Smart Home Remote Control, HJSR69, Ble Smart Home Remote Control, Home Remote Control, Remote Control, Control</p> </div>
--	---

Manuals+,