

**Richmat**  
**HJSR96B**  
**Remote Control**



## Richmat HJSR96B Remote Control Owner's Manual

[Home](#) » [Richmat](#) » Richmat HJSR96B Remote Control Owner's Manual 

### Contents

- [1 Richmat HJSR96B Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Remote control function description](#)
- [5 Coding method](#)
- [6 FCC WARNING](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

**Richmat**

Richmat HJSR96B Remote Control



## Product Information

### Specifications

- **Model:** HJSR96B
- **Functions:** Remote control, multiplex functions, under bed light control, massage motor control
- **Timer:** Default 30 minutes for various functions
- **Strength Levels:** 3 levels for massage motor control
- **Compliance:** Class B digital device, FCC Part 15

### Product Usage Instructions

#### Remote Control Function Description:

Refer to the key label for specific functions such as SNORE, ZG, TV, M1, etc. Short press to activate the desired function.

#### Multiplex Functions:

Combine specific functions like FLAT with SNORE, ZG, TV, or M1 to record and set motor positions. Power off to clear settings.

#### Under Bed Light Control:

Toggle the under bed light on/off with a short press. Default auto-off time is 15 minutes.

#### Massage Motor Control:

Activate the head massager with various strength levels and timer settings. Press and hold for 3 seconds to turn off the massager.

#### Mode Switching:

Switch between CONSTANT, PULSE, and WAVE modes for different timer durations and functions.

### Coding Method:

Use the specified remote control head and foot rise combination along with the control box code key. Buzzer feedback indicates successful coding.

### FAQs

- **Q: How do I reset all motors to the minimum stroke position?**

A: Perform a one-click reset to retract all motors to the minimum stroke position.

- **Q: How can I adjust the timer for the massage motor working time?**

A: Use the function button to set timings of 10min, 20min, or 30min. The indicator light will display the selected timing.

- **Q: What is the default timer for the massage motor strength levels?**

A: The default time is 30 minutes for the massage motor strength levels. Press again to close when maximum strength is reached.

### Remote control function description



1. Short press release runs to SNORE position (with initial value). Multiplex function: (FLAT+SNORE), backlight flashes, buzzer sounds, record current motor position to SNORE position. (Power off to clear).
2. Short press release run to ZG position (with initial value). Multiplexing function: (FLAT+ZG), backlight flashing, buzzer ringing, record the current motor position to the ZG position. (Power off to clear).
3. Under bed light on/off (default: 15min).

4. Short press to release run to TV position (with initial value). Multiplexing function: (FLAT+TV), backlight flashing, buzzer sound, record the current motor position to the TV position. (Power off to clear).
5. One click reset, all motors retracted to the minimum stroke position.
6. Short press release runs to M1 position (no initial value). Multiplexing function: (FLAT+M1), backlight flashing, buzzer ringing, record current motor position to M1 position. (Power off does not clear)
7. Back up, release to stop
8. Lower back; Release stop
9. Back/foot rise at the same time, release to stop
10. Back/foot drop at the same time, release to stop
11. Feet rise; Release stop
12. Foot down, release to stop
13. Turn on/increase the strength of the head massager, "CONSTANT" mode, 3 strengths, the default time is 30 minutes, when the maximum strength is reached, press the massager again to close. (The upper indicator light is white, 1 gear: 1 light, 2 gear: 2 lights, 3 gear: 3 lights)
14. Function button: massage motor working time timing, respectively set 10min, 20min, 30min. The timing time is displayed through the indicator light, which is white  
Press and hold for 3S, the backlight flashes, and turn off the massager
15. Mode switching CONSTANT – PULSE – the WAVE light in blue:  
**CONSTANT:** 10 min, **PULSE:** 20 min, **WAVE:** 30 min
16. Turn on/increase the massager strength, "CONSTANT" mode, 3 strengths, the default time is 30 minutes, when the maximum strength is reached, press the massager again to close. (The upper indicator light is white, 1 gear: 1 light, 2 gear: 2 lights, 3 gear: 3 lights)

## Coding method

[Remote control head rise + foot rise + control box code key] Buzzer sounds indicating successful code

- The control box has a reset function for the code key
- The control box is powered on and reset, all motors are reset at the same time, and the reset process cannot be interrupted by any key

Remote control mutual learning function (A: learn remote control, B: learn remote control):

1. B learns A: Press and hold B's head down + foot down for 5s, and the flashlight is on. Press A's head up + foot up within 10S.
2. learning function release: long press B's head rise + foot drop 5s, flashlight light, indicating successful release.

## FCC WARNING


**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Documents / Resources**

<div><div>HJSR96B Product Catalog</div><div></div></div>	<div><a href="#">Richmat HJSR96B Remote Control</a> [pdf] Owner's Manual</div> <div>HJRF Module 2AJJGHJRF, 2AJJGHJRF hjrf, HJSR96B Remote Control, HJSR96B, Remote Control, Control</div>
---	---

**References**

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.