

# **RIGHT WEIGH 310-PP Series Onboard Load Scale User Manual**

Home » Right Weigh » RIGHT WEIGH 310-PP Series Onboard Load Scale User Manual



## **Contents**

- 1 RIGHT WEIGH 310-PP Series Onboard Load Scale User
- Manual
- 2 IMPORTANT!
- **3 PARTS REQUIRED** 
  - 3.1 Street Tee Fitting
  - 3.2 Male NPT Tube for 1/4" Air Line
- 4 Male Elbow Tube Fitting for 1/4" Air Line
- **5 SPECIFICATIONS & OVERVIEW**
- **6 SPECIFICATIONS & OVERVIEW**
- 7 MOUNT SCALE
- **8 INSTALL**
- 9 DUMP AIR FROM SUSPENSION SYSTEM
- **10 TEE INTO AIR SUSPENSION**
- 11 INSTALL NEW 1/4" AIR LINE & FITTING
- 12 ROUTE AIR LINE TO GAUGE
- 13 AIR UP SUSPENSION SYSTEM
- **14 CALIBRATE**
- 15 OPERATE & WEIGH
- **16 TROUBLESHOOT A PROBLEM**
- 17 WARRANTY & RETURN POLICY
  - 17.1 Return Policy and Authorization
  - 17.2 Repairs/Replacements
- 18 Read More About This Manual & Download PDF:
- 19 Documents / Resources
- 19.1 References
- **20 Related Posts**

## RIGHT WEIGH 310-PP Series Onboard Load Scale User Manual



#### **IMPORTANT!**


Please read instructions COMPLETELY and thoroughly before installation. Right Weigh, Inc. is not responsible or liable for product failure or vehicle damage due to improper installation. The installation requirements are outlined in this manual and should be followed thoroughly to avoid inaccuracy or damage to the product. It is also important to be aware of vehicle manufacturer policies before making modifications to the vehicle. Right Weigh, Inc. is not liable or responsible for issues regarding warranties with other manufacturers. This is the responsibility of the customer. If you are unsure about how these installation practices apply to your vehicle, please contact your vehicle or component manufacturer.

#### **PARTS REQUIRED**

These parts are included in the 310-RK (Retail Kit) products and are sold separately in the 101-SK kit:

## **Street Tee Fitting**

The thread size and type should match the thread size and type of the vehicle suspension

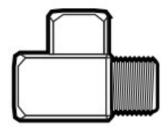

#### Male NPT Tube for 1/4" Air Line

The thread size and type should match the thread size and type of the vehicle suspension



# Male Elbow Tube Fitting for 1/4" Air Line

Tubing size to match the male straight air line fitting. 1/4" NPT to match the thread size of the fitting at the bottom of the load scale



1/4" Air Line

The amount of air line needed depends on the mounting location of the gauge




## **SPECIFICATIONS & OVERVIEW**

**Technical Specifications** 

Operating/Storage Temperature: -40° F to +185° F (-40° C to +85° C)

Enclosure: Black Polypropylene

Gauge Size: 3.5"

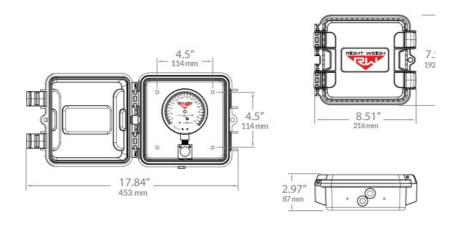

#### **SPECIFICATIONS & OVERVIEW**


The 310-PP series is designed for use on an axle group with a single height control valve suspension system. Within this series, there are different products designed for different axle group configurations. Before installation, make sure you have the proper gauge for your application:

<sup>\*\*</sup>Packaged kit including air line installation components

Suspension	Gauge – Pounds (LBS)	Gauge – Kilograms (KGS)
Single Axle	310-30-PP	310-16KG-PP
Tandem Axle	310-54-PP *310-HKANT40K-PP **310-54-RK	310-25KG-PP
Tri Axle	310-80-PP	310-30KG-PP

If you have the wrong gauge for your application, please call our technical support listed on page 2

The 310 Series gauge comes in a protective box with a mounting bracket and hardware. The following steps will walk you through how to correctly mount and install the scale. Be sure to choose a location that is easily accessible and safe from potential damage (forklift posts, tire caps, etc.)

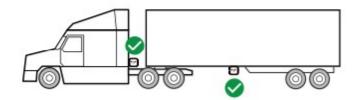


#### **MOUNT SCALE**

Choose a location to mount the scale that is easily accessible and safe from potential damage (forklift posts, tire

<sup>\*</sup>For use with Hendrickson VANTRAAX HKANT 40K or ULTRAA-K UTKNT 40K air suspension only

caps, etc.). Mount the bracket in the chosen location using two bolts to secure it. Install the gauge box to the bracket using supplied hardware.


Make sure to use BOTH supplied mounting bolts to secure the bracket to the vehicle. Using only one bolt can result in a cracked bracket and the scale falling off the vehicle

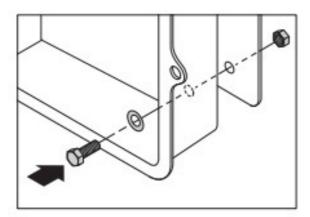

#### **INSTALL**

## **DUMP AIR FROM SUSPENSION SYSTEM**

#### **TEE INTO AIR SUSPENSION**

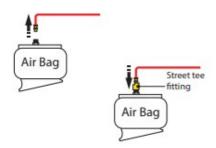

Remove the suspension air line fitting from the top of one of the air bags. Insert a street tee fitting into the top of the air bag that matches the thread size of the vehicle suspension. Reinstall the suspension air line and fitting into the street tee. For more information on the parts needed for air line installation, see page 4.

## **INSTALL NEW 1/4" AIR LINE & FITTING**

Install a new 1/4" air line and fitting into the remaining port on the tee.



## **ROUTE AIR LINE TO GAUGE**


Route the new 1/4" air line from the tee fitting assembly to the gauge. Secure air line with zip ties. Install male elbow tube fitting onto the bottom of the gauge. Insert the air line into the fitting and tighten the tube nut securely

#### **AIR UP SUSPENSION SYSTEM**

Check for leaks and that all fitting connections are secure. Pull red push/pull valve to check that air pressure is getting to the gauge.


## **CALIBRATE**

- 1. The vehicle must be fully loaded. For best results, calibrate with a loaded weight within 1500lbs or 750kgs of your typical axle group weight (DO NOT calibrate empty!)
- 2. Using a certified in-ground scale, obtain a loaded weight for the axle group attached to the gauge.
- 3. Park on a level surface. Shift the transmission to neutral and set the parking brakes.
- 4. Chock the wheels to prevent unexpected vehicle movement.
- 5. Release the parking brakes.
- 6. Make sure the Height Control Valve (HCV) has fully inflated the air bags. If needed, briefly dump the air from the suspension and allow the HCV to refill the system.
- 7. Pull the red push/pull valve so that it is in the fully open position.
- 8. Using a flathead screwdriver, turn the calibration screw on the dial face until the gauge matches the certified axle group weight.

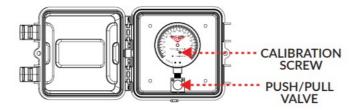

## **OPERATE & WEIGH**

- 1. Park on a level surface. Shift the transmission to neutral and set the parking brakes.
- 2. Chock the wheels to prevent unexpected vehicle movement. Release the parking brakes.
- 3. Make sure the Height Control Valve (HCV) has fully inflated the air bags. If needed, briefly dump the air from the suspension and allow the HCV to refill the system.
- 4. Pull the red push/pull valve so that it is in the fully open position. View the load scale to determine the on-the-ground axle group weight.
- 5. Push the push/pull valve so that it is in the full closed position.

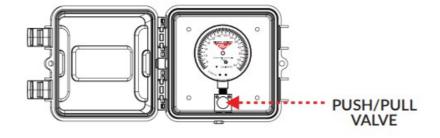

## **TROUBLESHOOT A PROBLEM**

PROBLEM	CAUSE	SOLUTION
Erratic / Inaccurate Weight Readings	The vehicle is not parke d on a level surface	Park on level concrete ground. Parking on sloped or ba nked surfaces will cause the vehicle weight distribution to shift between the axle groups. Additionally, if one or more of the vehicle's wheels are in a pothole, that could result in additional pressure or torque on the suspension air bags. This will cause the suspension to have a different air pressure than what is normally needed to hold up the given weight.
	The vehicle's brakes ar e on	Release the parking brakes when weighing and/or calib rating. When the  vehicle brakes are set, they could apply additional pres sure or torque on the suspension air bags. This will cause the suspension to have a different air pressure th an what is normally needed to hold up the given weight.
	There is a significant air leak in the suspension system	Check air lines for leaks. Having a leak could cause the HCV to refill the suspension at regular intervals to maintain the vehicle's ride height. If there is a significant leak, the gauge dis play will slowly decrease in value and then quickly increase in value when the HCV refills the suspension system.

The Height Control Valv e (HCV)

is malfunctioning or broken

If the HCV is not functioning correctly, the air pressure applied to the suspension system could be inconsistent and/or erratic. To test for an HCV problem, acquire a we ight reading from the Right Weigh gauge and write it do wn (refer to gauge operating instructions for proper pro cedure). Drive the vehicle around the block and return t o the same location. Acquire a second reading from the Right Weigh gauge. If the two readings are significantly different, then the HCV might be malfunctioning.

#### **WARRANTY & RETURN POLICY**

Right Weigh is committed to providing quality products that function as intended, and we always stand behind our workmanship. Our industry leading warranty is our best effort to express this commitment. Products manufactured or sold by Right Weigh, Inc. are warrantied to be free from significant defects in material and workmanship 3 years from date of purchase. During this time, and within the boundaries set forth in this warranty statement, Right Weigh, Inc. will, at its sole discretion, correct the product problem or replace the product.

This warranty shall not apply to product problems resulting from: (1) Improper application, installation, incorrect wiring, or operation outside of the approved specifications of the product. (2) Accidents, faulty suspension parts or power surges (3) Inadequate maintenance or preparation by the buyer or user (4) Abuse, misuse, or unauthorized modification. (5) Acts of God, lightning strike, floods, fire, earthquake, etc.

Right Weigh, Inc. assumes no responsibility or liability for any loss or damages resulting from use of Right Weigh, Inc. products.

In no event shall Right Weigh, Inc. be liable for direct, indirect, special, incidental or consequential damages (including loss of profits or loss of time) resulting from the performance of a Right Weigh, Inc. product. In all cases, Right Weigh, Inc. liability will be limited to the original cost of the product in question. Right Weigh, Inc. reserves the right to make improvements in design, construction, and appearance of products without notice

#### **Return Policy and Authorization**

Before returning any product, please obtain a Return Merchandise Authorization number (RMA#) by calling Customer Service at 503-628-0838 or e-mailing <a href="mailto:support@rwls.com">support@rwls.com</a>. Include the RMA# and information regarding the reason for the return with the returned product. Shipping costs for returns must be prepaid by the customer. For your protection, items must be carefully packed to prevent damage in shipment and insured against possible damage or loss. Right Weigh, Inc. will not be responsible for damage resulting from careless or insufficient packing or loss in transit.

An RMA# must be obtained by the original purchaser before any product can be returned. Only new, unused products may be returned. Installed, used, damaged, modified or customized products can not be returned for credit. Credit will be issued to the original purchaser after evaluation by Right Weigh, Inc.

### Repairs/Replacements

An RMA# must be obtained before any product can be returned. Right Weigh, Inc. will evaluate returned products at no charge. If Right Weigh, Inc. determines that the returned product is under warranty it will repair the product or parts thereof at no charge, or if unrepairable, replace it with the same or functionally equivalent product whenever possible. Right Weigh, Inc. will return the product at its expense via a shipping method (carrier to be at

sole discretion of Right Weigh, Inc.) equal to or faster than the method used by the customer. Products or parts thereof not covered by warranty will be repaired or replaced at customer expense upon authorization by the customer. Right Weigh, Inc. will return the repaired product at customer expense via a shipp

## Read More About This Manual & Download PDF:

#### **Documents / Resources**



RIGHT WEIGH 310-PP Series Onboard Load Scale [pdf] User Manual 310-PP Series Onboard Load Scale, 310-PP Series, Onboard Load Scale, Scale

## References

- V Setting up your scale Right Weigh
- Wanuals & Resources Right Weigh

Manuals+,