



ring Keypad In-app Setup User Guide

[Home](#) » [Ring](#) » ring Keypad In-app Setup User Guide 

ring Keypad In-app Setup User Guide



Contents

1 Quick Start Guide

2 Installation

3 Placement

4 Documents / Resources

5 Related Posts

Quick Start Guide

In-app Setup

1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, tap Set Up a Device and find the Keypad in the Security Devices menu.

3. Follow the in-app instructions to complete setup.


Installation

1. Choose a convenient location so you can arm and disarm easily as you come and go.
2. You can rest the Keypad on a flat surface or install it on a wall with the bracket and screws provided.
3. The Keypad works whether plugged in or running on the rechargeable battery.
Charge the Keypad using the power adapter and USB cable provided.

If you're planning to use the Keypad unplugged, you should fully charge it first.

For additional help, visit: ring.com/help


Placement

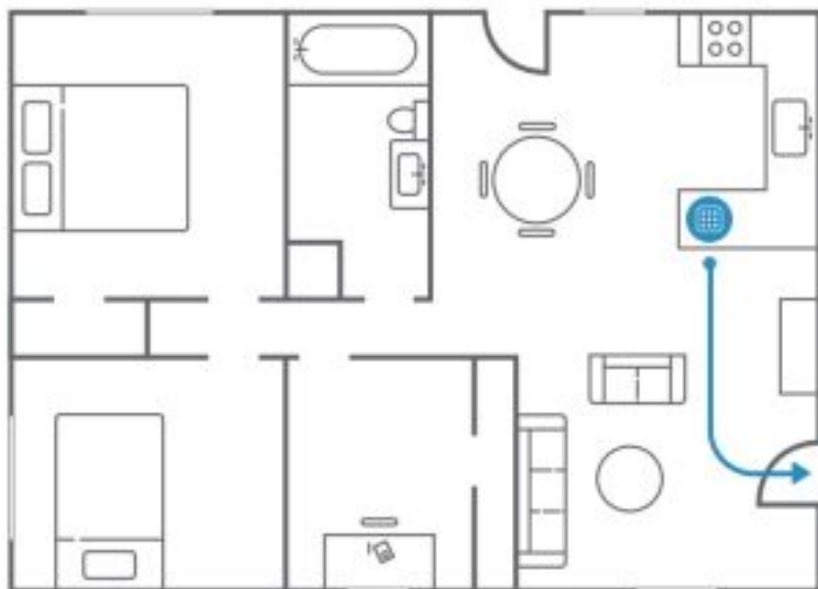

For Z-Wave technical information, visit ring.com/z-wave

©2020 Ring LLC or its affiliates. Ring, Always Home, and all related logos are trademarks of Ring LLC or its affiliates.

Documents / Resources

	ring Keypad In-app Setup [pdf] User Guide ring, Keypad, In-app Setup
---	---