

# RIPTUNES CDPR-10BT Portable Bluetooth CD Player User Guide

## Contents

- [1 RIPTUNES CDPR-10BT Portable Bluetooth CD Player](#)
- [2 SAFETY PRECAUTION](#)
- [3 UNIT DIAGRAM](#)
- [4 PREPARATION BEFORE USE](#)
- [5 PLAY CD](#)
- [6 PLAY FROM USB MEMORY STICK](#)
- [7 BLUETOOTH® PAIRING AND PLAYING](#)
- [8 BLUETOOTH® TRANSMITTING](#)
- [9 CARE AND MAINTENANCE](#)
- [10 TROUBLESHOOTING](#)
- [11 ONE YEAR LIMITED WARRANTY 90 DAYS](#)
- [12 Documents / Resources](#)

## RIPTUNES CDPR-10BT Portable Bluetooth CD Player

PLAYER/BLUETOOTH REPRODUCITOR DE CD/BLUETOOTH LECTEUR CD/BLUETOOTH

### WARNINGS AND CAUTIONS

#### SAFETY PRECAUTION

1. Do not attempt to disassemble the casing as the laser beam used in this player is harmful to the eyes.
2. If any liquid or solid object falls into the cabinet, stop operation immediately.  
Unplug the player and have it checked by qualified personnel.
3. Avoid touching or poking at the lens, as it may damage the lens and cause the player to operate improperly.
4. Keep the player away from heat sources such as radiators, heaters, stoves, candles, and other heat-generating products or naked flames. The device can only be used in moderate climates. Avoid extremely cold or warm environments. The working temperature should be between 0° and 35°C.
5. Avoid using the player near strong magnetic fields.
6. Do not use the player in wet or moist areas such as bathrooms, steamy kitchens, or near swimming pools.
7. This player must operate on the power source specified on the specification label.
8. Keep the player away from animals, as some animals may bite power cords.
9. Unplug this player during lightning storms or when it is unused for a long period.
10. Ensure that this player is adjusted to a stable position.
11. Damage caused by using this player in an unstable position, vibrations, shocks, or failure to follow any other

warning or precaution contained within this user manual will not be covered by warranty.

12. This player cannot be subjected to low air pressure at high altitudes during use, storage, or transportation.

13. To clean the device, use a soft dry cloth. Do not use solvents or petrol-based fluids.

## **UNIT DIAGRAM**

1. Lanyard Hole
2. USB Slot
3. Headphone Jack
4. Stereo Speakers
5. LCD Screen
6. Power Switch ON/OFF
7. Charging Port (DC 5V)
8. Previous/Fast Rewind (Press: previous track; Press & Hold: fast rewind)
9. Next/Fast Forward (Press: skip to next track; Press & Hold: fast forward)
10. Mode Switch (Press: change USB, Bluetooth, or CD mode)
11. REP./EQ button (Press: change mode to repeat mode; Press and hold for 2 sec.: switch sound effect, ROC-POP-JAZ-CLA-FLt)
12. Bluetooth Transmitting (Press to turn on/off – connect/disconnect ear pods)
13. Volume Decrease Button
14. Stop Play
15. Play/Pause Button
16. Volume Increase Button
17. CD Door Open Switch
18. CD Door

## **PREPARATION BEFORE USE**

Unpack the package carefully and remove all accessories from the packing. Verify that the following accessories are present before setting up the unit.

- One (1) Main CD Player Unit
- One (1) USB Type-C Charging Cable
- One (1) User Manual
- One (1) Velvet Carrying Bag

## **POWER SOURCE**

- This player is powered by a lithium polymer battery.
- Please charge it when the battery is low. Empty battery icon will show and flash.
- Using a USB Type-C cable (included), connect the USB side to the USB power adapter (not included).
- Connect the Type-C side into the DC 5V IN-port on the unit.
- The unit will now charge, and the battery icon will show movement.

- When fully charged, the battery icon will form solid bars . It takes approximately 4 hours to fully charge unit using DC5V 2A.

**Caution:**

- Do not charge in humid conditions.
- Do not charge in direct sunlight.
- Do not charge using damaged plug.
- Do not charge broken or damaged unit.
- Unplug unit before maintenance or cleaning.

**TURN ON/OFF THE PLAYER**

1. Switch CD player power switch to ON position to begin using. LCD screen will show “CD” and flash “—” then begin to read the disc in player. LCD screen will show “No” if there is no disc in player, or disc in player is unreadable or damaged.
2. Switch CD play power switch to OFF position when finished using player.

**EARPHONE CONNECTION**

1. The CD player has a built in speaker, however you can use earphones which helps conserve power.
2. When using ear phones, connect them to the headphone jack and set volume to low. Increasing the volume from low until a comfortable volume is achieved will help protect your hearing

**VOLUME INCREASE AND DECREASE**

1. Volume controls are indicated by the VOL+ and VOL- buttons.
  2. Press and release VOL+ or VOL- to increase or decrease volume incrementally.
  3. Press and hold VOL+ or VOL- to increase or decrease volume rapidly, release to stop.
- Warning:** Listening at high volumes for long periods of time may result in hearing loss.

**PLAY CD****Loading CD Disc:**

1. Please note that the CD door is located at the bottom of the CD player. Slide door switch to the DOOR OPEN position to unlock and open the CD door.
2. Place the CD disc into the compartment with its label facing up.
3. Close the CD door, and the spring hinge will secure it. Playing CD Disc:
  - Once the CD door is closed, the player will attempt to read the disc.
  - The LCD screen will display the number of playable tracks on the disc and start playing from track 1.
  - To pause playback, press and release the Play/Pause button while a disc is playing. The LED screen will flash the track number.
  - Press and release the Play/Pause button to resume playback if paused.

- Press and release the Next/Fast forward button to skip to the next track. The LED screen will update the track number and display the playing time.
- Press and hold the Next/Fast forward button to advance quickly through the current track. Release the button to resume normal playback.
- Double-click the Previous/Fast rewind button to skip back to the previous track. The LED screen will update the track number and display the playing time. Press and hold the Previous/Fast rewind button to reverse quickly through the current track, then release the button to resume normal playback.
- **Note:** Quickly double-click the Previous/Fast rewind button to skip to the previous track. A single click will skip to the beginning of the current track.
- To stop playback, press and release the STOP button.

### **Track Repeat and Random Playback:**

1. To repeat a single track, press and release the REP./EQ button until the repeat sign " " flashes on the LCD screen. The current track will replay repeatedly until play is stopped.
2. To repeat all tracks, press and release the REP./EQ button until the repeat sign " " is fixed on the LCD screen. The player will replay all tracks on the CD until play is stopped.
3. To play randomly, press and release the REP./EQ button until the random playback sign "RAND" appears on the LCD screen. The player will play tracks randomly until play is stopped.
4. To resume normal sequential playback, press and release the REP./EQ button until neither the repeat sign (" ") nor the random playback sign shows on the LCD screen. The player will play tracks sequentially and stop after the last track on the disc has played.

### **Change Sound Effects**

1. To change sound effects style, press and hold REP./EQ button for 2 seconds. Style choices include: ROC-POP-JAZ-CLA-FLt (FLt is normal sound).

## **PLAY FROM USB MEMORY STICK**

### **USB Playback:**

- Insert a USB device (maximum 32GB) with compatible media files (MP3 or WMA) into the USB socket.
- Press and release the mode button until "USB" appears on the LCD screen.
- The player will attempt to read the USB device, and the total number of files/folders will be displayed on the LCD screen.
- It will automatically play the first track.
- The controls for USB playback are identical to CD playback controls.

## **BLUETOOTH® PAIRING AND PLAYING**

### **Using Bluetooth® Connection:**

- This function allows you to wirelessly stream audio from a Bluetooth ®-enabled device such as laptops, tablets,

smartphones, and more.

- Before using a wireless device with Bluetooth®, ensure that the device has Bluetooth® switched on.
- Establish a connection between the device and the player through a process called “pairing.”

### **Pairing Bluetooth® Device:**

1. Press and release the mode button repeatedly to switch to Bluetooth ® mode. The “BLUE” on-screen indicator will flash, indicating that the player is ready to sync with a paired device. If there is no paired device available, it will be ready to pair with a new device.
2. On your Bluetooth® device, navigate to the Bluetooth® settings menu.
3. Search for available devices and select the player (CDPR-10BT) when it is found. If prompted for a passkey, enter “0000”.
4. Once the pairing process is complete, the player is ready to play, and the “BLUE” on the screen will show steadily.
5. Use the Bluetooth® device to control playback functions such as play, stop, next, and previous.
  - If the pairing process fails, the “BLUE” on the screen will flash slowly.  
Press the mode button to return to pairing mode and repeat steps 2-5.
  - The player will automatically connect to your Bluetooth® device the next time it is within range (10 meters) and has Bluetooth® enabled.

## **BLUETOOTH® TRANSMITTING**

### **Using Bluetooth® Transmission:**

When playing a CD or USB, you can transmit the sound via Bluetooth ® and sync it with other Bluetooth® devices such as Bluetooth® earbuds, Bluetooth® speakers, and more.

1. Before transmitting, it is recommended to turn off the Bluetooth® on other surrounding devices.
2. Turn on the Bluetooth® of the device you want to sync with this player.
3. Press and release the TRANSMIT button on the player. The Bluetooth® transmit icon will start flashing on the screen.
4. Ensure that the player and the Bluetooth® device are within pairing range (within 10 meters) and wait for a few seconds.
5. Once successfully paired, you will hear the sound from the Bluetooth ® device. The Bluetooth® transmit icon on the player’s screen will remain steady.
6. If the pairing fails, repeat steps 2-4 to retry the pairing process.

## **CARE AND MAINTENANCE**

1. Use a soft, damp cloth to clean the unit. Do not wet the cloth or use any solvents or detergents.
2. **CAUTION:** Never allow water or other liquids to enter the unit while cleaning.
3. If the CD skips or does not play, clean the disc. Wipe the disc from the center out using a cleaning cloth. After playing, store the disc in its case
4. If the CD lens is dusty, clean it with a brush-blower. Blow gently on the lens several times to remove the dust, and then use the brush to further clean it. Fingerprints can be removed with a cotton swab moistened with

alcohol.

## **TROUBLESHOOTING**

### **CUSTOMER SUPPORT**

For questions not answered in this manual, or for warranty service, please contact Riptunes Technical Support:

By phone: 1-888-217-7688 (9:00 AM to 6:00 PM ET)

By e-mail: [service@rip-tunes.com](mailto:service@rip-tunes.com)

Online: [www.rip-tunes.com](http://www.rip-tunes.com)

© 2023 Riptunes by Impecca, a division of LT Inc., Wilkes Barre, PA.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

## **ONE YEAR LIMITED WARRANTY 90 DAYS**

### **LIMITED WARRANTY 90 Days**

Riptunes™ warrants this product against defects in material and workmanship to the original purchaser as specified below provided product is registered online within fourteen (14) days of purchase.

If the product is determined to have a manufacturing defect, within a period of ninety (90) Days from the date of the original purchase, Riptunes™ will repair or replace the product at no charge to you in the U.S.A. After ninety (90) days it will be the responsibility of the consumer. Shipping costs to and from our warranty service center is the sole responsibility of the consumer.

To obtain warranty service by an authorized Riptunes™ service center, please email us at:

[support@riptunes.com](mailto:support@riptunes.com) to obtain a Repair and Maintenance Authorization (RMA) number and to locate the service center nearest you. Once authorized, you must mail the product, to the authorized Riptunes™ service center in its original product packaging materials or equivalent, to prevent damage while in transit. Further, should Riptunes™ determine that the product is outside of the Warranty term, Riptunes™ will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out of warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be nonrefundable. Riptunes™ specifically excludes from this warranty any non-electric/mechanical attachments, accessories and disposable parts including but not limited to outside case, connecting cables, batteries and AC adaptors. Riptunes™ reserves the right to repair or replace defective products with the same, equivalent or newer models. We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available it will be replaced with a model of equal or higher specification. Normal "Wear and Tear" is not covered by this warranty. Further, Riptunes™ hereby reserves the right to determine "Wear and Tear" on any and all products. Tampering or opening the product casing or shell, will void this warranty in its entirety.

Also this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Riptunes™; has been serviced by a non-authorized repair center of Riptunes™; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; cosmetically damaged; was not imported by Riptunes™; was not manufactured according to specification of the United States market; improper installation or neglect; damaged due to improper packaging in shipment; damaged due to natural disasters; if the serial number for the product has been removed or defaced; or for cosmetic damages.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE (1) YEAR PARTS AND NINETY (90) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

RIPTUNES™ IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO RIPTUNES™, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. RIPTUNES LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Riptunes™ dealer, agent or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Riptunes™. Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you have other rights, which vary from state to state.

Note: Our Warranty center ships only within Continental U.S., excluding Alaska and Hawaii. Also this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Riptunes™; has been serviced by a non-authorized repair center of Riptunes™; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; cosmetically damaged; was not imported by Riptunes™; was not manufactured according to specification of the United States market; improper installation or neglect; damaged due to improper packaging in shipment; damaged due to natural disasters; if the serial number for the product has been removed or defaced; or for cosmetic damages. ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE (1) YEAR PARTS AND NINETY (90) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL

PURCHASE OF THIS PRODUCT. THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

RIPTUNES™ IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO RIPTUNES™, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. RIPTUNES LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Riptunes™ dealer, agent or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Riptunes™. Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you have other rights, which vary from state to state.

**Note:** Our Warranty center ships only within Continental U.S., excluding Alaska and Hawaii.

**Important:** Be Sure to Register Your Product at [WWW.RIP-TUNES.COM](http://WWW.RIP-TUNES.COM) within 14 Days Riptunes™ USA PA 18711 [www.rip-tunes.com](http://www.rip-tunes.com) [support@rip-tunes.com](mailto:support@rip-tunes.com)

Do not send any returns to this address, as it might get lost and this will delay your repair and service process.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Documents / Resources**

	<p><a href="#">RIPTUNES CDPR-10BT Portable Bluetooth CD Player</a> [pdf] User Guide 2BCXS-CDPR10BT, 2BCXSCDPR10BT, CDPR-10BT, CDPR-10BT Portable Bluetooth CD Play er, Portable Bluetooth CD Player, Bluetooth CD Player, CD Player</p>
---	---