



RIPTUNES MVR-3200 Voice Recorder Audio Player User Guide

[Home](#) » [RIPTUNES](#) » RIPTUNES MVR-3200 Voice Recorder Audio Player User Guide 

RIPTUNES

Voice Recorder and Music Player



USER'S GUIDE
MODEL MVR-3200

Contents

- 1 SAFETY PRECAUTIONS
- 2 WHAT'S IN THE BOX?
- 3 PRODUCT DIAGRAM
- 4 GETTING STARTED
- 5 RECORDING MENU AND FEATURES
- 6 MUSIC PLAYER MODE
- 7 CONNECTING TO A COMPUTER
- 8 SYSTEM SETTINGS MODE
- 9 CHARGING AND OTHER FUNCTIONS
- 10 TECHNICAL SUPPORT
- 11 LIMITED WARRANTY
- 12 Documents / Resources

SAFETY PRECAUTIONS

READ THIS MANUAL CAREFULLY BEFORE OPERATING AND RESERVE IT FOR FUTURE REFERENCE. REFER TO IT WHEN ENCOUNTERING ANY OPERATING PROBLEM.

1. WARNING: To reduce the risk of electric shock or damage to the player, do not disassemble the player. There are no user-serviceable parts inside. Contact technical support for assistance.
2. WARNING: To prevent fire or electric shock hazards, do not expose the player to rain or moisture (including drips or splashes). Objects filled with liquids, such as vases and water bottles, should not be placed on or near the player. Do not touch the unit with wet hands.
3. WARNING: Do not expose the player to excessive heat, such as direct sunlight, fire, or other heat sources.
4. Do not place objects on top of the player.
5. This player includes a rechargeable internal battery. Dispose of this player properly, respecting your local laws for electronics and battery disposal.

Personal and Music Data

Users must always keep backups of their data.

Rip Tunes is not responsible for the loss or damage of personal data caused by misoperation of software, hardware, product maintenance, battery replacement or other unexpected situations.

WHAT'S IN THE BOX?

Congratulations on your purchase of this great new personal voice recorder and music player from Rip Tunes, which includes the following features:

- Sleek ultra-slim design with metal zinc alloy casing
- Integrated high sensitivity Condenser microphone $\geq 80\text{dB}$
- VAR Voice Activated Recording w/adjustable sensitivity
- Recording monitoring & Scheduled recording
- PCM high-quality audio is supported
- MP3,APE,WAV,FLAC lossless music playback
- Built-in speaker and 3.5mm Headphone jack
- Built-in rechargeable Lithium battery

- Hold lock function
- 32GB memory Continuous record: up to 24 hours



Your Player /
Recorder




USB Cable



This User Manual




Warranty

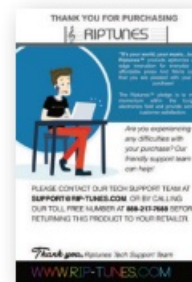

Tech Support
Card

PRODUCT DIAGRAM

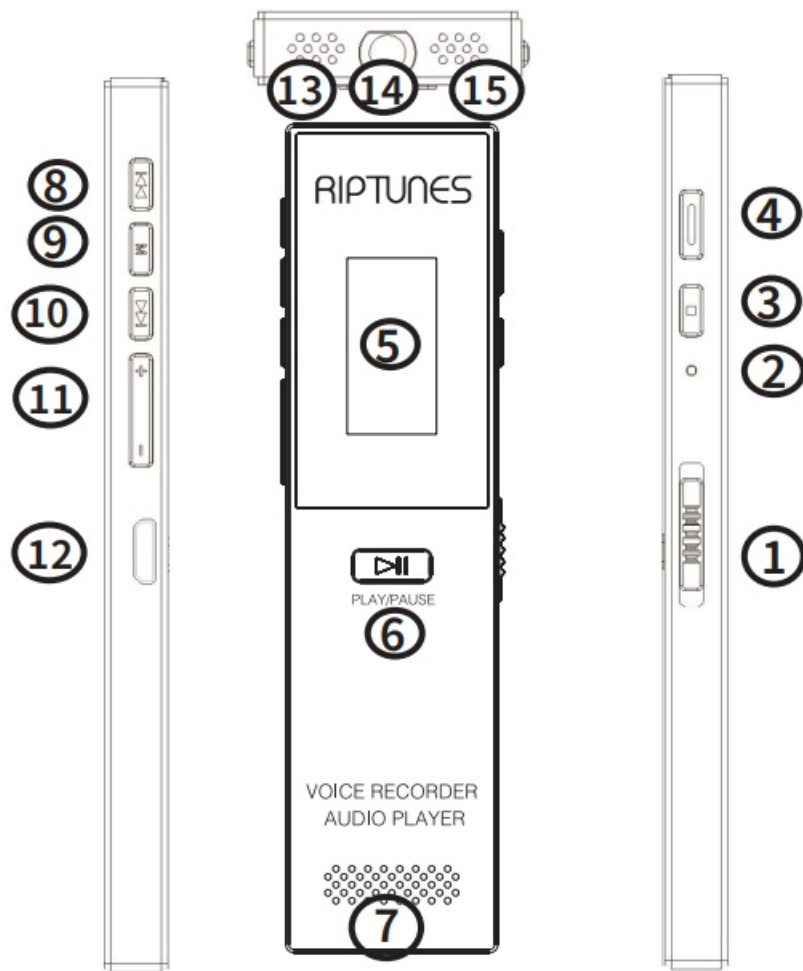

1. Power / Lock switch
2. Emergency Reset (requires a pin)
3. Stop button (save voice recording)
4. Recording button
5. Display screen
6. Play/ Pause
7. Built-in speaker
8. Previous track: (hold for rewind)
9. Menu key
10. Next track: (long press for fast forward)
11. Volume + up / – down
12. Micro USB Port (top of unit)
13. Microphone
14. Headphone jack
15. Microphone

GETTING STARTED

To power on your new device, Press up on the Power Switch (1) for 3 seconds.

The unit will power up into the main menu, with Recorder mode selected.

You may want to plug it in to give it a charge first. To power off, Press up on the Power Switch for 3 seconds. The message “see you” will be displayed and the unit will power down.



Getting right to recording!

The unit powers on in Recorder mode, where you can record and playback your voice.



Press Record to record your voice! Press Play/Pause while recording to stop recording temporarily, then press Play/Pause again to resume. When you press Stop, the recording ends.

The device will now enter Recording Playback mode, with this last recording selected. Press Play to hear the recording you just made.

Use the REW and FF buttons to select other past recordings for playback.

The track number will change on the bottom of the display. Press and hold the REW and FF buttons to scan forward and backward in the recording by 5 seconds at a time.

Press Play/Pause to play and pause the recording play back. Use the Volume keys on the lower left at any time to change the volume.

Remember, pressing the Record button at anytime will start a new recording from any menu of this device (unless it is already recording).

RECORDING MENU AND FEATURES

When the unit says it is in recorder mode (with the microphone picture on the previous page), press Menu (M) to access the recording menu options. Use REW and FF to move up and down in the menu and press Menu (M) to select an option. Press Stop to go back in the menu.

Recorder Mode Menu Options

Recording Library – This brings up a screen where you can select a recorded memo for playback.

When a recording is selected, the device will enter recording play back mode as seen on the previous page.

Recording Format – Select whether to Record in MP3 or WAV. MP3 takes up less space on the device.

Set rec bitrate – You can set the recording quality here. Higher bit rates may sound slightly better but take up more space on your device. Lower bitrates may sound more grainy but take up less space. In most cases, the default setting is fine and you will not need to change this.

Record Subsection – Limit the recording time to 30, 60, 90 or 120 minutes. By default, there is no limit.

Gain Input Section- This sets the level (sensitivity) of the microphone from 1 to 6. Usually, the default (level 4) will be ok. Set it lower if recordings are loud and distorted.

VAR mode – Automatic Voice Recording. When enabled, voice recording will automatically pause and resume based on whether sound is heard through the microphone. So, if you are speaking for a while and then stop, the recorder will pause and not record the silence. As you begin speaking again, recording resumes. This way, the resulting recording does not have any gaps from when you stopped speaking. So can also set the sensitivity here. Usually, the default is best, but you may have to adjust it in noisier environments so that it stops recording when you stop talking.

Monitor Setting – When set to ON, you will hear your voice through the headphones while recording.

Scheduled Recording – Set a specific time and day for the unit to wake up and automatically start recording.

Setting for Recording Playback Mode

The menu options for recording playback mode are different from Record mode. To access the recording playback options, long-press the menu button, or press Stop and then Menu (M) if a recording is playing. Use REW/FF to move up and down in the menu and press Menu (M) to select.

Press Stop to go back in the menu.

Play Mode – Repeat, Shuffle, etc.

Repeat Settings – Select how many times to repeat if the repeat mode is on.

Equalizer – Select an EQ preset (e.g. Jazz, Rock) to enhance or diminish treble, bass, and midrange frequencies.

Variable Speed – Increase or Decrease the speed of play back. This will play your recordings faster but will not affect the pitch or have the “chipmunk” effect.

Bookmarks – Each recording can have its own book marks. You can set a book mark for the current recording time here, or jump to a book mark that was previously made for this recording. For example, if you are listening to a 3-hour recording and want to make a book mark at 1hr 15min, press and hold the menu key during playback and set a book mark in this menu.

Delete One – Delete one recording

Delete All – Delete multiple recordings

A -> B repeat mode While the unit is playing a recording, the menu button can be used to select A -> B playback looping. If you press Menu (M) once, “A” is displayed and the current time of the track is set “A”. If you press it a second time the end point is set, the player will now loop playback between A and B, displaying “A -> B” on the screen. Pressing Menu (M) once again will reset the A -> B point and begin normal playback again.

MUSIC PLAYER MODE

To access the Music player mode, go to the main menu screen (press stop a few times if necessary) and use the REW/FF buttons to select Music.



This is the mode where you play all of the music that is loaded on the device. From Music Player mode, Press Menu (M) To access your music library.

Use the REW/FF buttons to highlight a menu option and press the Menu button to select it. You can exit or go back in the menu at any time by pressing the Stop button on the other side of the device. If music is playing, you'll need to press stop before the menu can be accessed.

From this menu, you can select whether to play all songs, play by artist, album, or genre. You can also "refresh playlist" after new music is copied from your computer so the player can see it.

CONNECTING TO A COMPUTER

You can transfer music or voice recordings to and from your PC by connecting a micro-USB cable to the unit and then to a PC. It will display as a drive letter or volume with the Folders "MUSIC" and "RECORD". Here, you can organize and delete files, or transfer files between your PC and the device.

SYSTEM SETTINGS MODE

To access the System Settings menu, go to the main menu screen (press stop a few times if necessary) and use REW/FF to select System. Note: Recording settings are changed in Record Mode, not here in settings.



Press Menu (M) To access system settings. Use the REW/FF buttons to highlight a menu option and press the menu button again to select it. You can exit or go back in the menu at any time by pressing the Stop button on the other side of the device.

System Setting options are as follows:

Date and Time – Set the date and time

Language – Set the language

Backlight – Screen brightness (high levels affect battery life)

Sleep timer – Set a timer to shut the device down

Brightness – Adjust Screen Brightness with /w volume keys

Password – Set a numeric password for the device Disk

Space – See how much space is remaining

Player Info – Technical System Info

Format Device – Delete all music and recordings

Factory Settings – Reset all information and settings

CHARGING AND OTHER FUNCTIONS

Charging:

Plug the device into a USB charging port to charge the battery. A “charging” indicator will be seen, even if the device is shut down. When it is fully charged, it will display a notification stating so.

Other features and functions:

If you let the unit sit for 30 seconds, the time and date will be displayed, then the screen will go blank after a few more seconds. Pressing any button will return to the last screen you were on. If the unit sits for 3 minutes, it will power off automatically if nothing is playing back.

After 3 minutes of inactivity, the player will power off automatically to save battery life.

Lock Function: Pressing the lock button downward will lock the keys of the device. None of the buttons will perform any function in this mode, except to reactivate the screen if the device is displaying the date and time.

TECHNICAL SUPPORT

For questions not answered in this manual, or for warranty service, please contact Retunes Technical Support:

By phone: 1-888-217-7688 (9:00 AM to 6:00 PM ET)

By e-mail: service@rip-tunes.com

Online: www.rip-tunes.com

© 2020 Riptunes by Impecca, a division of LT Inc., Wilkes Barre, PA.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Storage:	32GB
Screen:	Size: 0.9 inch TFT screen
Resolution:	80*160 LCD display
Battery:	Lithium 3.7V 180mAh
Microphone:	Built-in condenser
SNR:	≥80dB
Compression:	WAV 24BIT 48KHz APE/FLAC: 16BIT 48KHz
Recording Quality:	1536/1024/512/128/64 kbps
Recording Format:	WAV MP3
File System:	FAT 32
Rec. sample rate:	8-48KHz
Working Temp:	-5 °C -40 °C
Data Interface:	Micro USB 2.0
OS Support:	Windows XP/ VISTA/ 10
Recording life:	App 48 hrs @WAV 1536Kbps
Size (L*W*H mm):	103*26*7.5

LIMITED WARRANTY

ONE YEAR LIMITED WARRANTY / 90 Days

Riptunes™ warrants this product against defects in material and workmanship to the original purchaser as specified below provided product is registered online within fourteen (14) days of purchase.

PARTS – if the product is determined to have a manufacturing defect, within a period of one (1) year from the date of the original purchase, Riptunes™ will repair or replace the product parts at no charge (for parts) to you in the U.S.A. and Canada.

LABOR – if the product is determined to have a manufacturing defect, within a period of ninety (90) Days from the date of the original purchase, Riptunes™ will repair or replace the product at no charge to you in the U.S.A. and Canada, After ninety (90)

days it will be the responsibility of the consumer.

Shipping costs to and from our warranty service center is the sole responsibility of the consumer.

To obtain warranty service by an authorized Riptunes™ service center, please email us at: support@riptunes.com to obtain a Repair and Maintenance Authorization (RMA) number and to locate the service center nearest you. Once authorized, you must mail the product, to the authorized Riptunes™ service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Riptunes™ determine that the product is outside of the Warranty term, Riptunes™ will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out of warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be nonrefundable.

Riptunes™ specifically excludes from this warranty any non-electric/mechanical attachments, accessories and disposable parts including but not limited to outside case, connecting cables, batteries and AC adaptors. Riptunes™ reserves the right to repair or replace defective products with the same, equivalent or newer models. We reserve the right to either repair or replace product at our discretion. Replacement may be either new or

refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available it will be replaced with a model of equal or higher specification.

Normal “Wear and Tear” is not covered by this warranty. Further, Riptunes™ hereby reserves the right to determine “Wear and Tear” on any and all products.

Tampering or opening the product casing or shell, will void this warranty in its entirety.

Also this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Riptunes™; has been serviced by a non-authorized repair center of Riptunes™; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; cosmetically damaged; was not imported by Riptunes™; was not manufactured according to specification of the United States market; improper installation or neglect; damaged due to improper packaging in shipment; damaged due to natural disasters; if the serial number for the product has been removed or defaced; or for cosmetic damages.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE (1) YEAR PARTS AND NINETY (90) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN.

RIPTUNES™ IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO RIPTUNES™, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. RIPTUNES LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Riptunes™ dealer, agent or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Riptunes™.


Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you have other rights, which vary from state to state.

Note: Our Warranty center ships only within Continental U.S., excluding Alaska and Hawaii.

Important: Be Sure to Register Your Product at WWW.RIP-TUNES.COM within 14 Days
Riptunes™ USA | PA 18711 | www.riptunes.com | support@rip-tunes.com

*Do not send any returns to this address, as it might get lost and this will delay your repair and service process.

Documents / Resources

 <p>RIPTUNES Voice Recorder and Music Player Enregistreur de Voix et Reproducteur de Musique Enregistreur vocal et lecteur de musique</p> <p>USER'S GUIDE GUÍA DE USUARIO GUIDE DE L'UTILISATEUR MODEL V9 R-3200</p>	<p>RIPTUNES MVR-3200 Voice Recorder Audio Player [pdf] User Guide</p> <p>MVR-3200 Voice Recorder Audio Player, MVR-3200, Voice Recorder Audio Player, Recorder A udio Player, Audio Player, Player</p>
---	--