




## RIPTUNES WAS-142 Dual Wake Alarm Clock User Guide

[Home](#) » [RIPTUNES](#) » RIPTUNES WAS-142 Dual Wake Alarm Clock User Guide 

# RIPTUNES

DUAL WAKE ALARM CLOCK



USER'S GUIDE

## Contents

- 1 SAFETY PRECAUTIONS
- 2 INTRODUCTION
- 3 WHATS IN THE BOX?
- 4 PRODUCT DIAGRAM
- 5 GETTING STARTED
- 6 SETTING THE ALARM
- 7 CARE AND MAINTENANCE
- 8 TROUBLESHOOTING
- 9 SPECIFICATIONS
- 10 TECHNICAL SUPPORT
- 11 LIMITED WARRANTY (90 DAYS)
- 12 Documents / Resources
  - 12.1 References
- 13 Related Posts

## SAFETY PRECAUTIONS

READ THIS MANUAL CAREFULLY BEFORE OPERATING AND RESERVE IT FOR FUTURE REFERENCE. REFER TO IT WHEN ENCOUNTERING ANY OPERATING PROBLEM.

1. WARNING: To reduce the risk of electric shock or damage to the clock , do not disassemble it. There are no user-serviceable parts inside.
2. WARNING: To prevent fire or electric shock hazard, do not expose the clock to rain or moisture (including drips or splashes). Objects filled with liquids, such as vases and water bottles, should not be placed on or near the clock. Do not touch the unit with wet hands.
3. WARNING: Do not expose the unit or its batteries to excessive heat, such as direct sunlight, fire, or other heat sources.
4. Do not use attachments not provided by the manufacturer, except for devices connected to the AUX-IN jack.
5. If the unit becomes damaged, do not attempt to repair the unit yourself. Refer all servicing to authorized personnel.
6. Do not place objects on top of the clock, or block any ventilation openings.
7. Unplug the power from the outlet during lightning storms or when the clock is not in use.
8. Pay attention to the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. If the provided plug does not fit into your outlet, consult an electrician to replace the obsolete outlet.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the clock device.
10. Dispose of this product properly, respecting your local laws for electronics and battery disposal.

**WARNING:** THE POWER CORD ON THIS PRODUCT CONTAINS LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER HANDLING.

## FCC WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the

user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

#### **RF WARNING FOR PORTABLE DEVICES:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## **INTRODUCTION**

Thanks for purchasing this Alarm Clock from Riptunes! Please read all of these instructions carefully and keep them in a safe place for future reference.

## **FEATURES**

 
- Dual Alarm Settings
- 1.4-inch Big Red Digits for easy visibility
- USB Port for charging devices
- Full range Dimmer to adjust display brightness
- Weekday display on the screen

- Full range Volume setting for customized sound
- Big Snooze button (5 minutes)
- Alarm settings for weekdays and weekends
- Easy Alarm/Clock Set Up
- 12/24-hour Clock & Alarm format
- Quick Nap Alarm Setup/Sleep timer (up to 2 hours)
- AC power input with included AC/DC power adaptor
- Alarm/Clock backup powered by 3 AAA batteries (sold separately)

## **WHATS IN THE BOX?**

- Your Alarm Clock
- AC/DC Power Adapter
- This User Manual
- Warranty Card
- Tech Support Card

## **PRODUCT DIAGRAM**

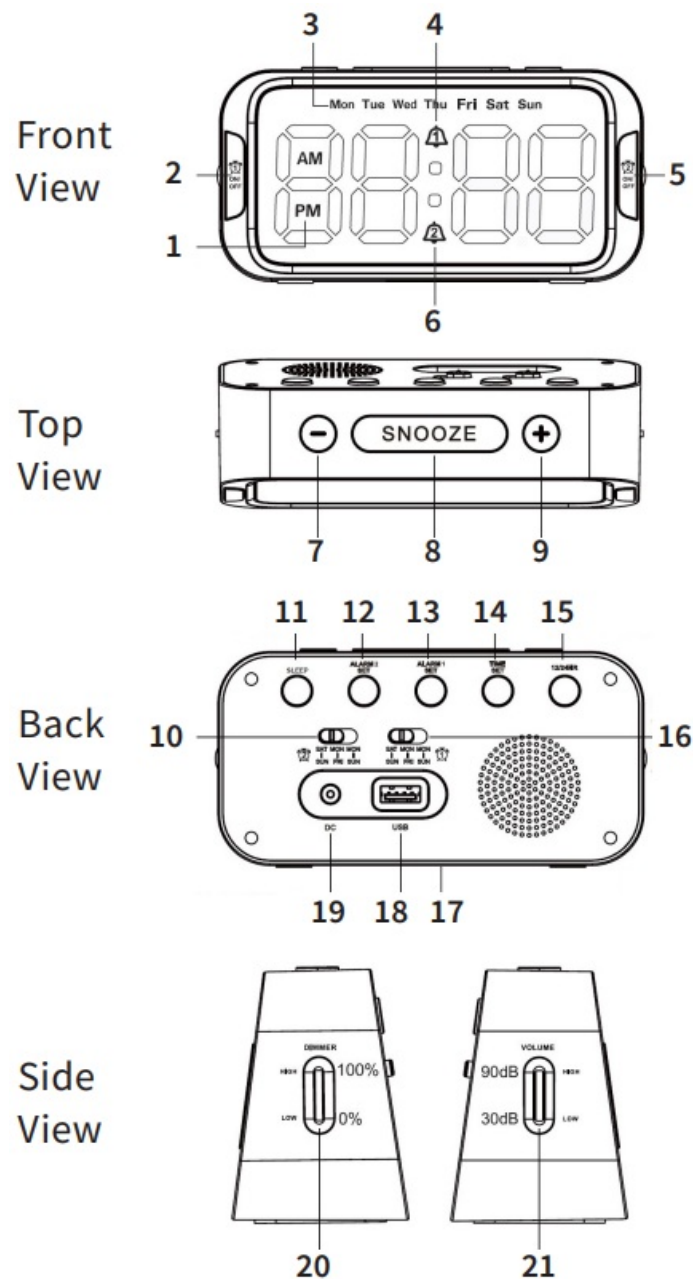

- |   |   |
|---|---|
| 1. AM/PM Indicator                            | 13. ALARM 1 SET                               |
| 2. ALARM 1 ON/OFF                             | 14. TIME SET                                  |
| 3. DAY OF WEEK Indicator                      | 15. 12/24 HR MODE SWITCH                      |
| 4. ALARM 1 Indicator                          | 16. 3 OPTION WAKE-UP DATES SWITCH for ALARM 1 |
| 5. ALARM 2 ON/OFF                             | 17. BATTERY COMPARTMENT                       |
| 6. ALARM 2 Indicator                          | 18. USB CHARGING PORT                         |
| 7. DOWN- BUTTON for settings                  | 19. POWER CONNECTOR                           |
| 8. SNOOZE BUTTON                              | 20. DIMMER CONTROL (0-100%)                   |
| 9. UP+ BUTTON for settings                    | 21. VOLUME CONTROL (30-90dB)                  |
| 10. 3 OPTION WAKE-UP DATES SWITCH for ALARM 2 |   |
| 11. NAP TIMER BUTTON                          |   |
| 12. ALARM 2 SET                               |   |

## GETTING STARTED

 
### BATTERY INSTALLATION (BATTERIES NOT INCLUDED)

This clock uses 3 AAA batteries to back up the time and alarm settings in the case of a power outage. These batteries are not for everyday operation. The clock should stay plugged in when in use.


To install batteries, open the battery cover on the bottom of the clock. Then, match the “+” and “-” signs with the batteries. Replace the battery cover. If the clock is not used for an extended period of time, remove the batteries before storing it.

## SETTING THE TIME

1. Press TIME SET until the hour blink.
2. Press (-/+) to adjust the HOUR, hold for rapid setting.
3. Press TIME SET to confirm the HOUR and set MINUTES.

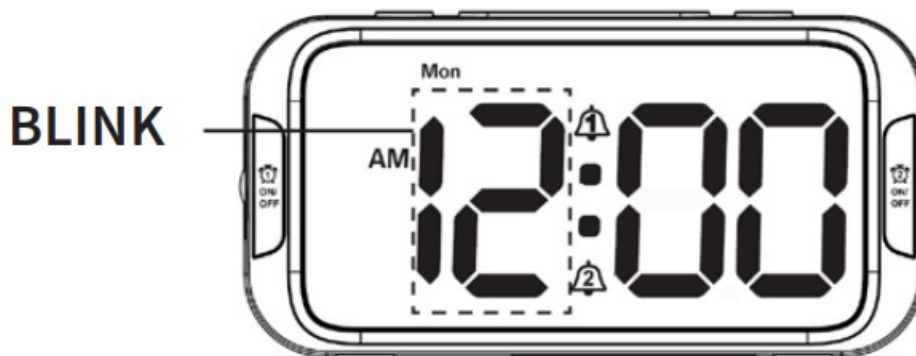

 4. Press (-/+) to adjust the MINUTES, hold for rapid setting.

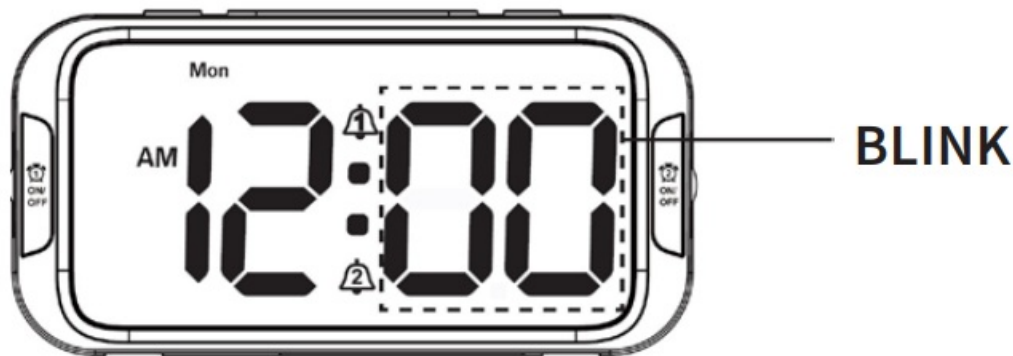

5. Press TIME SET to confirm the MINUTES and set DAY OF WEEK.
6. Press (-/+) to select DAY OF WEEK.



7. Press TIME SET once more to confirm and exit.



**NOTICE:** At this point, time will automatically set if left flashing for more than 10 seconds.

### SWITCH TIME FORMAT (12/24 HR TIME)

Press 12/24HR to toggle between 12 and 24-hour modes (the default is the 12-hour time format).

**NOTICE:** When using the 12-hour time format, the AM/PM icon will appear to suggest morning/afternoon time.

## SETTING THE ALARM

 
To switch the alarm on or off, press the “” ON/OFF or “” ON/OFF.  
The alarm icon will appear when the alarm is on.



## SETTING ALARM 1 AND ALARM 2


- ALARM 1 and ALARM 2 are set in the same way (hold for rapid setting).
- Press ALARM 1 SET to enter ALARM 1 HOUR setting. Use (- / +) to adjust the hour.

**BLINK**

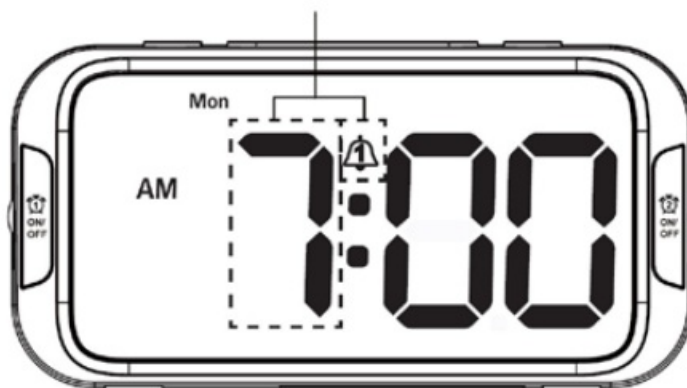

- Press ALARM 1 SET to confirm and enter MINUTE setting. Use (- / +) to adjust the minute.

**BLINK**

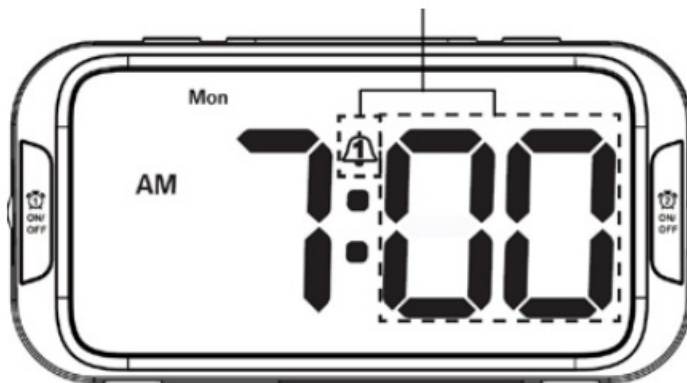 


- Press ALARM 1 SET to confirm and exit from Alarm 1 Setting Mode.
- NOTICE: The default alarm volume is maximum (90dB). Slide the VOLUME knob at the left side of the clock to adjust the volume within the range of 30-90dB.

## SLEEP SETTING

 Press the SLEEP button to choose the duration (10min, 20min, 30min, 40min, 50min, 60min, 70min, 80min, 90min, 120min, or off) after which the alarm goes off.

## ALARM FREQUENCY SETTING

Each of the two alarms has 3 frequency options: MON-SUN (All-7-day), MON-FRI (Weekdays), SAT-SUN

(Weekends). Slide the  to set the wake-up days in the back.

## SNOOZE/TURN OFF DAILY ALARM

- When the alarm goes off, press SNOOZE to snooze for a while; the alarm will go off again after 5 minutes.
- To cancel the snooze at any time or to turn off the alarm for the day while it is sounding, press any of the buttons except the SNOOZE button. The alarm will go off again at the same time the next day.

## BRIGHTNESS CONTROL

Slide the DIMMER knob at the right side of the clock to adjust the display brightness (HIGH: 100%, LOW: 0%).

## BATTERY OPERATED MODE

Insert 3 \* AAA batteries (Not Included) into the Battery Compartment.

The screen will show for 8 seconds and then go to sleep to save battery. Press the largest SNOOZE button to check the time within 8 seconds. The screen will stay on when plugged into the outlet.

**NOTICE:** In Battery Operated Mode, the clock has all functions except for USB charging your electronic devices.

## USB CHARGING PORT

Connect a USB charging cable to charge your cellphone or other smart devices.

## CARE AND MAINTENANCE



**CAUTION:** Unplug the unit before cleaning!

Replace the back-up batteries every year or so to ensure your alarms still go off if there is a loss of power. Remove the batteries whenever the clock is unplugged or stored somewhere.

A soft cloth or a paper towel may be used to clean your clock. Do not use corrosive cleaners or chemical solutions on the clock. Keep the clock clean and dry to prevent any issues.

## TROUBLESHOOTING

PROBLEM	SOLUTION
No power to unit	<ul style="list-style-type: none"><li>• Connect the power cord to a working outlet. The clock does not fully operate on batteries.</li></ul> Batteries are only for preserving the time and alarm settings in the event of a power outage.
No sound from the speaker	<ul style="list-style-type: none"><li>• Make sure volume is up, and the unit has power.</li><li>• Make sure that the correct mode is selected for the music source you are using. Use the SOURCE button on the top of the clock to change between AM, FM and AUX.</li><li>• If in AUX mode, make sure the sound source is connected securely and playing audio, with its volume up.</li></ul>

## SPECIFICATIONS

Dimensions: 175 x 106 x 75 mm

Power Source: AC: 120V 60Hz. Battery

back-up: DC 4.5v (3x AAA Batteries)

Display: 1.4" Red LED display

## TECHNICAL SUPPORT



For questions not answered in this manual, or for warranty service, please contact Riptunes Technical Support:

By phone: 1-888-217-7688 (9:00 AM to 6:00 PM ET)

By e-mail: [service@rip-tunes.com](mailto:service@rip-tunes.com)

Online: [www.rip-tunes.com](http://www.rip-tunes.com)

© 2023 Riptunes by Impecca, a division of LT Inc., Wilkes Barre, PA.

## LIMITED WARRANTY (90 DAYS)

Riptunes™ warrants this product against defects in material and workmanship to the original purchaser as specified below provided product is registered online within fourteen (14) days of purchase. If the product is determined to have a manufacturing defect, within a period of ninety (90) Days from the date of the original purchase, Riptunes™ will repair or replace the product at no charge to you in the U.S.A. After ninety (90) days it will be the responsibility of the consumer.

Shipping costs to and from our warranty service center is the sole responsibility of the consumer.

To obtain warranty service by an authorized Riptunes™ service center, please email us at: [support@riptunes.com](mailto:support@riptunes.com) to obtain a Repair and Maintenance Authorization (RMA) number and to locate the service center nearest you. Once authorized, you must mail the product, to the authorized Riptunes™ service center in its original product packaging materials or equivalent, to prevent damage while in transit.

Further, should Riptunes™ determine that the product is outside of the Warranty term, Riptunes™ will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out of warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be nonrefundable.

Riptunes™ specifically excludes from this warranty any non-electric/mechanical attachments, accessories and disposable parts including but not limited to outside case, connecting cables, batteries and AC adaptors. Riptunes™ reserves the right to repair or replace defective products with the same, equivalent or newer models.

We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available it will be replaced with a model of equal or higher specification.

Normal "Wear and Tear" is not covered by this warranty. Further, Riptunes™ hereby reserves the right to determine "Wear and Tear" on any and all products.

Tampering or opening the product casing or shell, will void this warranty in its entirety.

Also this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Riptunes™; has been serviced by a non-authorized repair center of Riptunes™; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; cosmetically damaged; was not imported by Riptunes™; was not manufactured according to specification of the United States market; improper installation or neglect; damaged due to improper packaging in shipment; damaged due to natural disasters; if the serial number for the product has been removed or defaced; or for cosmetic damages.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE (1) YEAR PARTS AND NINETY (90) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN. RIPTUNES™ IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO RIPTUNES™, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. RIPTUNES LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Riptunes™ dealer, agent or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Riptunes™.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you have other rights, which vary from state to state. Note: Our Warranty center ships only within Continental U.S., excluding Alaska and Hawaii.

# RIPTUNES

**Important:** Be Sure to Register Your Product at [WWW.RIP-TUNES.COM](http://WWW.RIP-TUNES.COM) within 14 Days

Riptunes™ USA PA 18711


[www.rip-tunes.com](http://www.rip-tunes.com)

[support@rip-tunes.com](mailto:support@rip-tunes.com)

\*Do not send any returns to this address, as it might get lost and this will delay your repair and service process.

---

## Documents / Resources

	<p><a href="#">RIPTUNES WAS-142 Dual Wake Alarm Clock</a> [pdf] User Guide</p> <p>WAS-142 Dual Wake Alarm Clock, WAS-142, Dual Wake Alarm Clock, Wake Alarm Clock, Alarm Clock</p>
---	--

## References

- [rip-tunes.com](http://www.rip-tunes.com)
- [Riptunes](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.