

 **RIVIAN**
Camp Speaker



Rivian Camp Speaker User Manual

[Home](#) » [RIVIAN](#) » Rivian Camp Speaker User Manual 

Contents

- [1 Rivian Camp Speaker User Manual](#)
- [2 Introduction](#)
- [3 Overview](#)
- [4 SPEAKER SPECIFICATIONS](#)
- [5 GETTING STARTED](#)
- [6 Operation](#)
- [7 Power States](#)
- [8 Resetting the Speaker](#)
- [9 Troubleshooting and Safety](#)
- [10 FAQs](#)
- [11 References](#)



Rivian Camp Speaker User Manual




Introduction

Rivian Camp Speaker is a portable and durable audio solution designed to enhance your outdoor adventures. Engineered by Rivian, this speaker offers premium sound quality and is built to withstand the elements, making it perfect for camping, hiking, and other outdoor activities. With a sleek design and easy-to-use functionality, the Rivian Camp Speaker is more than just a music player—it's a reliable companion for every adventure. Whether you're relaxing by the campfire or exploring remote trails, this speaker delivers exceptional performance.

Accessories

- CAMP SPEAKER

Overview

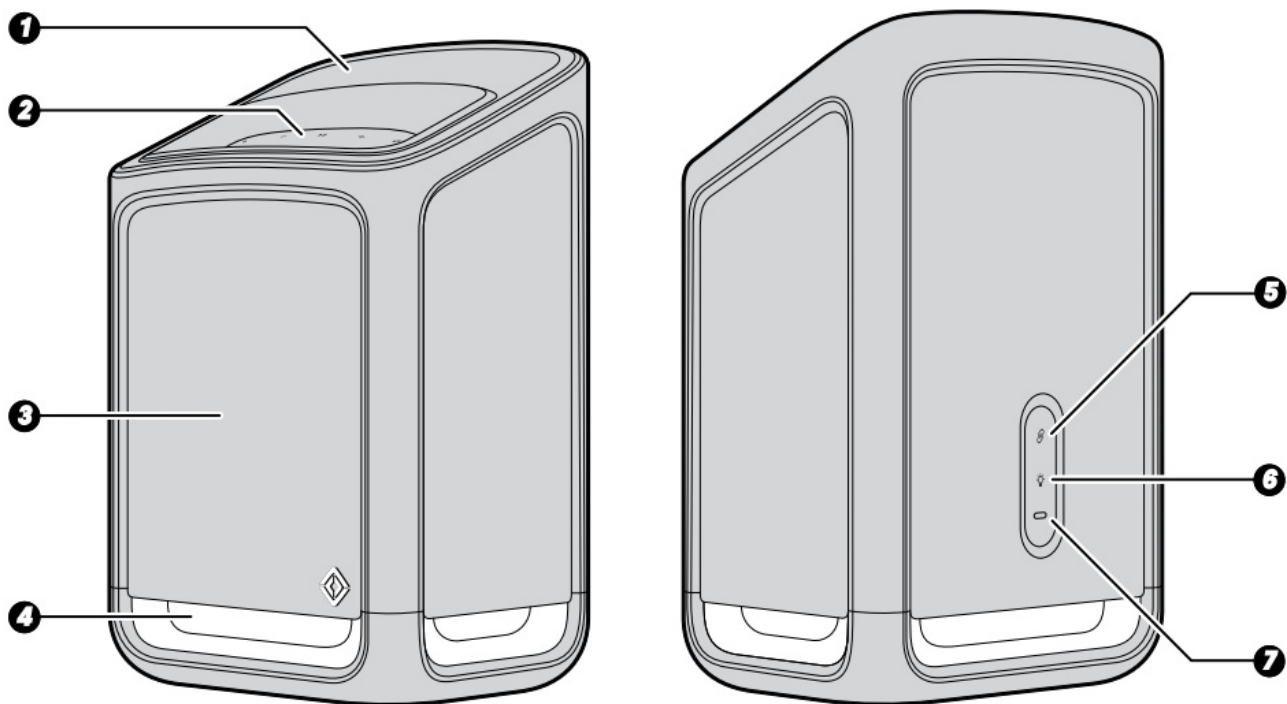

Item	Description
1	Handle
2	Audio controls
3	Fabric speaker covers
4	Lantern
5	Connect button
6	Lantern button
7	USB-C port

SPEAKER SPECIFICATIONS


Item	Value
Model	RCS 1.0
Dimensions (height x length x width)	9.9 in x 6.7 in x 5.1 in (252 mm x 170 mm x 128.5 mm)
Weight	5.7 lb (2.6 kg)
Battery capacity (minimum)	32 Watt hours
Charge time (maximum)	3 hours
Play time (minimum, audio only)	6.5 hours
Lantern (60% brightness)	3.5 hours
Input power	30 Watts
Input rating	Type C: DC 5 V / 9 V / 15 V / 20 V Pogo pin DC 12 V
Output rating	Type C: DC 5 V / 2 A
Ambient temperature (operating)	32 to 104°F (0 to 40°C)
Safe storage temperature (non-operating)	Up to 185°F (85°C)

GETTING STARTED

If your vehicle is equipped with a Rivian Camp Speaker, locate it in the Accessory Dock of the center console.

IMPORTANT

The speaker needs to be fully charged before initial use. Undock the speaker and plug it into a power source. Use a USB-C cable with power delivery similar to a laptop charger instead of a phone charger for faster charging time.

Check the charge level for a green light by pressing the Lantern  button twice.



UPDATES

The speaker uses the vehicle's connectivity to receive updates when docked.

CLEANING THE SPEAKER

To maintain the look and functionality of the speaker, occasionally inspect it for wear and tear through regular use. Wipe the speaker with a soft dry cloth for surface stains.

WARNING

Don't submerge the speaker in liquid. Don't use chemical cleaning agents to clean the speaker.

Battery

CHECKING CHARGE LEVEL

On the speaker, press the Lantern  button two times.

- Green: 75% to 100%
- Amber: 35% to 74%
- Red: 0% to 34%

CHARGING THE SPEAKER

When docked, the speaker automatically charges as the vehicle drives. When undocked, the speaker can be charged when plugged into a USB-C source. The LED light above the USB-C connector at the rear of the speaker pulses to indicate when it charges. The LED light shows as solid white when the speaker is fully charged. A warning audio tone plays when the battery power falls to 5% remaining. The speaker powers down on its own if it is not charged.

NOTE

Normal operation will not work if the battery temperature falls outside the allowed temperatures of 32 to 104°F (0 to 40°C).

CHARGING WITH A USB-C CABLE

When the speaker is not docked, you can charge the speaker by connecting to a power source. Use a USB-C cable with power delivery similar to a laptop charger instead of a phone charger for faster charging time. Charging times may vary, but it takes between 3 hours (with power delivery) to 12 hours (without power delivery) to fully charge a depleted speaker.






Operation



BUTTONS

The control buttons at the top of the speaker appear once the speaker powers on.



Actions

Icon	Color	Name	Result
	White (Off) Blue (Bluetooth On)	Connect (Bluetooth)	<p>When the speaker turns on, hold down for 2 seconds to start or stop Bluetooth pairing. The icon blinks slowly while in pairing mode and stops blinking when pairing is complete.</p> <p>Hold down for 30 seconds to perform a hardware reset.</p>
	White	Lantern	<p>If the speaker is in Standby mode, press to cycle the lantern through Low, Medium, High, and Off states.</p> <p>When the lantern lights up, hold down for 2 seconds to turn off the lantern.</p>
	White	Action	<p>To reset the speaker, hold down for 3 seconds to turn it completely off. Then hold down for 3 seconds to power it back on.</p>
	White	Volume –	<p>Press to decrease audio volume in single steps.</p> <p>Hold down to accelerate decreasing the audio volume.</p>
	White	Play/Pause	<p>Press to toggle between playing and pausing audio.</p> <p>Press 2 times to skip to the next track.</p> <p>Press 3 times to go back to the previous track.</p> <p>Hold down for 7 seconds to put the speaker in Standby mode.</p>

Icon	Color	Name	Result
	White	Volume +	Press to increase audio volume in single steps. Hold down to accelerate increasing the audio volume.
	White (Off) Red (Muted)	Mic Mute	Press to toggle between muting and unmuting the microphone.
		Play Next*	Press to skip to the next song or to the next radio station. Hold down to fast-forward through the current song or skip to the next radio station.
		Play Previous*	Press to go back to the start of the current song or to the previous radio station. Press continuously to skip to prior songs or to prior radio stations. Hold down to rewind through the current song or skip to the previous radio station.

Handled on the device playing content, not on the speaker.


WARNING

Playing the sound system at high volumes can cause hearing damage.

Power States

Mode	State	Behavior
Off	Not connected	Buttons are dark
Standby	Connected to Bluetooth battery-saving mode	Buttons are softly lit
On	In use	Lantern is on Music is playing

UNDOCKING THE SPEAKER

The speaker unlocks once the vehicle is in Park, or when the vehicle unlocks. Pull the speaker straight out by the handle to remove it from its dock. You can also unlock or lock the speaker from its dock on the center display by going to Settings  > Connect > Dock.

NOTE

To avoid damage to the latch, gently pull on a speaker after unlocking it from the dock. Don't pull the speaker too hard.

CAUTION

Don't store items in the speaker's dock. This may damage the charging contacts within the dock.


DOCKING THE SPEAKER

The speaker powers down when it docks and begins to charge as the vehicle drives. Ensure that the speaker is properly latched in the dock.



NOTE

The speaker locks in place when the vehicle is in motion.

TURNING ON THE SPEAKER

- If the speaker is on standby, press any button to wake it.
- If the speaker is off, hold down the Action button  for 3 seconds to wake it.



CONNECTING WITH BLUETOOTH

When the speaker isn't docked inside the vehicle, press the Connect  button for 2 seconds on the speaker to enter pairing mode, or manually connect to it from the Bluetooth® menu on your smartphone. The Connect light blinks  blue when pairing and becomes solid blue when connected. The speaker stays connected to that device until docked inside the vehicle or connected to another device. If no Bluetooth device is connected, the speaker searches for devices to pair with for 30 seconds. After the speaker establishes a Bluetooth connection, it remembers up to eight Bluetooth devices. When you turn it on again, the speaker automatically searches for a known device that's available nearby.

NOTE

The speaker supports Bluetooth devices version 4.2 and up.

USING LOW BASS MODE

Low Bass Mode turns off lower-frequency bass for a quieter listening environment, such as in areas with designated quiet hours. Press the  Volume and Volume  buttons simultaneously for 7 seconds to toggle Low Bass Mode on and off.

USING THE LANTERN


The lantern is controlled by a button at the top of the bezel. Cycle through the lantern brightness with a series of short presses: 30%, 60%, 100%, 0% (off). At any time, hold down the Lantern button to max out the brightness to 100%.

CAUTION




The Camp Speaker's lantern is not replaceable. When the lantern reaches its end of life, contact Rivian to replace your Camp Speaker.

Resetting the Speaker

HARDWARE RESET

Perform a hardware reset when the speaker hangs and doesn't respond to button presses. Hold down the Connect  button for 30 seconds to perform a hardware reset.

FACTORY RESET









Perform a factory reset to completely reset the speaker to its initial state. Hold down the Action , Volume Down , and Play/Pause  buttons simultaneously for 7 seconds to perform a factory reset.

CAUTION

A factory reset erases data about device IDs, pairings, and preferences from the speaker's memory.

Troubleshooting and Safety**TROUBLESHOOTING**

If the speaker doesn't work as intended, refer to the following troubleshooting guide before you contact Rivian.

If This Happens	Try This
Speaker doesn't turn on	<p>Remove the speaker from its dock. This triggers the speaker to turn on.</p> <p>Make sure the battery has enough charge.</p> <p>Charge the battery with a USB-C adapter for 3 hours. The USB-C light pulses white to indicate charging in progress.</p> <p>The USB-C light turns solid white to indicate a fully-charged battery.</p> <p>Hold down the Connect  button for 30 seconds to perform a hardware reset.</p>
No sound	<p>Press Volume Up .</p> <p>Make sure Bluetooth connection has successfully paired.</p> <p>Make sure audio runs on the streaming source (phone or tablet).</p> <p>Hold down the Action , Volume Down , and Play/Pause  buttons simultaneously for 7 seconds to perform a factory reset.</p>
Weak signal	<p>Check if the device is within range for Bluetooth: <98 ft (<30 m).</p> <p>Move the speaker closer to the device or network that it is connected to.</p> <p>If the speaker can't pair with the device once it's within range, choose the option to "forget the device," and then try again to pair the speaker to the device.</p> <p>Hold down the Action , Volume Down , and Play/Pause  buttons simultaneously for 7 seconds to perform a factory reset.</p>
"Speaker not fully docked" message appears	<p>Firmly push in the speaker to ensure that it is properly latched in the dock.</p> <p>If this message occurs frequently, remove the speaker from the dock and contact Rivian to have the hardware inspected.</p>
Lantern doesn't work	Contact Rivian for lantern repair.

FAQs

What is the battery life of the Rivian Camp Speaker?

The Rivian Camp Speaker offers up to 15 hours of playtime on a single charge, depending on the volume and usage.

Is the Rivian Camp Speaker waterproof?

Yes, the Rivian Camp Speaker is designed to be water-resistant, making it suitable for outdoor use in various weather conditions.

How do I charge the Rivian Camp Speaker?

The speaker can be charged using a USB-C cable, which is typically included with the product.

Can I pair multiple Rivian Camp Speakers together?

Yes, the speaker supports Bluetooth pairing with other Rivian Camp Speakers for a surround-sound experience.

What is the range of the Bluetooth connection?

The Rivian Camp Speaker has a Bluetooth range of up to 30 feet, allowing you to control it from a distance.

Does the speaker have a built-in microphone for phone calls?

Yes, the Rivian Camp Speaker comes with a built-in microphone, enabling hands-free phone calls.

Is the Rivian Camp Speaker compatible with all Bluetooth devices?

Yes, it is compatible with most Bluetooth-enabled devices, including smartphones, tablets, and laptops.

How durable is the Rivian Camp Speaker for outdoor use?

The speaker is built with a rugged, shockproof design, ensuring durability during outdoor adventures.

Does the speaker have any auxiliary input options?

No, the Rivian Camp Speaker relies on Bluetooth for wireless connectivity and does not have an auxiliary port.

What colors are available for the Rivian Camp Speaker?

The Rivian Camp Speaker typically comes in a sleek black or grey finish, complementing its modern, minimalist design.

Download PDF: [Rivian Camp Speaker User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.