



roadinger 31005250 Trusslight CRMX with Charging Function User Manual

[Home](#) » [Roadinger](#) » roadinger 31005250 Trusslight CRMX with Charging Function User Manual 

Contents

- [1 roadinger 31005250 Trusslight CRMX with Charging Function](#)
- [2 SAFETY WARNINGS](#)
- [3 CHARGING](#)
- [4 CLEANING AND MAINTENANCE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



roadinger 31005250 Trusslight CRMX with Charging Function



SAFETY WARNINGS

Please read these instructions carefully before using the product. They contain important information for the correct use of your product. Please keep them for future reference.

Intended use

- This product charges LED spotlights and is intended for indoor use.
- Only use the product according to the instructions given herein. Damages due to failure to follow these operating instructions will void the warranty! We do not assume any liability for any resulting damage.
- We do not assume any liability for material and personal damage caused by improper use or non-compliance with the safety instructions. In such cases, the warranty/guarantee will be null and void.
- Unauthorized rebuilds or modifications of the product are not permitted for reasons of safety and render the warranty invalid.

Danger due to electricity

- The product is suitable for indoor use only. Do not use it outdoors. Never expose it to rain or moisture. Do not store it in rooms exposed to moisture.
- The product is supplied with hazardous mains voltage. To reduce the risk of electric shock, do not open any part of the product. There are no serviceable parts inside the device.
- Only connect the device to a properly installed mains outlet. The outlet must be protected by a residual current breaker (RCD). The voltage and frequency must exactly be the same as stated on the device. If the mains cable is equipped with an earthing contact, then it must be connected to an outlet with a protective ground. Never disable the protective ground of a mains cable. Failure to do so could result in damage to the device and possibly injure the user.

- Caution! Never touch the plug's contact pins shortly after unplugging the unit (danger of electric shock).
- The mains outlet must be easily accessible so that you can unplug the device quickly if need be.
- Never touch the mains plug with wet or damp hands. There is the risk of potentially fatal electric shock.
- The mains cable must not be bent or squeezed. Keep it away from hot surfaces or sharp edges.
- Never pull the mains cable to disconnect the mains plug from the mains outlet, always seize the plug.
- Unplug the device during lighting storms, when unused for long periods of time or before cleaning.
- Do not expose the device to any high temperatures, direct sunlight, dripping or splashing water, strong vibrations or heavy mechanical stress.
- Do not place any objects filled with liquids on the device.
- Do not place any open sources of fire, such as burning candles, on or directly next to the device.
- Make sure that objects cannot fall into the device, in particular metal parts.
- Only have repairs to the device or its mains cable carried out by qualified service personnel. Repairs are required when the device or the mains cable is visibly damaged, liquid has been spilled or objects have fallen into the device; when the device has been exposed to rain or moisture, has been dropped or malfunctions occur.

Danger to children and people with restricted abilities

- This product is not a toy. Keep it out of the reach of children and pets. Do not leave packaging material lying around carelessly.
- This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

CHARGING

- To charge, simply connect the fixtures to one of the power outlets. The fixtures indicate the charging procedure and battery status (see user manual of fixtures).
- Disconnect them from the mains after charging. Otherwise there will be a low yet steady current consumption.
- The lid must be open while charging.
- Do not charge batteries outdoors.
- The fixtures will heat up during charging; this is normal.
- To prevent damage to a battery by deep discharge, recharge a battery completely discharged as soon as possible. Do not store a fixture with the battery completely discharged and regularly recharge the battery in case of long storage.

CLEANING AND MAINTENANCE

- Cleaning of the device is limited to the surface. Only wipe off the product with a soft lint-free and moistened cloth. Never use solvents or aggressive detergents. Disconnect the device from power and allow it to cool before cleaning.
- There are no serviceable parts inside. Do not open the housing. Do not try to repair the device by yourself as this may result in damage.



PROTECTING THE ENVIRONMENT


When to be definitively put out of operation, take the product to a local recycling plant for a disposal which is not harmful to the environment. Devices marked with this symbol must not be disposed of as household waste. Contact your retailer or local authorities for more information.

TECHNICAL SPECIFICATIONS

Power supply:100-240 V AC, 50/60 Hz

Subject to change.

Documents / Resources

	<p>roodinger 31005250 Trusslight CRMX with Charging Function [pdf] User Manual 31005243, 31005248, 31005250, 31005250 Trusslight CRMX with Charging Function, 31005250, Trusslight CRMX with Charging Function, CRMX with Charging Function, Charging Function</p>
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.