



rock space RSD0611 AC1200 Dual-band Smart WiFi Router User Manual

[Home](#) » [rock space](#) » rock space RSD0611 AC1200 Dual-band Smart WiFi Router User Manual 




AC1200

Dual-band Smart WiFi Router
Model No: RSD0611



Website: www.rockspace.hk
Support Email: router@rockspace.cc

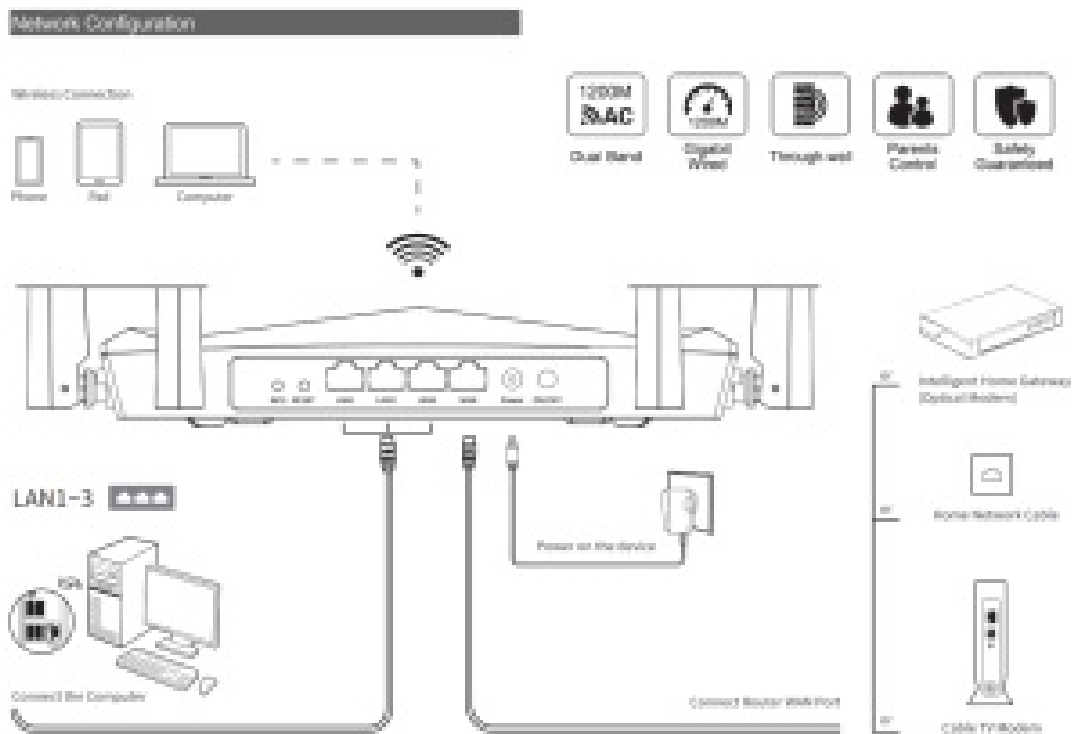


Contents


- 1 [Computer Setting](#)
- 2 [Router setting](#)
- 3 [Fixed IP](#)
- 4 [wireless connection:\(Here we take an win 7 for instance\)](#)
- 5 [FAQs](#)
- 6 [Documents / Resources](#)
- 7 [Related Posts](#)

Computer Setting

Click:' (Start] — (Control Panel] — Network and Internet — (Network and Sharing Center] — (Change adapter settings] — (Local Area Connection] “. select the connected network card. Then right click 'Local Area Connections, select (Properties]

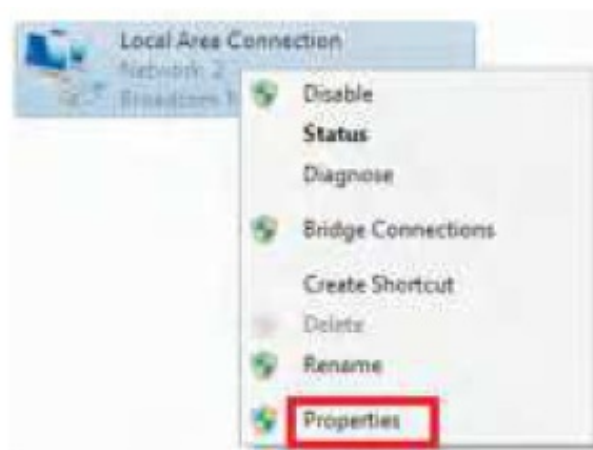

 Select (Internet Protocol Version 4 (TCP/IPv4)] , click (Properties]

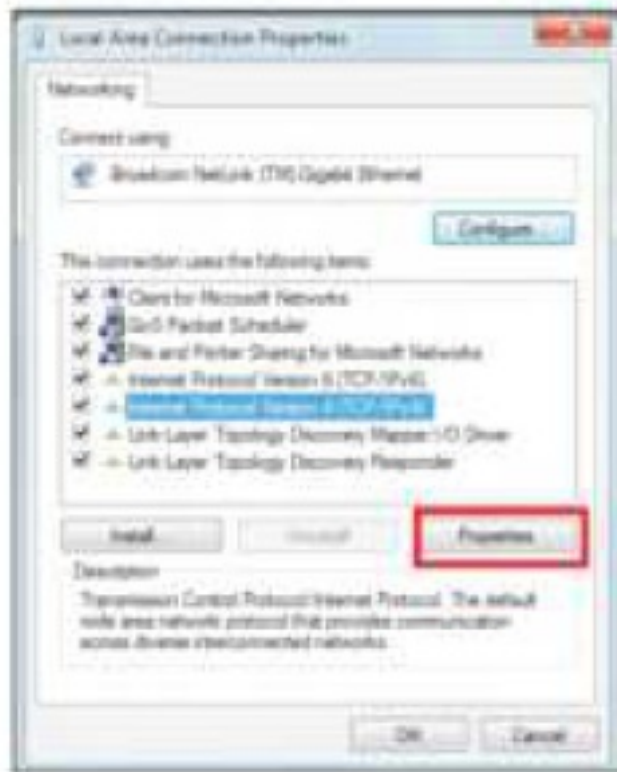

Select (Obtain an IP address automatically) , (Obtain DNS Server address automatically) , click (OK] Return back to the previous interface and click (OK]

Router setting

Open the browser, input and connect: <http://192.168.1.1> input user name “admin” and password “admin” Click “Next”




Setup Operation Mode

The device support various operation modes, which allows you to use different interfaces for NAT and bridging. Select proper operation mode accordance to your network topology. Default Gateway Mode.Click “Next”.



Setup Time Zone. Click "Next".

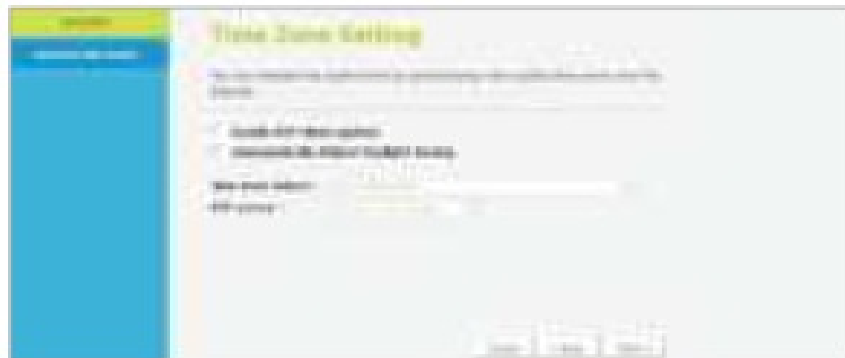

Setup LAN Settings. Click "Next".



Setup WAN Settings

Here you can also set the connection types. The router supports three common connection types: fixed IP, obtaining IP automatically and PPPoE dial-up.


Auto Config(DHCP)



Fixed IP



PPPoE Dial-Up

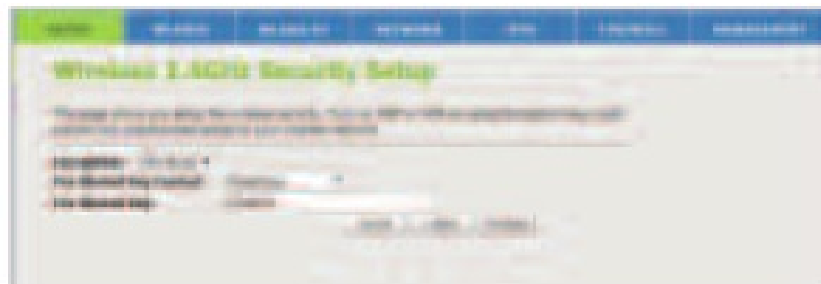

Wireless 5GHz Basic Settings




Wireless SGHz Security Settings



Wireless 2AGHz Basic Settings




Wireless 2AGHz Security Settings

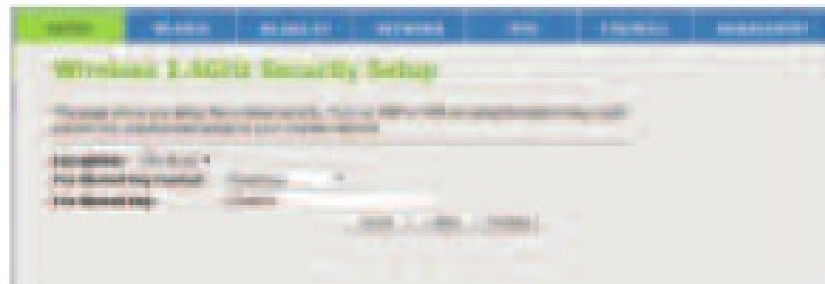

wireless connection:(Here we take an win 7 for instance)

Click 'Start —Control Panel—Network and Internet—Network and Sharing Center—Change adapter settings—Wireless Network Connection', Then right click 'Wireless Network Connection'. select 'Connect to a new network'.

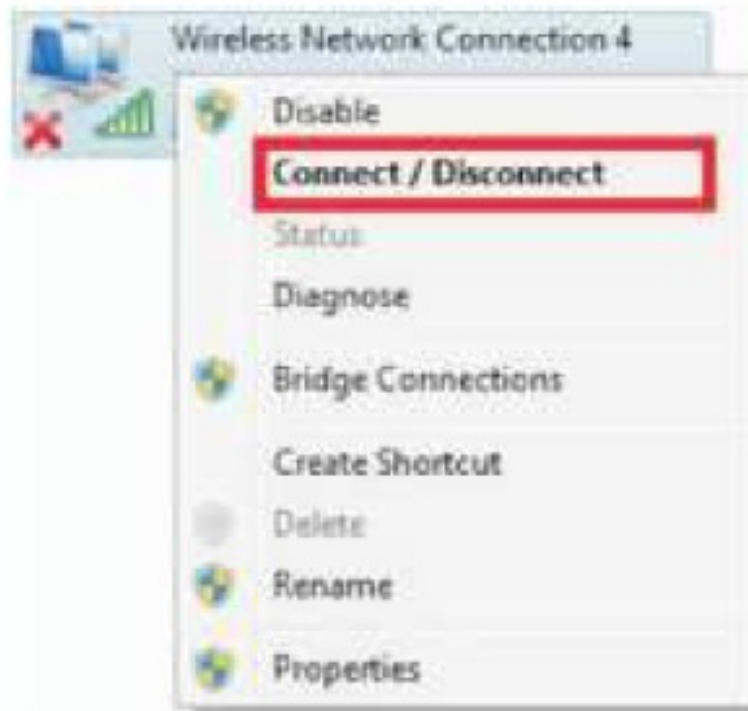

Select the wireless network name (SSID) in the wireless network list. click 'Connect.'



Enter Wi-fi key, click

Note: the default SSID and Network Key is on the product label on the bottom



Connection is successful



FAQs

How to reset to defaults?

Keep pressing the Reset button near to the wan port and guarantee the device is in power, releasing it after 5-10 seconds.

The laptop can not search out the wifi signal?

- If your laptop is with a built-In wireless adapter, please confirm that the wireless adapter is working or not.
- Check the wireless service in the laptop IS open or not. Methods is as below: Right-dick "my computer",choose 'management.then chooses nice and appear/MOW, Cheek then wireless Zero Configuration* in the 'Service 'page. If the stage Is not open, please right-click 'wireless zero configuration and dick 'open'. If the open type shows it is for bidder please right-click and choose the attribute. change the open type to automatic. then change the state to open.
- Confirm the redress function of Router IS opening.
- Check the driver of the wireless adapter li the device manager is Successfully installed or not.

Documents / Resources

	rock space RSD0611 AC1200 Dual-band Smart WiFi Router [pdf] User Manual RSD0611, AC1200 Dual-band Smart WiFi Router
---	--