



RocketFish RF-NSACCRGL / RF-NSACCRGL-C AC Adapter User Guide

[Home](#) » [RocketFish](#) » RocketFish RF-NSACCRGL / RF-NSACCRGL-C AC Adapter User Guide 

Contents

- [1 RocketFish RF-NSACCRGL / RF-NSACCRGL-C AC Adapter](#)
- [2 SAFETY INFORMATION](#)
- [3 USING THE AC ADAPTER IN TV MODE](#)
- [4 SPECIFICATIONS](#)
- [5 LEGAL NOTICES](#)
 - [5.1 FCC Information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



RocketFish RF-NSACCRGL / RF-NSACCRGL-C AC Adapter



SAFETY INFORMATION

 
- Please read the instructions carefully before use.
- Before using this product, make sure that your Switch console firmware has been upgraded to version 2.0 or above. Refer to the Switch documentation for firmware upgrade instructions.
- Unplug the product while it is not in use.
- The device is not a toy. Keep it out of the reach of children and pets.
- Protect the product from extreme temperatures, direct sunlight, strong jolts, flammable gases, vapors and solvents.
- Protect the product against high humidity and wet conditions.
- Make sure not to squeeze, bend or in any way damage the cable.
- For indoor use only.
- Do not use near water. Do not submerge in water or liquids.
- Do not use near flammable materials.

- **For indoor use only**


To identify electrical equipment designed primarily for indoor use. Class II equipment To identify equipment meeting the safety requirements specified for Class II equipment according to IEC 61140. This product complies to US energy efficiency VI standard. This product complies to UL safety certification.

USING THE AC ADAPTER IN TV MODE

1. Open the rear cover of Nintendo Switch Dock , then insert the Type C tip into the Type C port.

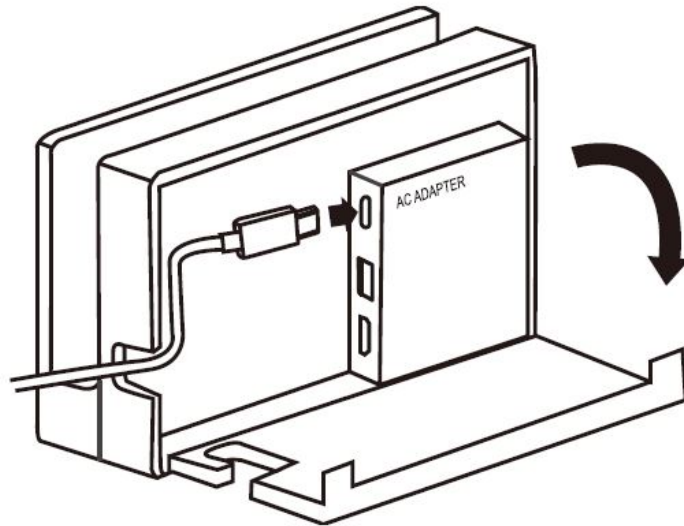


 2. Plug an HDMI cable (not included) into the HDMI port. Insert the AC Adapter into a wall outlet.
3. Connect the HDMI cable to the TV.
4. Put the Switch into the Nintendo Switch Dock, and then the left lower light will turn to green, which means the Switch is charging.

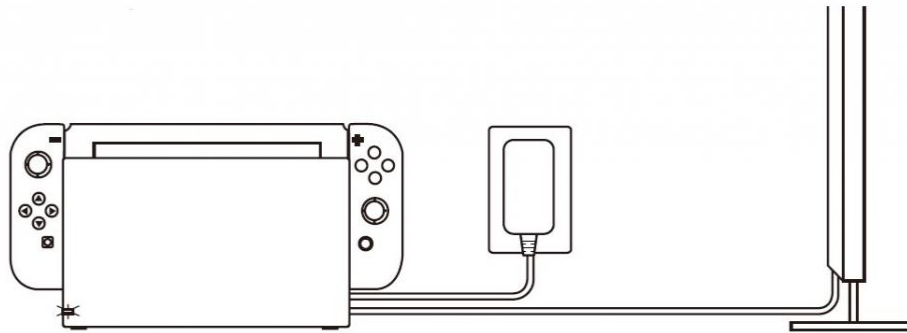

USING THE AC ADAPTER WITH THE SWITCH OR SWITCH LITE

 1. Insert the AC adapter into a wall outlet. Then insert the other end into the charging port on the bottom of your Switch or Switch Lite.
2. The progress of the charging will be displayed via the battery icon on the top right corner of the screen.

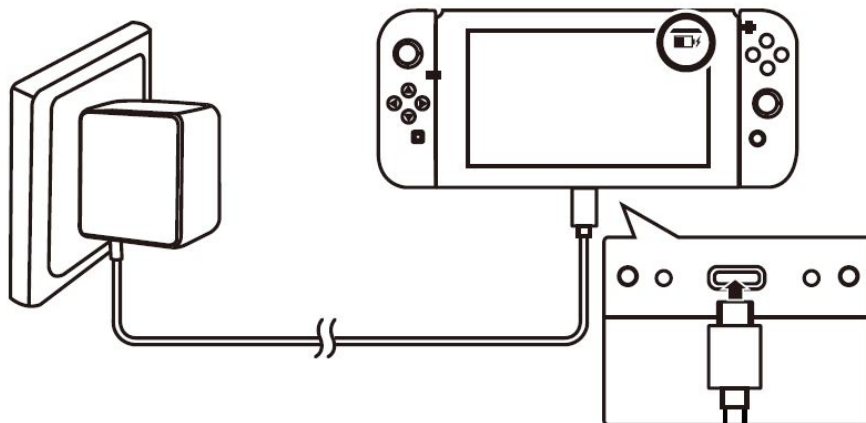

SPECIFICATIONS

Dimensions (W×H×D)	3.9 x 5.2 x 3.9 in.
Input	AC 100-240 V~ 1 A 50 / 60 Hz
Output – 1	Switch or Switch Lite: 5 V / 3 A
Output – 2	TV Dock: 15 V / 2.6 A
Cable length	6 ft (1.8m)

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance may cause interference and void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-3(B) / NMB-3(B) standard.

ONE-YEAR LIMITED WARRANTY

Visit www.rocketfishproducts.com for details.

Nintendo Switch is a registered trademark of Nintendo Inc.


This product is not sponsored or approved by Nintendo.

ROCKETFISH is a trademark of Best Buy and its affiliated companies. Registered in some countries.

Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.,



Documents / Resources

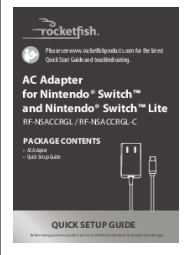 The image shows the packaging for the Rocketfish AC Adapter. It is a black box with white and red text. The text includes the Rocketfish logo, the product name "AC Adapter for Nintendo Switch™ and Nintendo Switch™ Lite", the model numbers "RF-NSACCRGL / RF-NSACCRGL-C", and a "QUICK SETUP GUIDE" label at the bottom.	<p>RocketFish RF-NSACCRGL / RF-NSACCRGL-C AC Adapter [pdf] User Guide RF-NSACCRGL AC Adapter, RF-NSACCRGL-C AC Adapter, RF-NSACCRGL-C, RF-NSACCRGL</p>
--	--

References

-  [Rocketfish Universal Products for Consumer Electronics](#)

Manuals+.