



# Rocketfish RF-UNISR1 DSLR Shutter Remote Quick Setup Guide

[Home](#) » [RocketFish](#) » Rocketfish RF-UNISR1 DSLR Shutter Remote Quick Setup Guide 

## Contents

- [1 DSLR Shutter Remote RF-UNISR1](#)
- [2 Package contents](#)
- [3 Features](#)
- [4 Cautions:](#)
- [5 Intermediate cables](#)
- [6 Connecting your shutter remote](#)
- [7 Using your shutter remote](#)
- [8 Shutter lock function](#)
- [9 Specifications](#)
- [10 One-year limited warranty](#)
- [11 Contact Rocketfish:](#)
- [12 Related Posts](#)



## DSLR Shutter Remote RF-UNISR1

### QUICK SETUP GUIDE

#### Package contents


- DSLR shutter remote
- Intermediate cables (4)
- Quick Setup Guide

## Features

- Works with most DSLR cameras with remote terminals.
- Use the shutter release button just like the one on your camera.
- Shutter lock lets you keep the shutter open for time exposures, or to shoot continuously.

## Cautions:

- Please insert or remove the plug carefully. Take care to not to force it.
- Don't forget to disable the shutter lock function by unlocking the shutter release button lock after shooting.
- Do not leave the device in high-temperature or high-humidity environments.

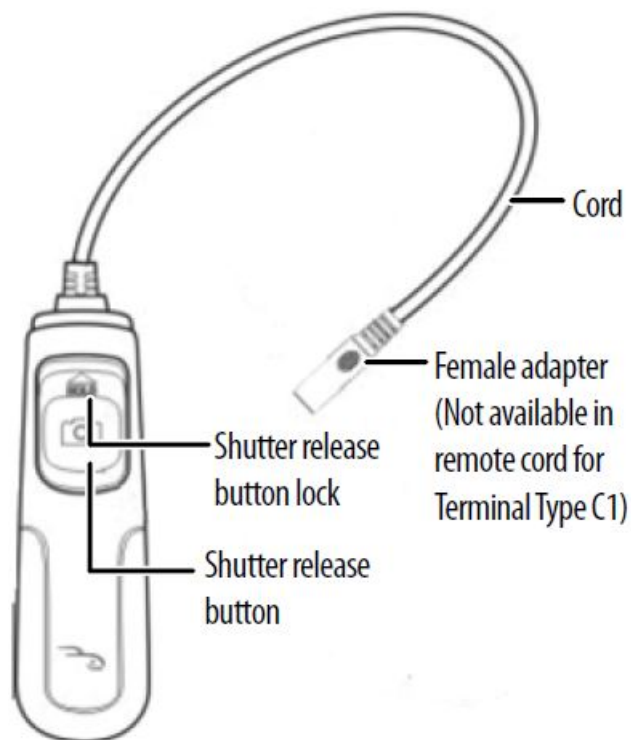


## Intermediate cables



## Connecting your shutter remote

1. Open the camera's remote terminal cover.
2. Select an intermediate cable to match your camera's remote terminal, then connect the intermediate cable to the female adapter on the DSLR shutter remote cord.
3. Insert the plug on the intermediate cable into the remote terminal on your camera.

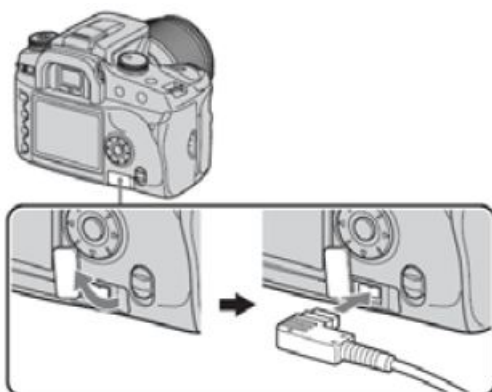

4. Adjust settings on the camera. For details, see the camera's user manual.

## Using your shutter remote

1. Press the shutter release button halfway for the camera to focus.
2. After the focus indication appears in the viewfinder, fully press the shutter release button to shoot the picture.

**Note:** When the subject is in a dim environment where it's difficult to use auto-focus, set the camera on MF (manual focus) mode and rotate the focus ring to focus the shot.

## Shutter lock function

In B (Bulb) mode or continuous shooting mode, shutter lock is available. To enable it, fully press the shutter release button and slide it in the direction of the arrow.

- When locked in B (Bulb) mode, the camera shutter remains opened for time exposure.
- When locked in continuous shooting mode, the camera shutter continually operates for continuous shooting.

## Specifications

Terminal type	C1/C3/N1/S1 (one out of four)
Dimensions	Approx. .35 × 3.82 × .83 in. (29 × 97 × 21 mm) (Cord not included)
Cord length	Approx. 39.4 in (1 m) (Terminal included)
Net weight	Approx. 1.76 oz. (50g)

\*Product design and specifications are subject to change without notice.

RF-UNISR1 COMPATIBILITY LIST			
C1	C3	N1	S1
Canon models		Nikon models	Sony models
EOS 60D	EOS 10D	D3	DSLR-A100
EOS 60Da	EOS 20D	D2 series	DSLR-A200
EOS Digital Rebel	EOS 20Da	D1 series	DSLR-A300
EOS Digital Rebel XT	EOS 30D	D700	DSLR-A350
EOS Digital Rebel XTi	EOS 40D	D300	DSLR-A450
EOS ELAN 7/7E	EOS 50D	D200	DSLR-A500
EOS ELAN 7NE	EOS 5D	D100 (MB-100 battery unit required)	DSLR-A550
EOS Elan 7N	EOS 5D Mark II	F6	DSLR-A560L
EOS Elan II/IIe	EOS 5D Mark III	F5	DSLR-A580
EOS IX Lite	EOS 7D	F100	DSLR-A700
EOS Rebel 2000	EOS D30	F90X	DSLR-A900
EOS Rebel GII	EOS D60	F90	SLT-A33L
EOS Rebel T1i	EOS-1D		SLT-A55
EOS Rebel T2	EOS-1D Mark II		SLT-A77
EOS Rebel T2i	EOS-1D Mark II N		
EOS Rebel T3	EOS-1D Mark III		
EOS Rebel T3i	EOS-1D Mark IV		
EOS Rebel T4i	EOS-1D X		
EOS Rebel Ti	EOS-1Ds		
EOS Rebel XS	EOS-1Ds Mark II		
EOS -Rebel XSi	EOS-1Ds Mark III		
RFD-T1i	EOS-1v		
	EOS-1v HS		
	EOS-3		

## One-year limited warranty

Visit [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for details.

## Contact Rocketfish:

For customer service, call 1-800-620-2790

[www.rocketfishproducts.com](http://www.rocketfishproducts.com)

© 2012 BBY Solutions, Inc. All Rights Reserved.

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

ROCKETFISH is a trademark of BBY Solutions, Inc. All other products and brand names are trademarks of their respective owners.

Rocketfish RF-UNISR1 DSLR Shutter Remote Quick Setup Guide – [Download](#)