



# roger MC16 Physical Access Controller Instruction Manual


[Home](#) » [ROGER](#) » roger MC16 Physical Access Controller Instruction Manual 

## Contents

- [1 roger MC16 Physical Access Controller](#)
- [2 INTRODUCTION](#)
- [3 CONFIGURATION WITH ROGERVDM PROGRAM](#)
- [4 CONFIGURATION WITH VISO PROGRAM](#)
- [5 MEMORY RESET](#)
- [6 FIRMWARE UPDATE](#)
- [7 POWER SUPPLY](#)
- [8 APPENDIX](#)
- [9 DISPOSAL](#)
- [10 Contact](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

**roger**

**roger MC16 Physical Access Controller**

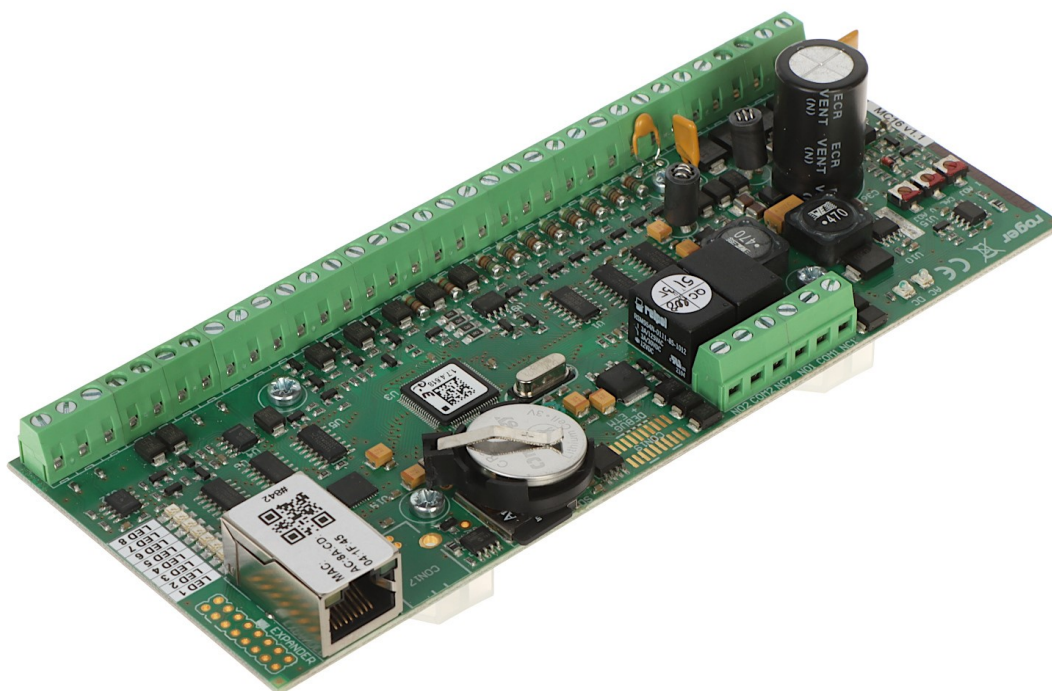

This document contains minimum information that is necessary for initial setup and installation of the device. The detailed description of configuration parameters and functionalities is specified in respective Operating manual available at [www.roger.pl](http://www.roger.pl).

## INTRODUCTION

MC16 controller is mainly dedicated to door access control in RACS 5 system. The controller is master device for such peripheral devices as MCT terminals, OSDP-RS485 interface readers including OSR series terminals, PRT series terminals, Wiegand interface readers and MCX series expanders. Inputs and outputs of the controller or connected peripheral device can be used to control such devices as door locks, exit buttons, alarm sirens, etc. Various versions and types of controllers are based on the same hardware module and differ with license on their memory cards. Most popular MC16-PAC controllers are offered in MC16-PAC-x-KIT sets.

## CONFIGURATION WITH ROGERVDM PROGRAM

Low level configuration with RogerVDM software enables to define basic parameters of MC16 controller i.e. IP address and communication key.

MC16 programming procedure with RogerVDM software:

1. Connect the controller to Ethernet network and define the IP address of your computer in the same subnetwork as the controller with 192.168.0.213 default IP address.
2. Start RogerVDM program, select MC16 v1.x device, the latest firmware version and Ethernet communication channel.
3. Select from the list or enter manually the IP address of controller, enter 1234 communication key and start the connection with the controller.
4. In the top menu select Tools and then Set communication key to define your own password for the controller.
5. In the main window specify your own IP address of the controller.
6. Enable PRT or Wiegand readers if the controller is supposed to operate with them.
7. Optionally enter comments for controller and its object to facilitate their identification during further configuration of the system.
8. Optionally backup settings clicking Send to File...

9. Click Send to Device to update the configuration of controller and disconnect by selection of Device in the top menu and then Disconnect.

**Note:** Initial low level configuration of MC16 controller in RACS 5 v2 system should be made with RogerVDM program, but further modification of low level configuration for MC16 controller and connected MCT/MCX peripheral devices can be made with VISO v2 program.

## CONFIGURATION WITH VISO PROGRAM

High level configuration with VISO software enables to define the logic of controller. More information on scenarios of operation and high level configuration is given in MC16 Operating manual as well as AN002 and AN006 application notes.

## MEMORY RESET

Memory reset procedure resets all settings to default ones and results in 192.168.0.213 IP address and empty communication key.

MC16 memory reset procedure:

1. Disconnect power supply.
2. Short CLK and IN4 lines.
3. Restore power supply, all LEDs will flash and wait min. 6s.
4. Remove connection between CLK and IN4 lines, LEDs will stop pulsating and LED2 will be on.
5. Wait approx. 1.5 min till LED5+LED6+LED7+LED8 are pulsating.
6. Restart the controller (switch power supply off and on).
7. Start RogerVDM and make low level configuration.

## FIRMWARE UPDATE

New firmware can be uploaded to the controller with RogerVDM software. The latest firmware file is available at [www.roger.pl](http://www.roger.pl).

MC16 firmware update procedure:

1. Connect with the controller using RogerVDM software.
2. Backup settings by clicking Send to File...
3. In the top menu select Tools and then Update firmware.
4. Select firmware file and then click Update.
5. After firmware update wait till LED8 is pulsating. Start memory reset if necessary.
6. Make or restore low level configuration in RogerVDM software.

**Note:** During the firmware update process, it is necessary to ensure continuous and stable power supply for the device. If interrupted, the device may require repair by Roger.

## POWER SUPPLY

MC16 controller is designed for power supply from 230VAC/18VAC transformer with minimal power output 20VA, but it can also be supplied with 12VDC and 24VDC. In case of 12VDC power supply, backup battery cannot be directly connected to MC16 and in such case backup power supply must be provided by 12VDC power supply unit.

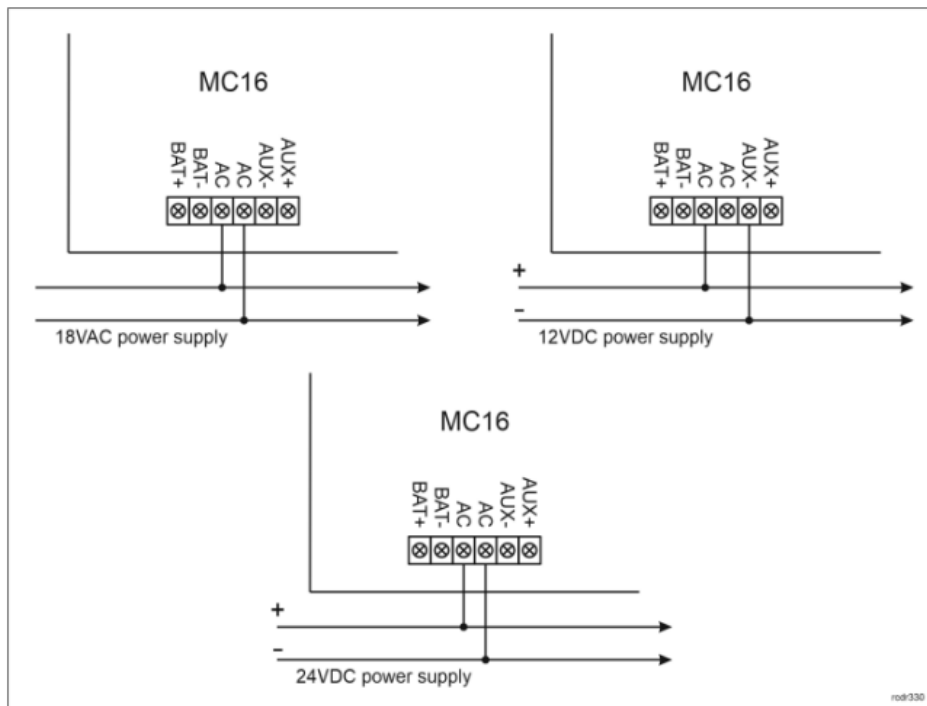


Fig. 1 MC16 power supply

## APPENDIX

**Table 1. MC16 screw terminals**

Name	Description
BAT+, BAT-	Backup battery
AC, AC	18VAC or 24VDC input power supply
AUX-, AUX+	12VDC/1.0 output power supply (for door lock)
TML-, TML+	12VDC/0.2A output power supply (for readers)
IN1-IN8	Input lines
GND	Ground
OUT1-OUT6	15VDC/150mA transistor output lines
A1,B1	RS485 bus
CLK, DTA	RACS CLK/DTA bus
A2,B2	Not used
NO1, COM1, NC1	30V/1.5A DC/AC (REL1) relay
NO2, COM2, NC2	30V/1.5A DC/AC (REL2) relay

**Table 2. MC16 LED indicators**

Name	Description
LED1	Normal mode
LED2	ON: Service mode (low level configuration)  ON and controller stopped: RAM-SPI data initialization error Pulsing (~2Hz): incompatible firmware or startup error  Quick pulsing (~6Hz): RAM-SPI or Flash memory error
LED3	ON: High level configuration error Pulsing: Low level configuration error
LED4	No memory card or memory card error
LED5	Event log error
LED6	Initialization error, previous license data access error or firmware errors
LED7	ON: No license  Pulsing: Exceeded licensed operation time
LED8	Pulsing: Proper functioning of the controller
LED2 ON +	Firmware update

LED3 pulsing	
LED5 – LED 8 pulsing	Memory reset finished
LED 1 – LED 2 pulsing	Transmission from other Communication Server than the linked one (see note AN008)
LED1 – LED 8 pulsing	One of available circuit bridges e.g. CLK + IN4 is started

Table 2. MC16 LED indicators	
Name	Description
LED1	Normal mode
LED2	ON: Service mode (low level configuration) Pulsing: RAM or Flash SPI memory error
LED3	ON: High level configuration error Pulsing: Low level configuration error
LED4	No memory card or memory card error
LED5	Event log error
LED6	Not used
LED7	Not used
LED8	Pulsing: Proper functioning of the controller

Table 3. Specification	
Supply voltage	17-22VAC, nominal 18VAC 11.5V-15VDC, nominal 12VDC 22-26VDC, nominal 24VDC
Current consumption	100 mA for 18VAC (no loads on AUX/TML outputs)
Inputs	Eight parametric inputs (IN1..IN3) internally connected to the power supply plus through a 5.6kΩ resistor. Approx. 3.5V triggering level for NO and NC inputs.
Relay outputs	Two relay outputs (REL,REL2) with single NO/NC contact, 30V/1.5A rated
Transistor outputs	Six open collector transistor outputs (OUT1-OUT6), 15VDC/150mA rated.
Power supply outputs	Two power outputs: 12VDC/0.2A (TML) and 12VDC/1A (AUX)
Distances	RS485: up to 1200m Wiegand and RACS CLK/DTA: up to 150m Power supply: according to AN022 application note
IP Code	N/A
Environmental class (acc. to EN 50131-1)	Class I, indoor general conditions, temperature: +5°C to +40°C, relative humidity: 10 to 95% (no condensation)
Dimensions H x W x D	72 x 175 x 30 mm
Weight	approx. 200g

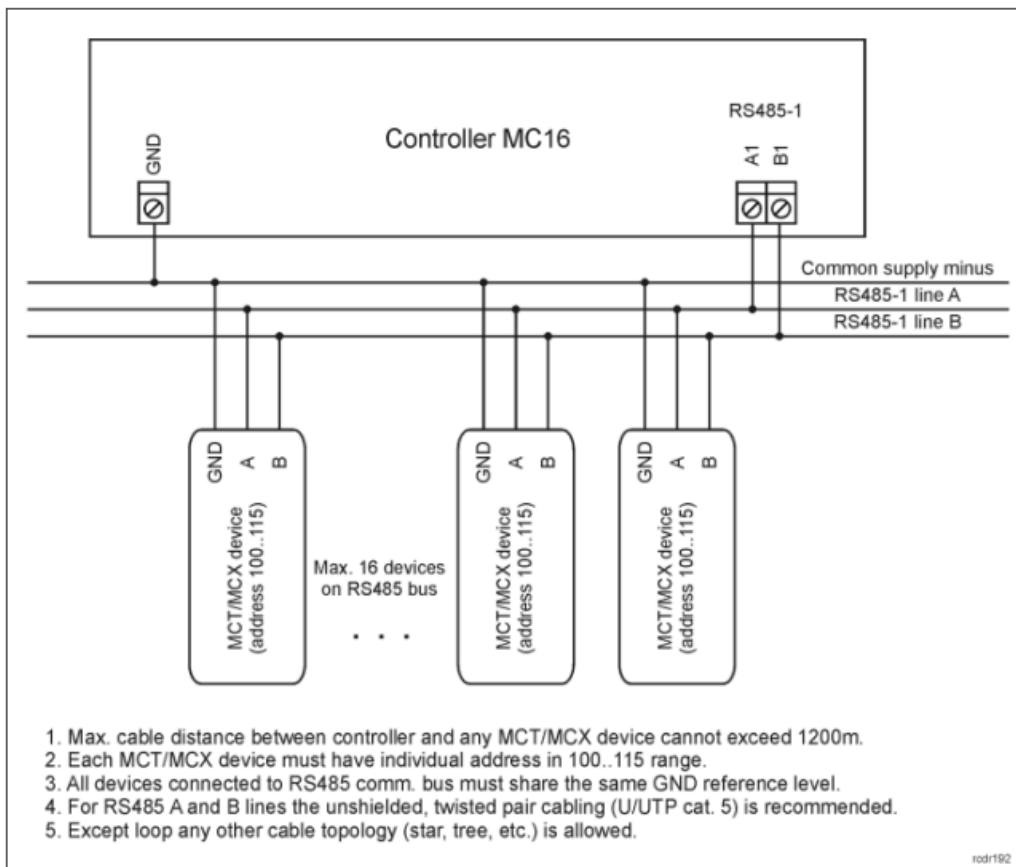


Fig. 2 Connection of readers and expanders to MC16 access controller

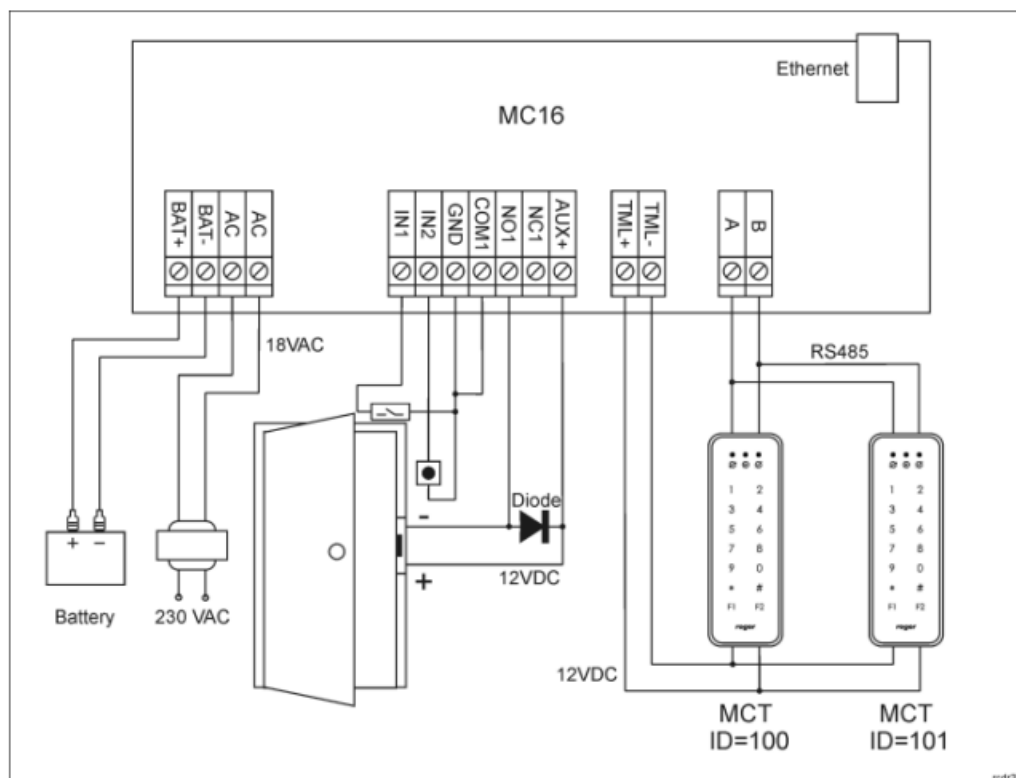


Fig. 3 Typical door control with MCT readers

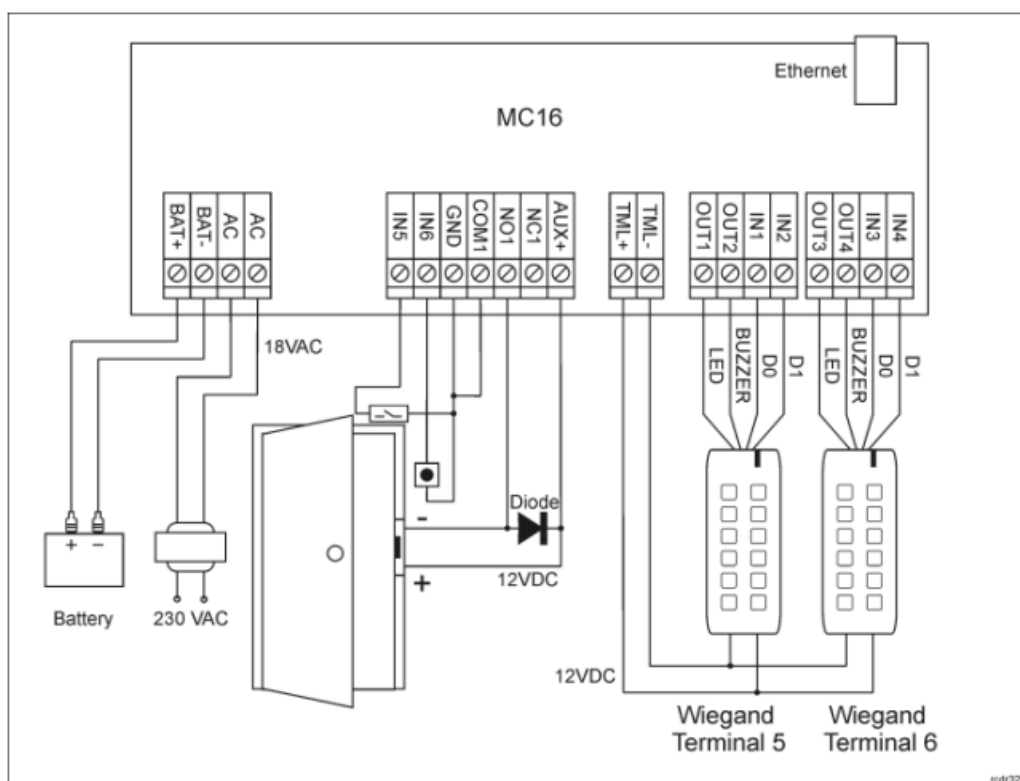


Fig. 4 Typical door control with Wiegand readers

#### Notes:

- In case of read-in door, single reader is connected to the controller. MCT terminal can be then installed with default ID=100 address.
- In case of PRT readers, the diagram is the same as in case of MCT readers except for connection to CLK and DTA lines instead of RS485 A and B lines.
- In case of electrically incompatible Wiegand readers it might be necessary to install MCI-7 interfaces.
- In case of OSDP interface readers including OSR series readers it is necessary to install MCI-3 interfaces on RS485 bus.
- Diagrams include doors with electric strikes. In case of electromagnetic lock, the NC terminal of relay is used instead of NO terminal.
- Diagrams include exit buttons. In case of read-in/out doors they can be used for emergency door opening.

**Note:** The device has an Ethernet network communication interface. In principle, the device can be used in both WAN and LAN, while the manufacturer's warranty is covered only for operation in an isolated LAN reserved exclusively for the access control system or other system in which the device is to be used.

#### DISPOSAL


This symbol placed on a product or packaging indicates that the product should not be disposed of with other wastes as this may have a negative impact on the environment and health. The user is obliged to deliver equipment to the designated collection points of electric and electronic waste. For detailed information on recycling, contact your local authorities, waste disposal company or point of purchase. Separate collection and recycling of this type of waste contributes to the protection of the natural resources and is safe to health and the environment. Weight of the equipment is specified in the document.

#### Contact



- Roger Sp. z o. o. sp. k.
  - 82-400 Sztum
  - Gościszewo 59
  - **Tel.:** +48 55 272 0132
  - **Fax:** +48 55 272 0133
  - **Tech. support:** +48 55 267 0126
  - **E-mail:** [support@roger.pl](mailto:support@roger.pl)
  - **Web:** [www.roger.pl](http://www.roger.pl)
- 

## Documents / Resources

	<a href="#">roger MC16 Physical Access Controller</a> [pdf] Instruction Manual MC16 Physical Access Controller, Physical Access Controller, Access Controller, Controller
--	--

## References

- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.