



Rollerhouse R1710 15 Channel Remote Controller Instructions

[Home](#) » [Rollerhouse](#) » Rollerhouse R1710 15 Channel Remote Controller Instructions 

Rollerhouse R1710 15 Channel Remote Controller



Contents

1 5 or 15 Channel Remote Control

Instruction

2 Documents / Resources


2.1 References

5 or 15 Channel Remote Control Instruction

1. Select the Channel for Programming:

Press "CHANNEL ▷" or "CHANNEL ◁" to choose the channel until the LED highlights on the channel you want.

2. Follow 'Pairing remote transmitter with motor' on your 16mm/22mm/25mm rechargeable battery motor instructions:

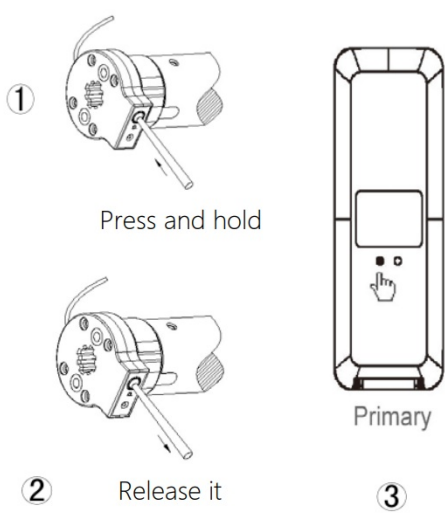	1	Hold down the SETTING button on the motor mount	Motor jogs 2 times.	
Pairing remote transmitter with motor	2	Please release this button when motor jogs.		
	3	Press the CONFIRM button on remote transmitter within 10 seconds	Motor jogs 2 times. Remote has now been paired with the motor.	

For additional remotes repeat above steps on secondary remote transmitter Please note: The group channel will be recorded on the motor automatically when the single channel has been programmed on the motor.
For blind setting instruction, follow your 16mm/22mm/25mm rechargeable battery motor instructions.


This remote wont work with those brand motorized blinds

- Somfy
- Hunter Douglas
- 3-Day Blinds
- lutron
- Bali
- Rollease Acmeda
- Graber blinds
- levolor
- coulisse CM-13
- acl 23 transmitter
- dc251
- dd2702h

- dc306
- rex twl25
- tucson DC1 '602b
- sivoia qs triathlon
- sm automatrc
- Tuscan rolling shutters
- Warp & Phil
- kirsch
- Maldta
- SunSetter blinds
- timber blind
- ZStarr blinds
- Sony TV



Documents / Resources

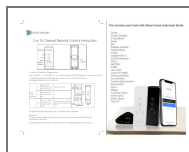

[Rollerhouse R1710 15 Channel Remote Controller](#) [pdf] Instructions
R1710, R1710 15 Channel Remote Controller, 15 Channel Remote Controller, Remote Control
er, Controller

References

- [User Manual](#)

