



ROLLING SQUARE AirCard Card Sized Tracker User Manual

[Home](#) » [ROLLING SQUARE](#) » ROLLING SQUARE AirCard Card Sized Tracker User Manual 


ROLLING SQUARE AirCard Card Sized Tracker User Manual



Contents

- [1 Getting Started](#)
- [2 Add Your Item Locator](#)
- [3 Locate Your Item](#)
- [4 Find Item Out Of Range](#)
- [5 When Your Item Is Lost](#)
- [6 Resetting AirCard](#)
- [7 Extras](#)
- [8 The Fine Print](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Getting Started

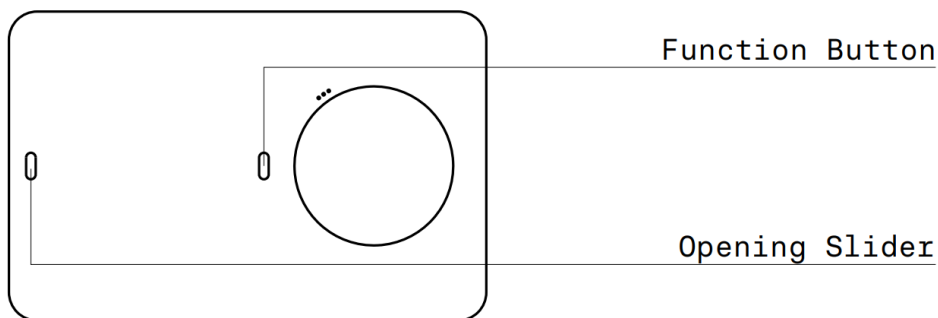

Power On / Off:

- Press your Air Card's Function Button once to turn on, it should beep once indicating it is powered on.
- To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your AirCard is powered off.

Check For Updates:

- To use the Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch® requires the latest version of watchOS®.

Add Your Item Locator

Start The App

- Open Find My™ app on your supported iPhone or iPad.
- Allow notifications from the app.

Connect Your AirCard

- Power on your AirCard.
- Tap +, then "Add Other Item".
- Once your AirCard is located, tap "Connect".

- Choose a recognizable name and emoji for your AirCard and tap "Continue".
- Find My™ will ask for confirmation to add your AirCard to your Apple ID Tap "Agree".
- Tap "Finish" and your AirCard will be set up and ready to be connected to whatever item you wish to locate, e.g. your keys.

Locate Your Item

Find AirCard When It's Nearby:

- Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your Item Locator from the list.
- Tap "Play Sound" to make your Item Locator beep.
- Tap "Stop Sound" to stop the beeps once you find.

Find AirCard's Last Known Location:

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your AirCard from the list.
- Your AirCard's last known location will appear on the map.
- To navigate to that last known location, tap "Directions" to open the Apple Maps app.

Find Item Out Of Range

Enabling "Notify When Left Behind":

- Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your AirCard from the list.
- Under "Notifications" enable the "Notify When Left Behind" toggle.
- You will receive a notification when you leave your AirCard behind and it's no longer in range of your device.

Enabling "Notify When Found":

- Under "Notifications", enable the "Notify When Found" toggle.
- When your AirCard is seen by another Find My™ enabled device, you will receive a notification of its updated location.
- **Note:** "Notify When Found" can only be activated when your AirCard is out of range.

When Your Item Is Lost

Enabling "Lost Mode":

- Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your AirCard from the list.
- Under "Lost Mode" tap "Enable".
- A screen detailing Lost Mode will pop up, tap "Continue".

- Enter your phone number or email address and tap “Next”.
- You may enter a message that will be shared with the person that finds your item.
- Tap “Activate” to enable “Lost Mode”.
- Note: When “Lost Mode” is enabled, “Notify When Found” is automatically enabled.
- Note: When “Lost Mode” is enabled, your AirCard is locked and cannot be paired to a new device.

Resetting AirCard

Remove The AirCard From Find My™ App:

- Open Find My™ app and select the “Items” tab.
- Tap on your Air Card from the list.
- Please ensure “Lost Mode” is disabled.
- Scroll to the bottom of the screen and tap “Remove Item.”
- A summary will open, tap “Remove” to confirm.

Factory Reset Your AirCard:

- After successfully removing the AirCard from Find My™ app, press the AirCard’s function button four times rapidly and then hold it a fifth time until you hear a ringing chime.
- The AirCard is now reset and ready to be paired to a new device.

Extras

Replace The Battery:

- Slide the opening slider on the back of your AirCard to carefully open the shells.
- Replace the battery with a new CR2016 battery placing it positive side up (text facing up).
- Carefully close the AirCard by aligning the top hole on both sides.

Unwanted tracking:

If any Find My network accessory separated from its owner is seen moving with you over time, you’ll be notified in one of two ways:

- 1. If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.
- 2. If you don’t have an iOS device or a smartphone, a Find My network accessory that isn’t with its owner for a period of time will emit a sound when it’s moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

The Fine Print

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This


device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or Tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device. The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, iPod touch, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark of Cisco and is used under license.

Web: www.rollingsquare.com

Documents / Resources

	ROLLING SQUARE AirCard Card Sized Tracker [pdf] User Manual AIRCARDE, 2BAKX-AIRCARDE, 2BAKXAIRCARDE, AirCard Card Sized Tracker, AirCard, Card Sized Tracker, Tracker
---	--

References

- [Rolling Square | Redesigning Daily Life](#)