



RONIS Tronic Plus DOM Keypads Instruction Manual

[Home](#) » [RONIS](#) » **RONIS Tronic Plus DOM Keypads Instruction Manual** 



Tronic Plus DOM Keypads Assembly Instruction Manual





Contents

- 1 Drilling template
- 2 Accessories
- 3 Right door assembly
- 4 Left door assembly
- 5 Documents / Resources


Drilling template

ASSEMBLY

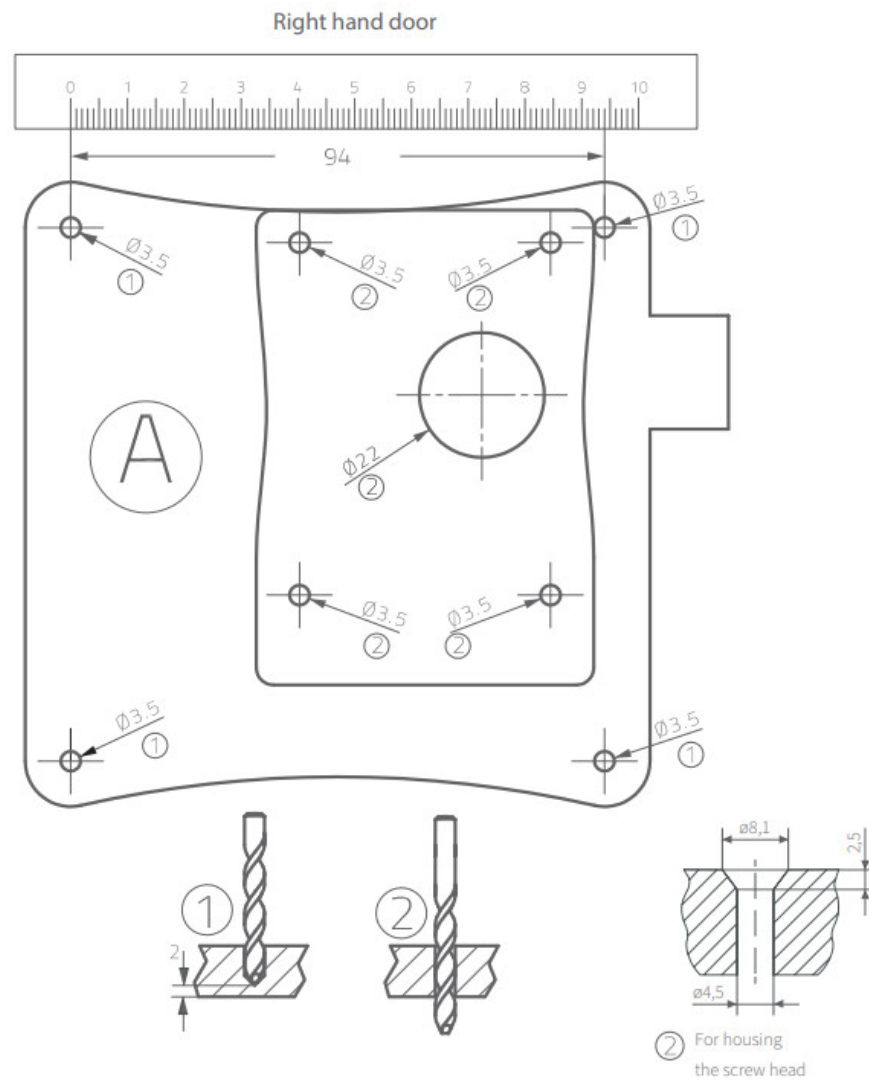


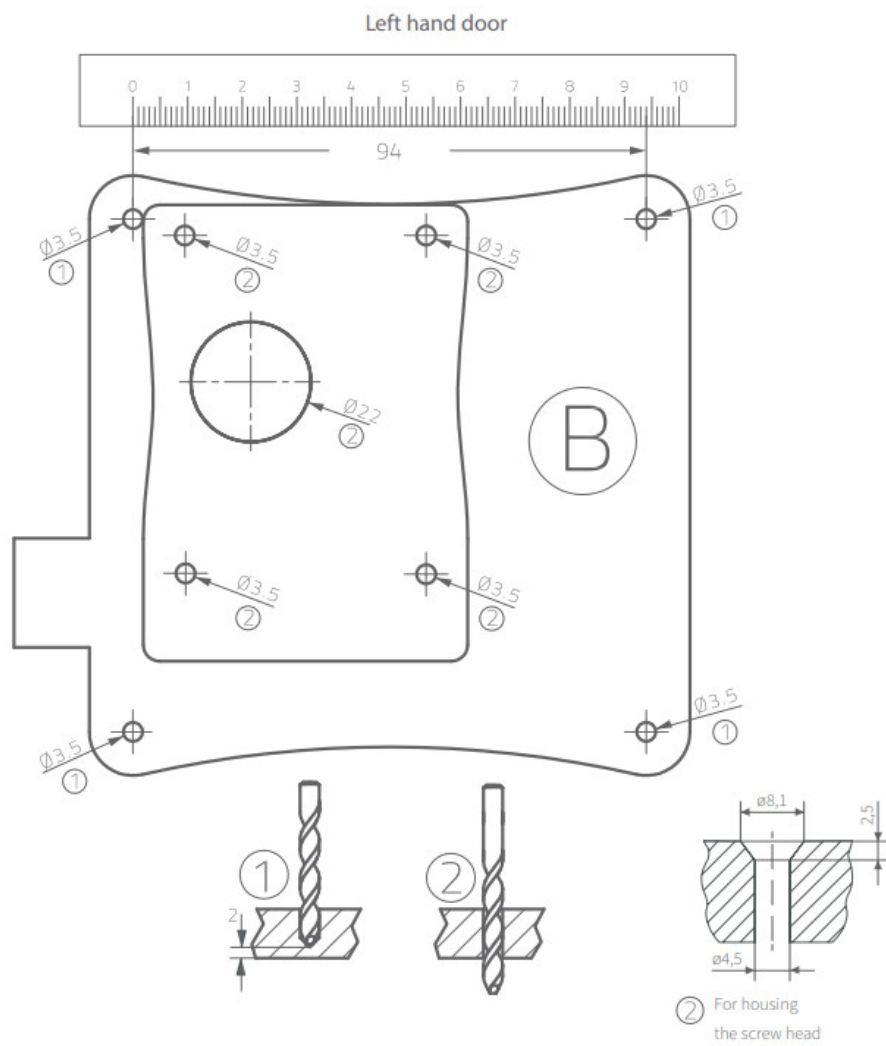


Accessories

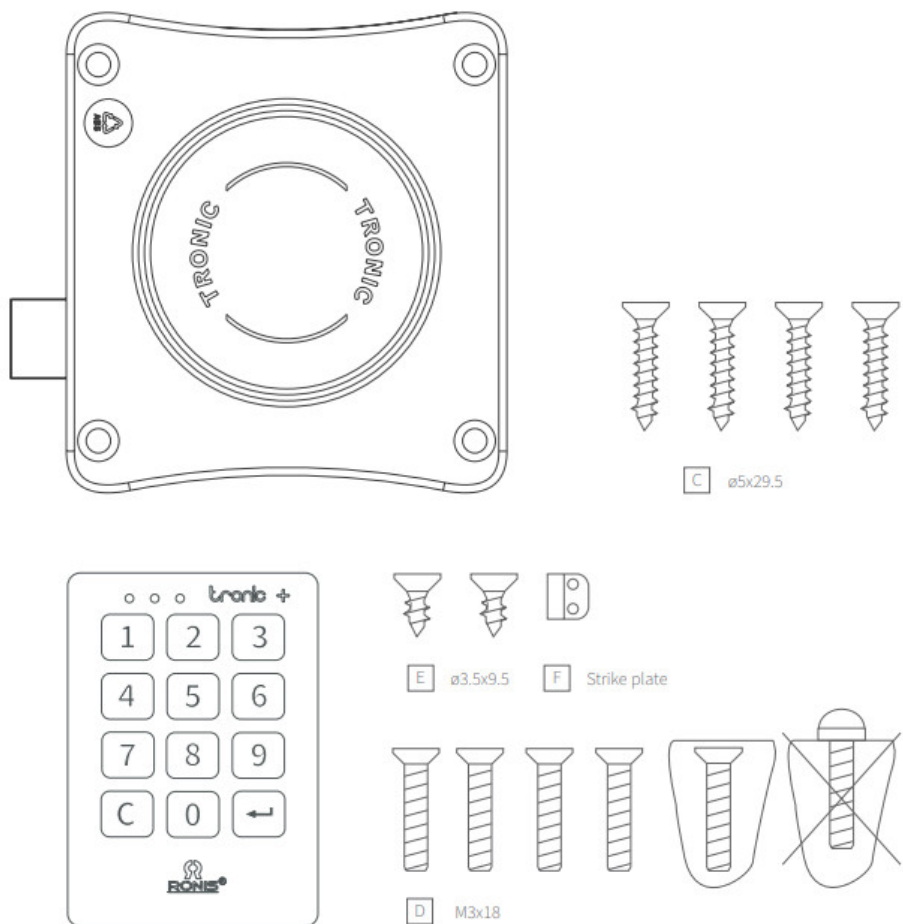


Right door assembly

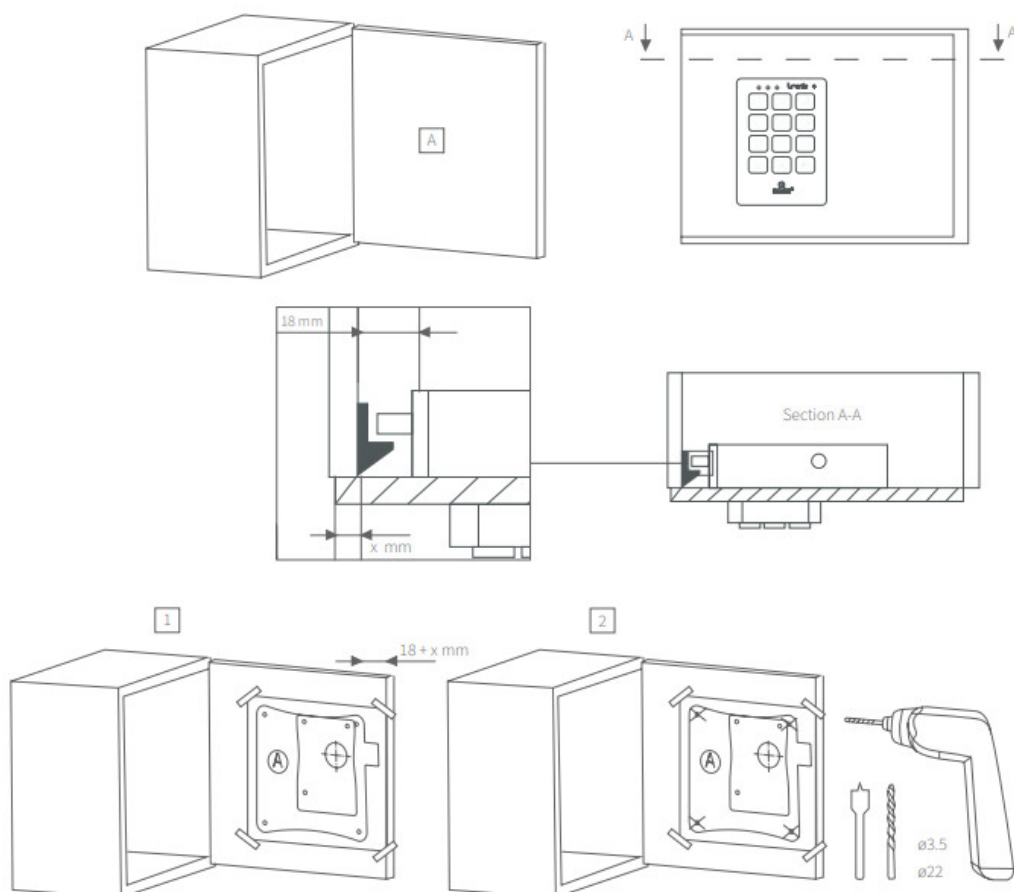


3

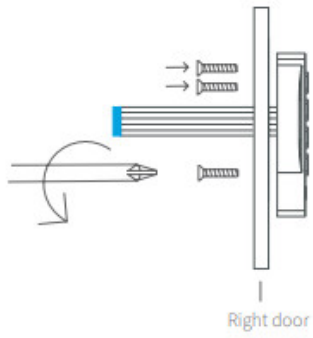


4

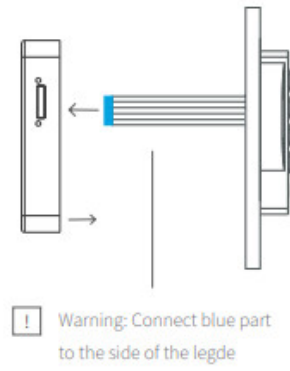





5

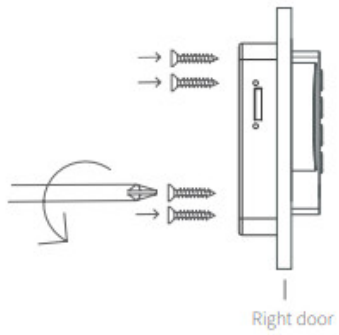


6

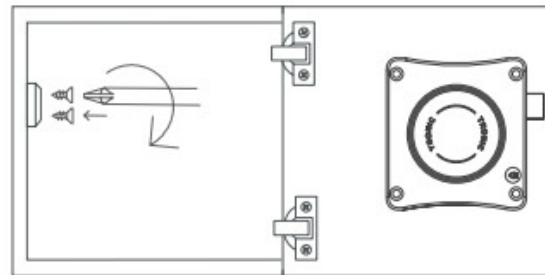


Left door assembly

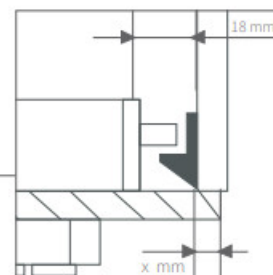
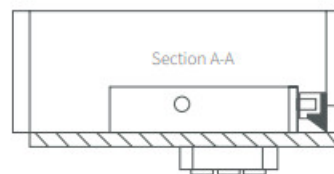
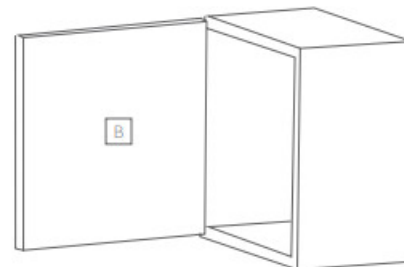
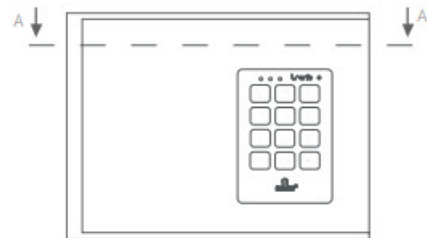


1

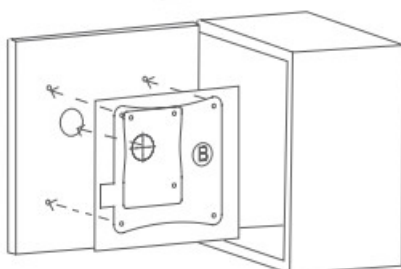


2

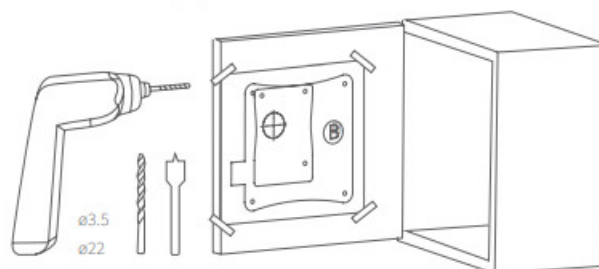


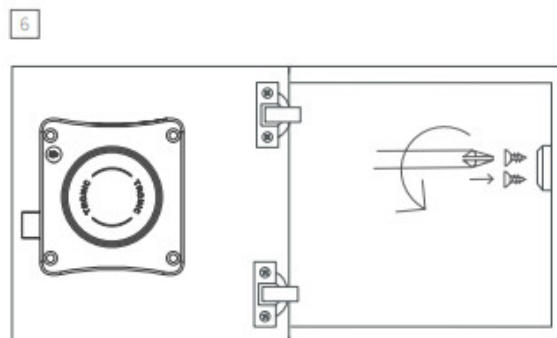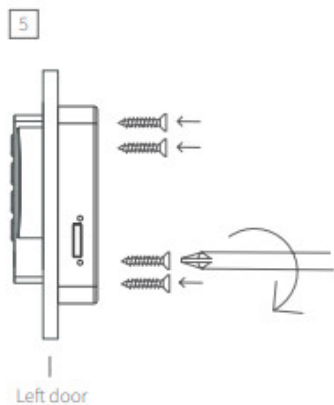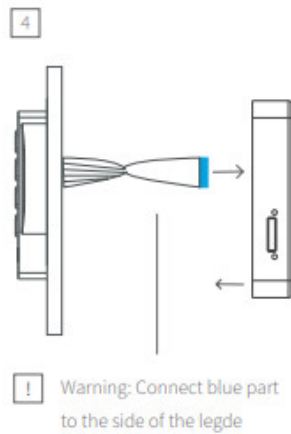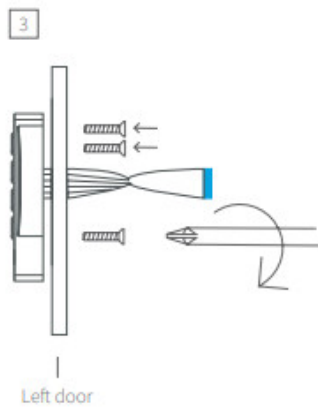

1. Verify that the cable is properly connected (straight and untill the bottom).
Don't push any key during the wire assembly process.

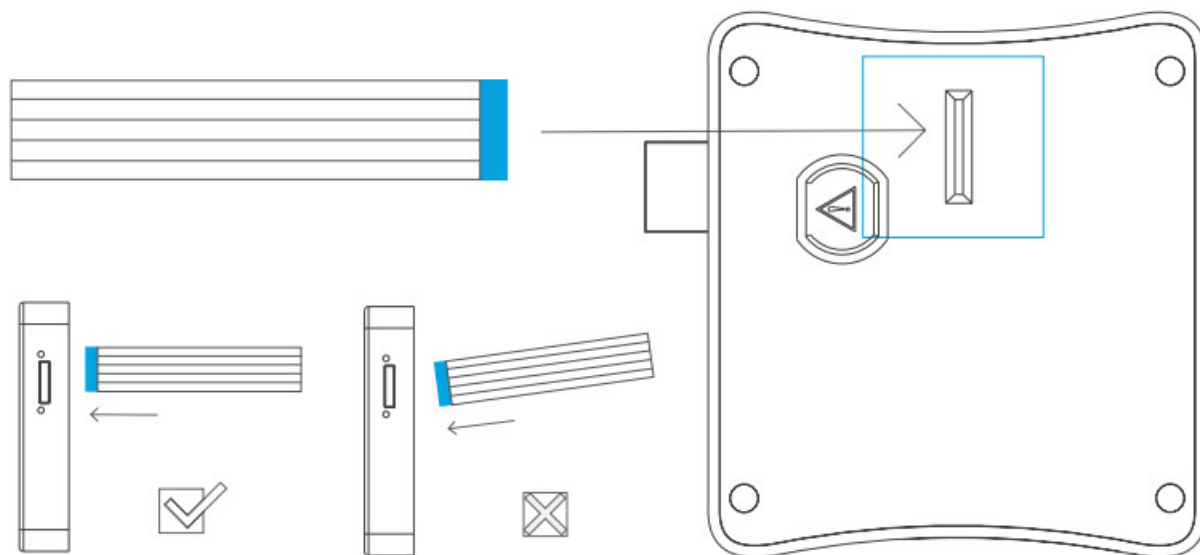

2

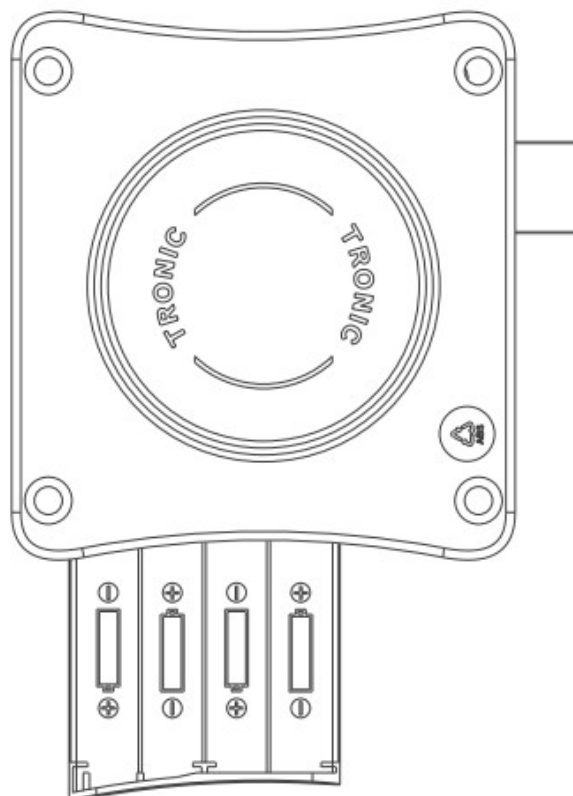


Release the batteries thanks to T20 Torx Security screw located on the opposite of the battery case
Verify that the batteries are in the right polarity (as indicated in the battery box).

IMPORTANT


The battery pack must remain connected during the release of the batteries. Otherwise, the internal clock will lose the time configuration.

Important notes

3

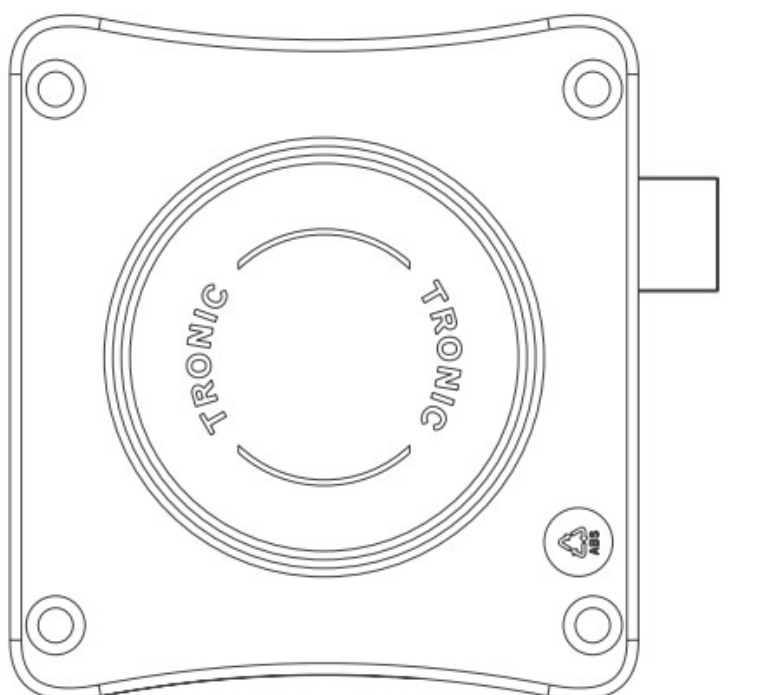


Verify that the screws are not fastened too tight (<20kgf/cm2).

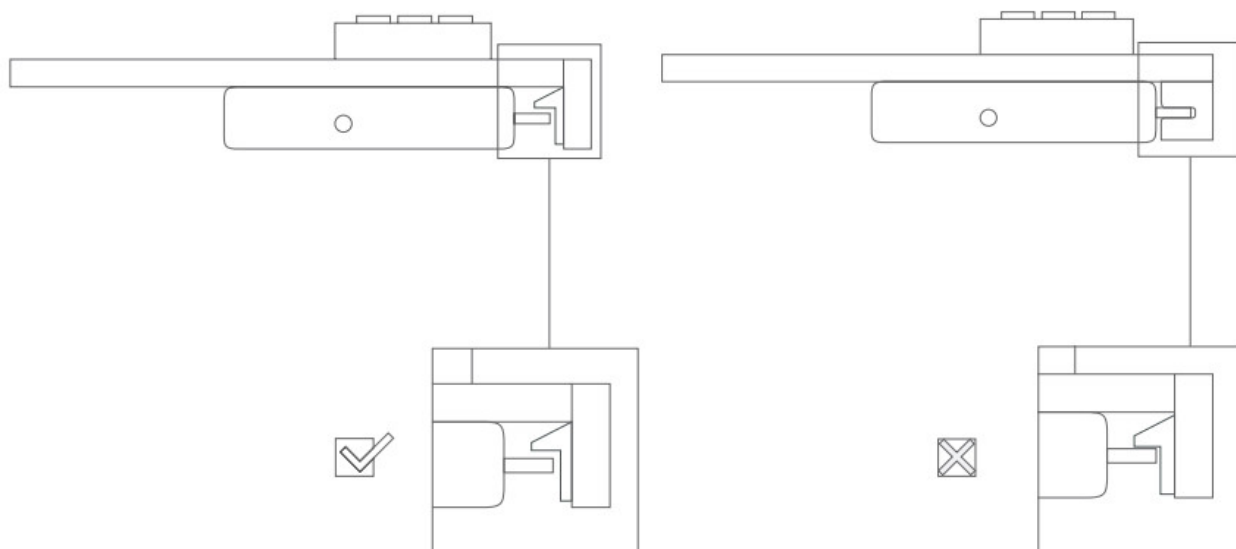


LED lights

After introducing the correct code and pressing ENTER, the three LEDs blink at the same time (green-yellow-red) and the lock does not work.

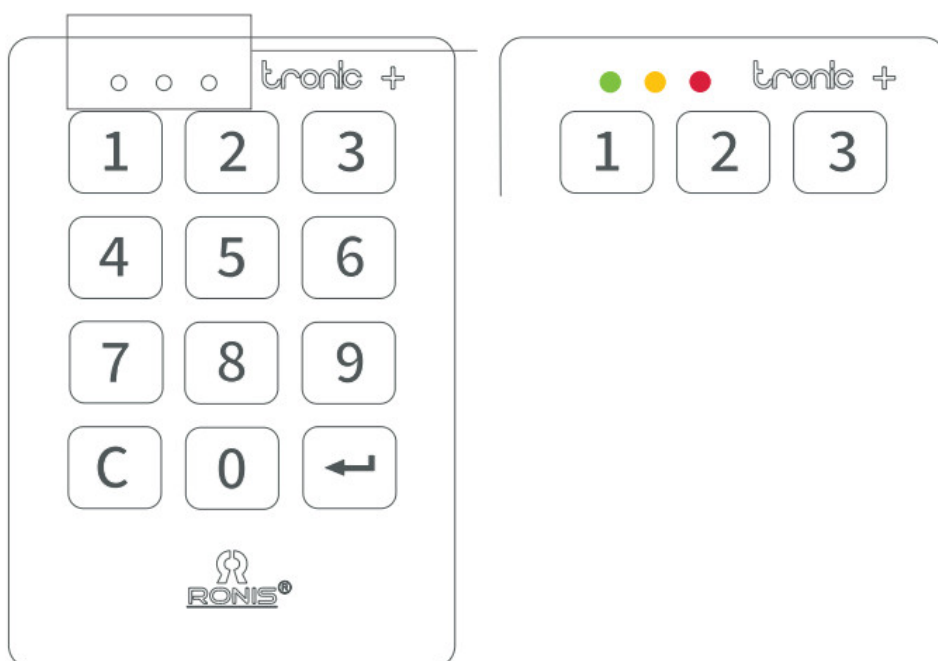


Dead batteries: replace batteries.

After pressing any button the yellow LED blinks.

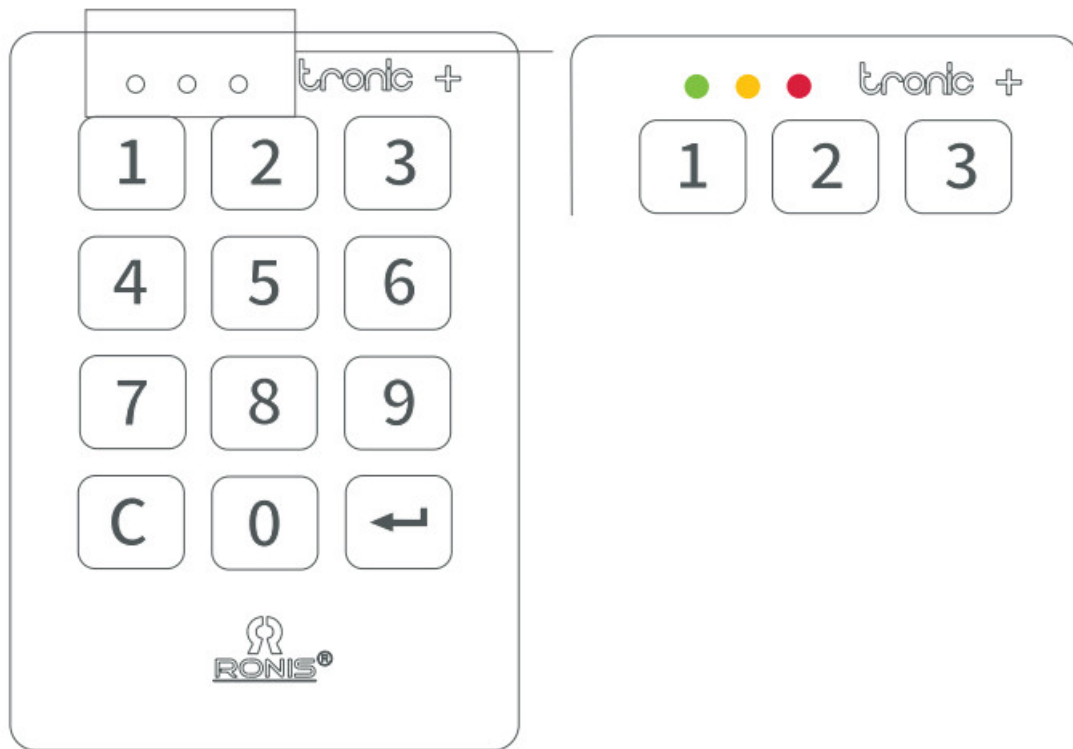

Dead or almost dead batteries: replace batteries.

Batteries

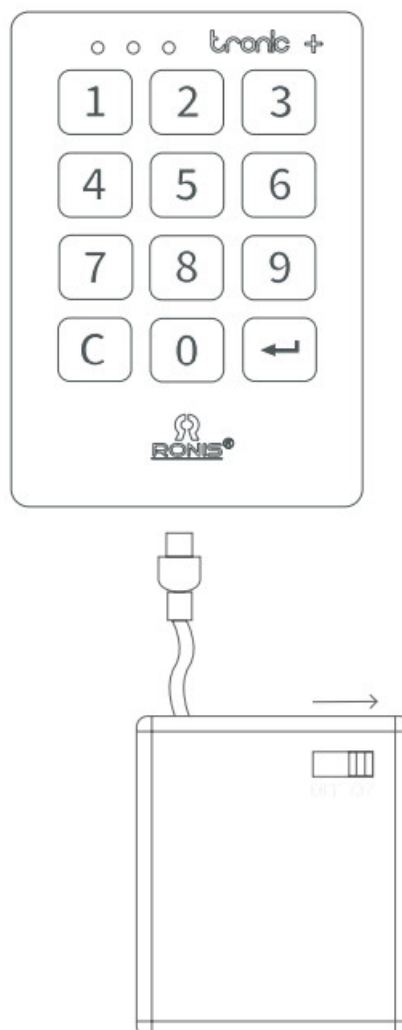

1. Make sure the battery pack contains full powered batteries (don't screw the battery pack too tight to avoid breaking the mechanism)

2. If the lock is closed, introduce the user code (or the master one) to open it.
3. Replace the old batteries for new ones and disconnect the battery pack.


Important

We suggest to change once every three years the batteries for ensure their good condition. After a long time, the batteries can deteriorate and damage the lock, especially in hot environments.

Do not clean the locks with cleaning products with hydrochloric acid, lye or corrosive components, especially on the metallic parts.



Documents / Resources

	<p>RONIS Tronic Plus DOM Keypads [pdf] Instruction Manual Tronic Plus, Tronic Plus DOM Keypads, DOM Keypads, Keypads</p>
--	--