



Roth Touchline PL Controller Installation Guide

[Home](#) » [Roth](#) » Roth Touchline PL Controller Installation Guide 

Contents

- [1 Roth Touchline PL Controller](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Roth Touchline PL Controller



Product Information

The product is a thermostat controller that allows users to set and change the temperature of a room. It also provides additional features such as viewing the battery level and sensor calibration value, locking the buttons, and returning to the current temperature view. The product has live connections that may cause fatal electric shock, and users are advised to switch off the 230V power supply before working on the controller to prevent accidental switching on.

Product Usage Instructions

1. Before working on the controller, always switch off the 230V power supply and prevent it from being accidentally switched on.
2. To mount the backplate of the thermostat on the wall, push lightly on the snap lock with a finger or screwdriver (if mounted on the wall) to slide the backplate of the thermostat.
3. Mount the backplate on the wall (screws not included), and then slide the thermostat onto the back plate.
4. In sleep mode, the current temperature is displayed. To set/change temperature, press the +/- button.
5. To view the battery level, select "Bat", and the screen will flash for 3 seconds, displaying the level.
6. To view the sensor calibration value, select "Cal", and the screen will flash for 3 seconds, displaying the value. The value can be changed on the controller; please refer to the user manual for instructions.
7. To lock the buttons, select "Loc", and the screen will flash for 3 seconds. You can choose/confirm to activate the lock with yes/no. After activating Lock (yes), the lock will be activated after 10 seconds of inactivity. To unlock, press and hold +/-, and when "Ulc" appears, the buttons are unlocked.
8. To return from the menu manually, select "Ret", and the screen will flash for 3 seconds, returning you to the view of the current temperature.

 
Installation

 
Roth wireless receiver

WARNING


Risk of fatal electric shock from touching live connections. Before working on the controller always switch off the 230V power supply and prevent it from being accidentally switched on.

Must be mounted on a flat surface, screws max. Ø 3 mm.

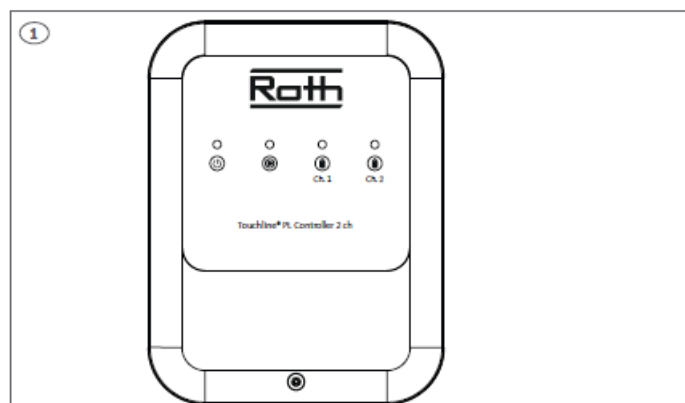

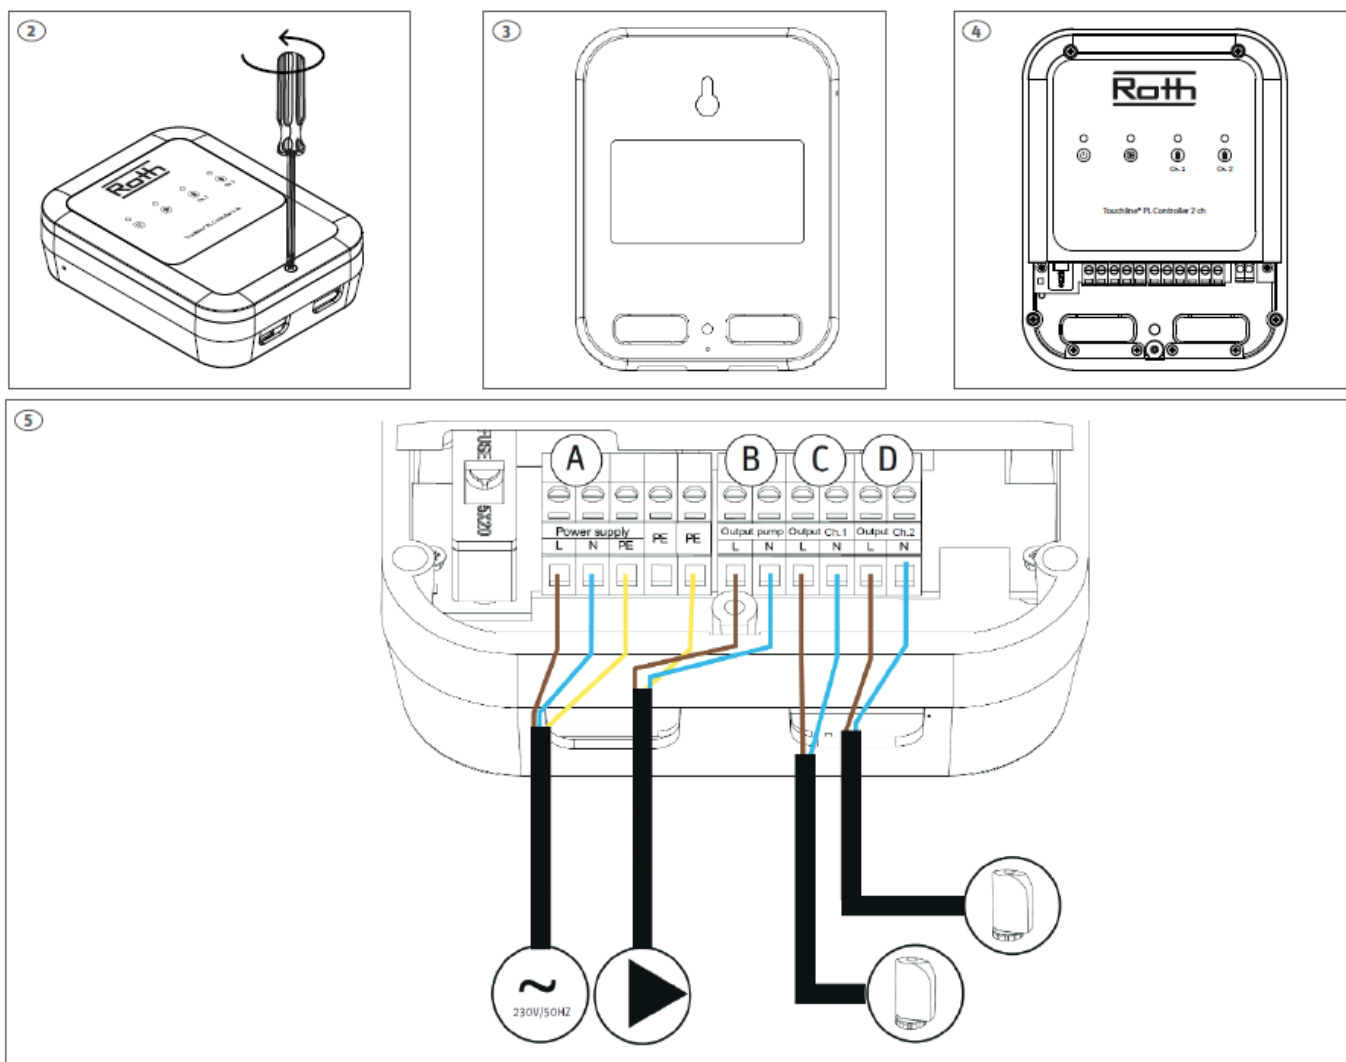

 
- 230V power (factory installed).
- 230V pump output, max. load 0,5 A. Connect “brown” to L and “blue” to N. Cables must be secured.
- Actuator. Connect “brown” to L and “blue” to N. Cables must be secured. Use Roth Project actuators 230V 1 Watt, HVAC no. 7466275430. Max. 2 pcs. per channel.

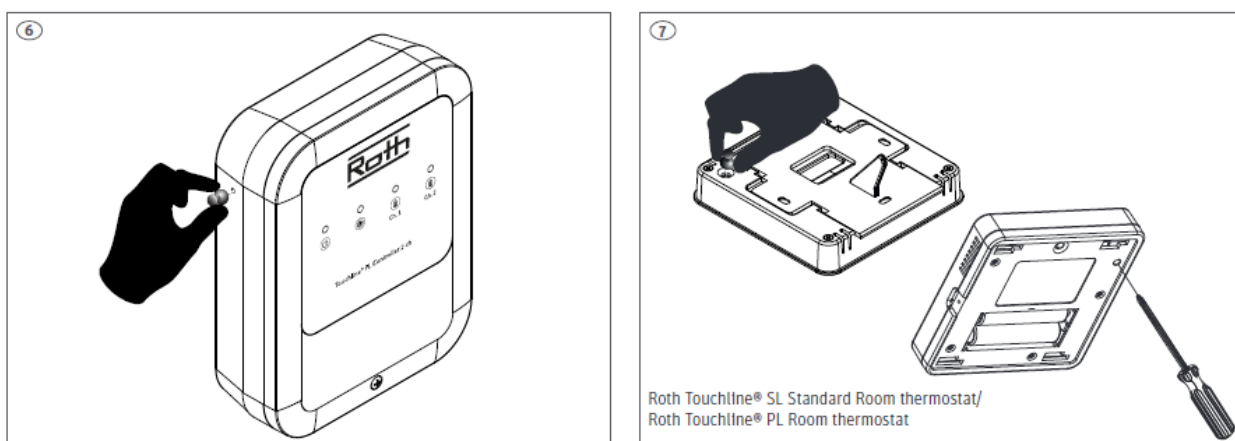



Pairing/registering the thermostat. All connections must be made to the Controller (pump, actuator before start-up. Please see the controller manual for details. Press the registration button on the left side of the control unit (see picture 6) and then press the registration button on the room thermostat (see picture 7). The temperature is now shown in the display.

Attention! Do not press the buttons on the front of the thermostat whilst pushing the pairing button on the rear (see picture 7). Press the registration button again to register an additional thermostat. The thermostat is now


 
connected to the channel. Make sure Ch.1/Ch.2 on the Controller light up when the room thermostat calls for heating.

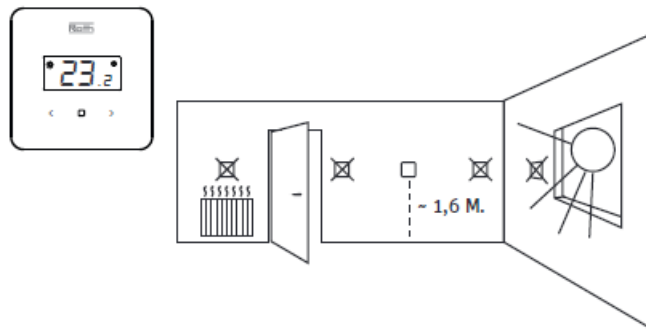

  - Push lightly on the snap lock with a finger or screwdriver (if mounted on the wall) to slide the backplate of the thermostat.
- Insert batteries (included), be aware of +/- polarity.

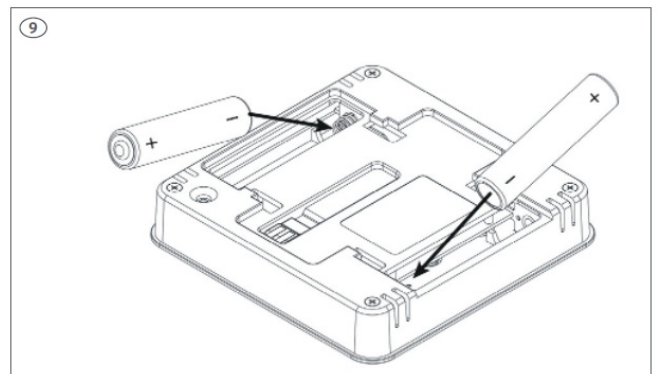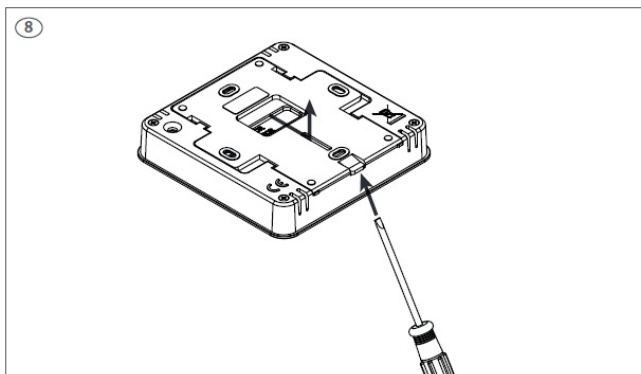

  - Mount backplate on the wall (screws not incl.) thermostat slides onto back plate.
- If you want to use the thermostat as a free-standing, the supplied foot can be mounted in the back plate before it's mounted again. The thermostat can be connected to all Controllers in the Roth Touchline® SL series.

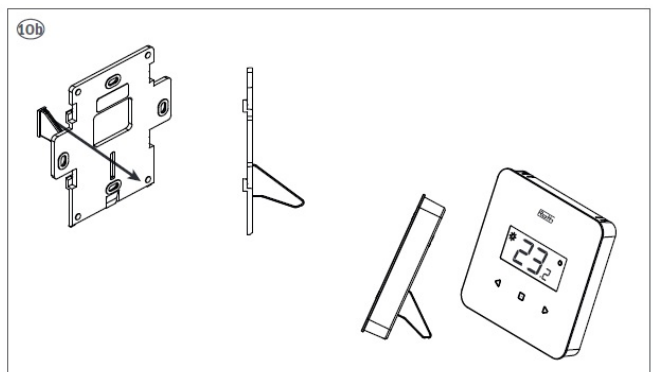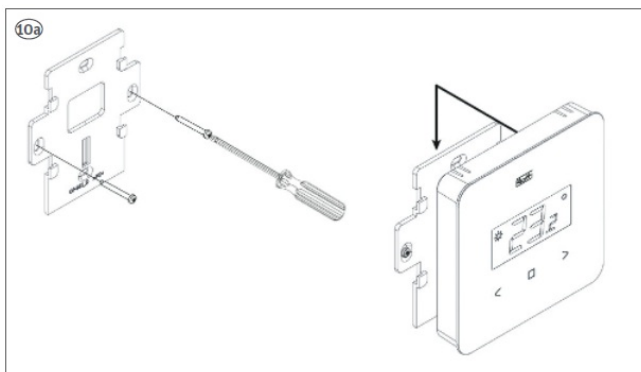



In sleepmode the current temperature is displayed. To set/change temperature press < > buttons. Confirm by pressing ☐ or wait 5 sec.



You can switch between temperature display and relative humidity display by briefly pressing the ☐ button.



Enables you to view battery level. Select "Bat", the display flashes. Confirm within 5 sec. after which the battery level is displayed in percentage %.



Enables you to lock the buttons. Select "Yes" by using one of the buttons < >, confirm by pressing ☐ or wait 5 seconds. When the lock is active, the keys are locked automatically after 10 seconds of inactivity. To unlock, press and hold the buttons < > for 10 sec. The keys are accessible when the display returns to showing the current temperature. The key lock is activated until you inactivate it in the menu.



Enables you to return the room thermostat to the factory setting. Select "dEF" and the display flashes and shows the selected value. Select/confirm (Yes) with < > buttons within 5 sec. Confirm by pressing \square or wait 5 sec. and the factory settings has be restored.

 
 


Sensor calibration value. "Cai". Value can not be changed









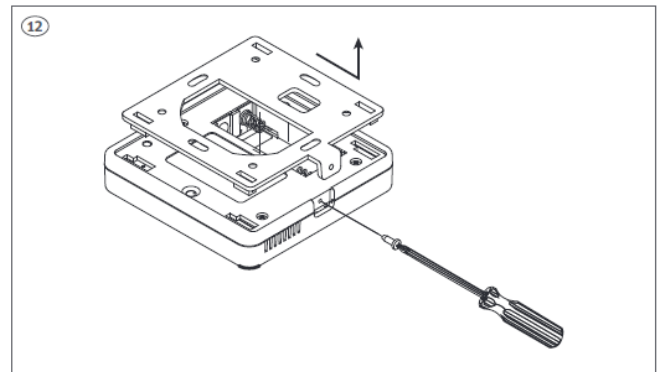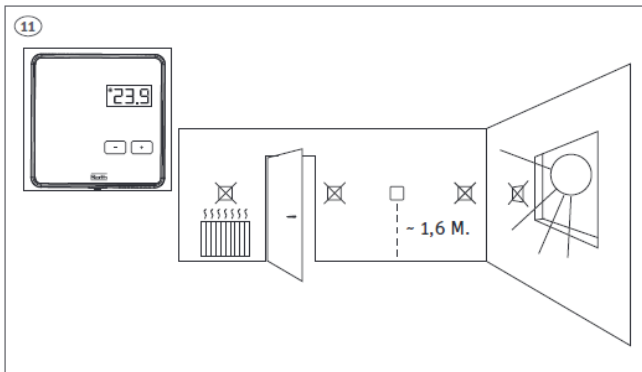

  Enables you to return from the MENU manually. After selecting "rEt" the screen flashes for 5 sec. and returns to view of the current temperature.

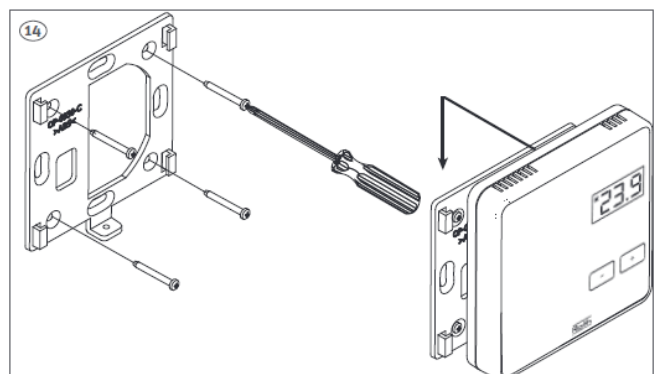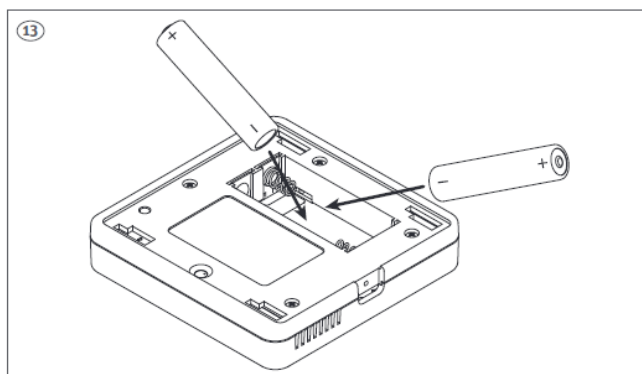- Remove screw and slide backplate off.



- Insert batteries (included), be aware of +/- polarity.
- Mount backplate on the wall (screws not incl.) thermostat slides onto back plate.



UK	
	In sleepmode the current temperature is displayed. To set/change temperature press +/- button.
	Enables you to view battery level. After selecting "Bat" the screen flashes for 3 sec. and the level is displayed.
	Enables you to view the sensor calibration value. After selecting "Cal" the screen flashes for 3 sec. and the value is displayed. Value can be changed on the Controller, please see user manual.
	Enables you to lock the buttons. After selecting "Loc" the screen flashes for 3 sec. You can choose/confirm to activate the lock with yes/no. After activating "Loc" (yes) the lock will be activated after 10 sec. of inactivity. To unlock press and hold +/- and when "Ulc" appears the buttons are unlocked.
	Enables you to restore factory settings on the sensor. After selecting "Def" the screen flashes for 3 sec. you confirm/choose (yes/no) with +/- button and after 3 sec. the reset will be done.
	Enables you to return from the MENU manually. After selecting "Ret" the screen flashes for 3 sec. and you return to view of the current temperature.



Roth Touchline® PL

ROTH UK Ltd

1a Berkeley Business Park Wainwright Road Worcester WR4 9FA Phone +44 (0) 1905 453424

E-Mail enquiries@roth-uk.com
technical@roth-uk.com
orders@roth-uk.com
accounts@roth-uk.com

Installation Roth Touchline® PL controller 2ch_20220324

Documents / Resources

	<p>Roth Touchline PL Controller [pdf] Installation Guide Touchline PL Controller, Touchline, PL Controller, Controller</p>
--	--

References

- [🌐 Frontpage | Norge.no](#)
- [🌐 Hej! Welcome to sweden.se – the official website of Sweden](#)
- [🇬🇧 UK.COM](#)

Manuals+.