




Roth Touchline SL 8Ch Controller Installation Guide

[Home](#) » [Roth](#) » Roth Touchline SL 8Ch Controller Installation Guide 

Roth Touchline SL 8Ch Controller Installation Guide



Contents



- [1 WARNING](#)
- [2 Installion Instruction](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



WARNING


Risk of fatal electric shock from touching live connections. Before working on the controller always switch of the 230V power supply and prevent it from being accidentally switched on.

Installion Instruction

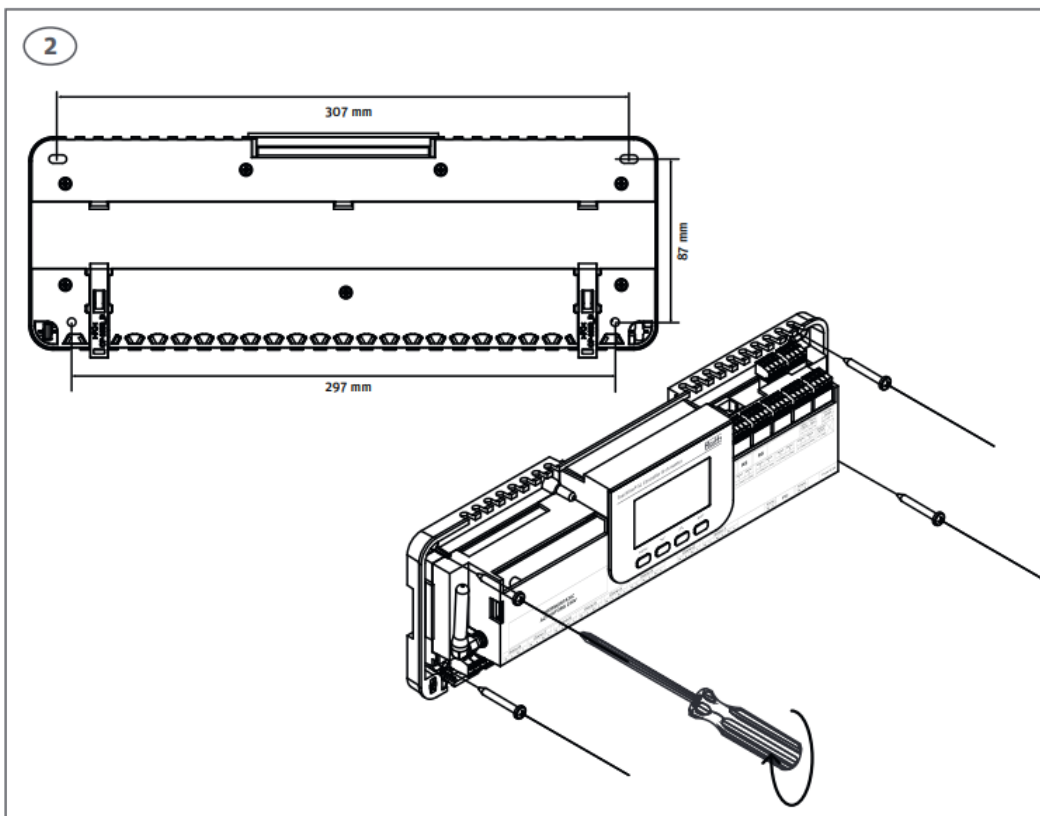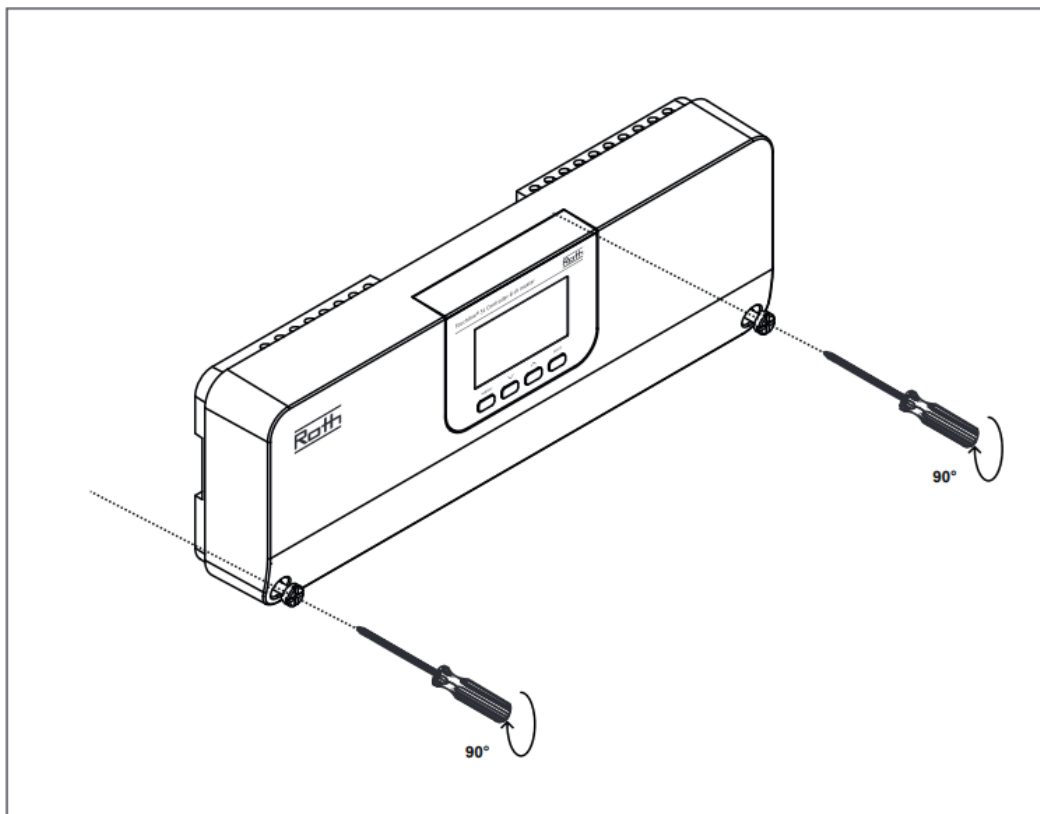


Roth Touchline® SL Controller 8 ch, master HVAC no. 7466397028

Must be mounted on a flat surface or using a DIN rail (not incl.), screws max. Ø 4 mm.

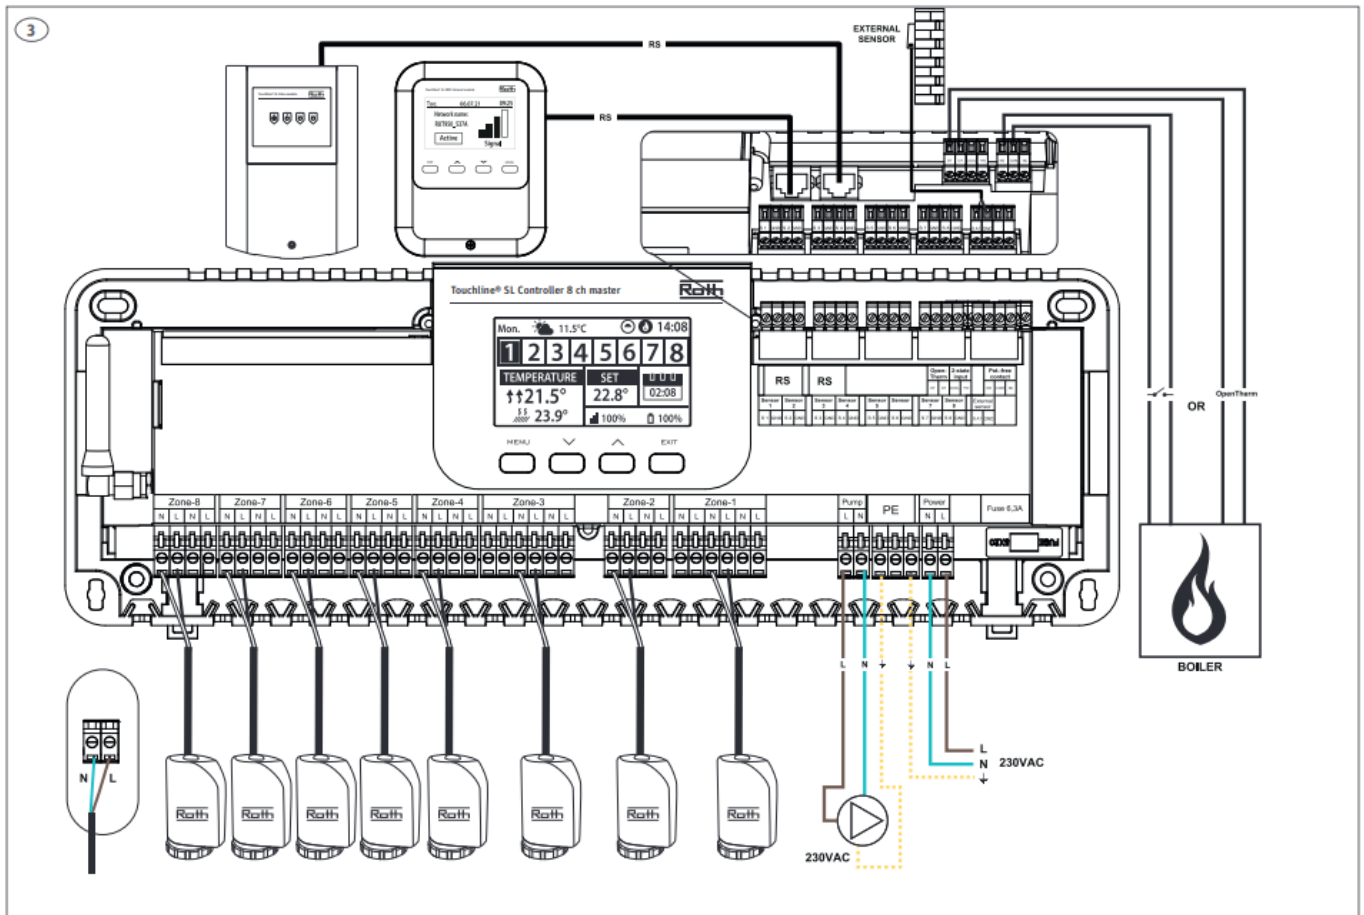


If required up to 4 actuators can be connected to the same output/ zone (32 actuators in total on the controller)
 Meaning: An output with 2, 3 or 4 terminals can all be connected with up to 4 actuators. Use Roth Touchline® actuator 230V 1 watt, HVAC no. 7466275433.

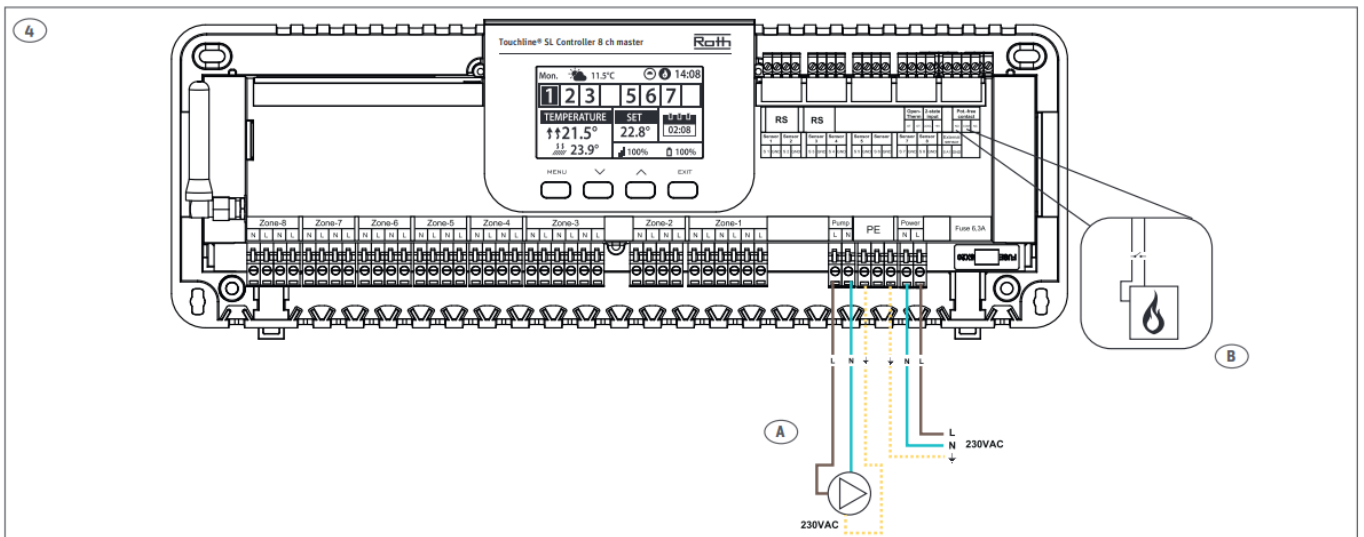


- 230V pump output, max. load 0,5A. Cables must be secured

5

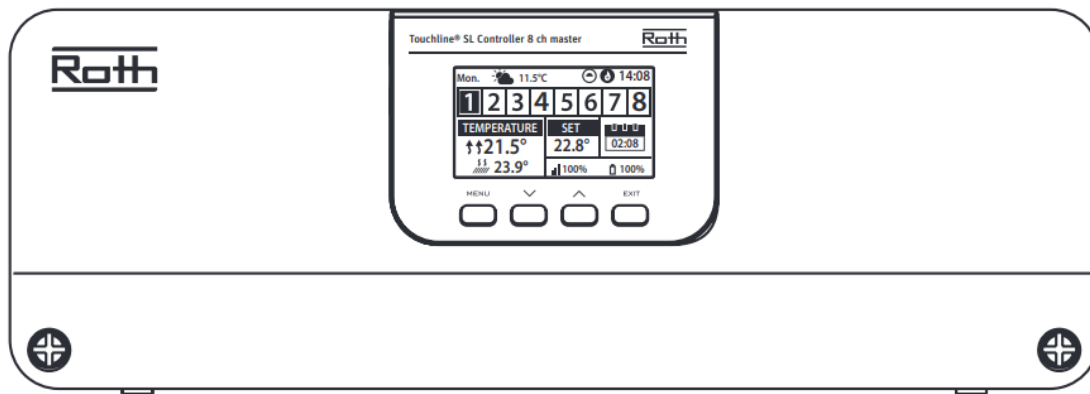


- Boiler/heat supply, potential free relay max. load 1A


6

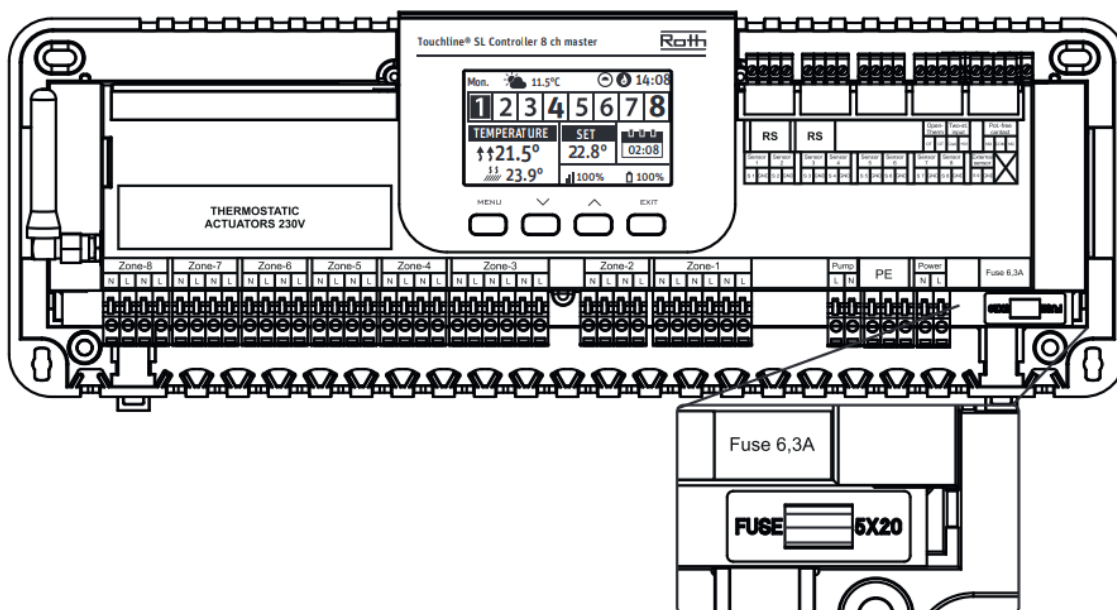


7

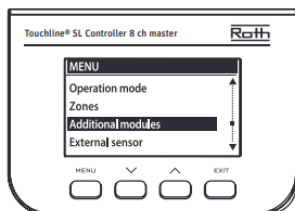


8

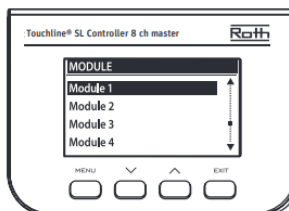


9

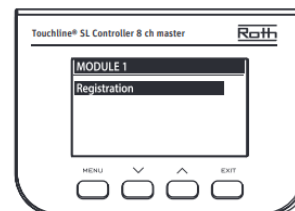


10

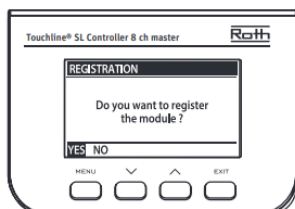


11

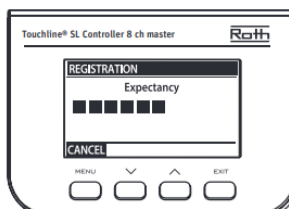


One Roth Touchline® SL Controller, master can be connected wireless with up to 4 Roth Touchline® SL Controllers, extension, meaning up to 40 channels in one system.

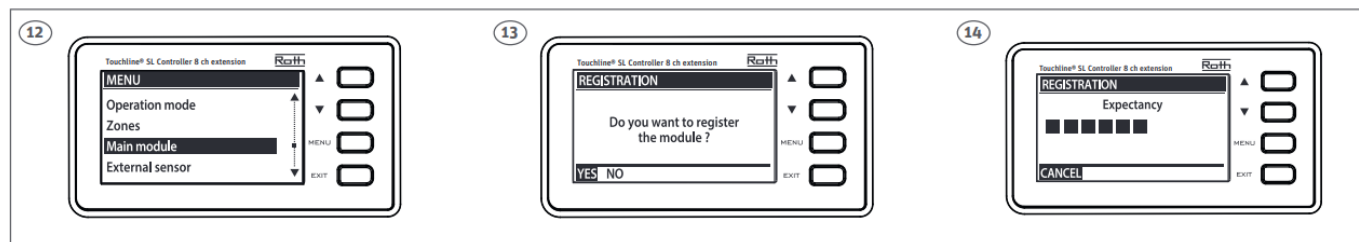


Now press the MENU button on the Extension Controller and follow the screens. Roth Touchline® SL Extension Controller 1 will show the channels 9-16. Controller 2 channels 17-24 etc.

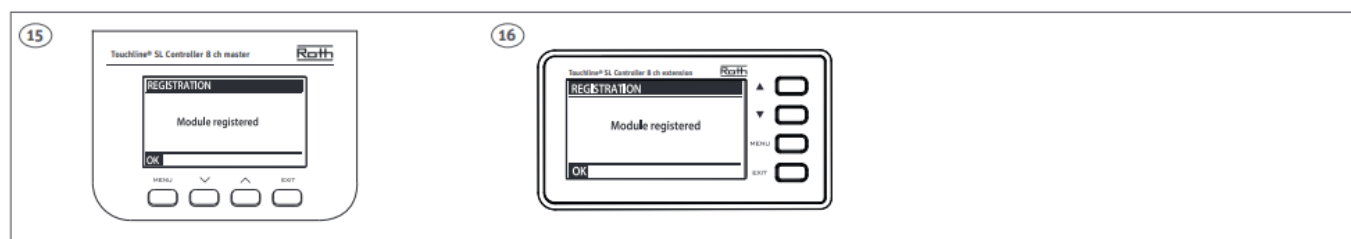


When the devices have registered the connection, “OK” is displayed. Finish by pressing “Menu”.

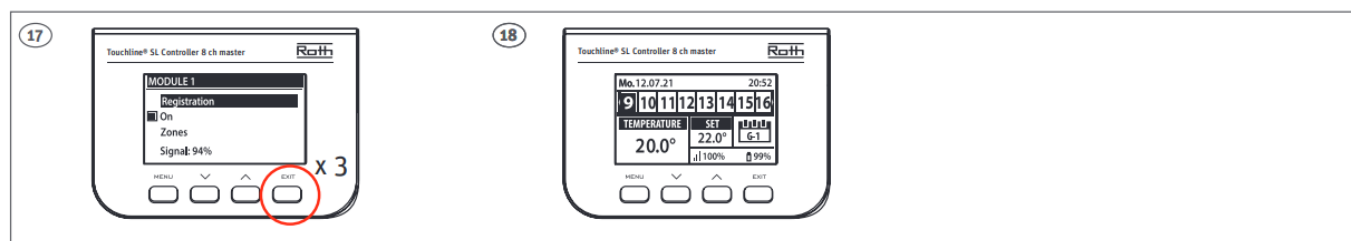

After registering the Roth Touchline® SL Controller, extension to the Roth Touchline® SL Controller, master this will be shown on the display. It is now possible to see all channels on both the Master and Extension Controller on the Master display. All channels can be operated from the Roth Touchline® SL Controller, master or via the Roth Touchline® SL app if the Master Controller is connected to the internet via a Roth Touchline® SL WiFi Internet module.

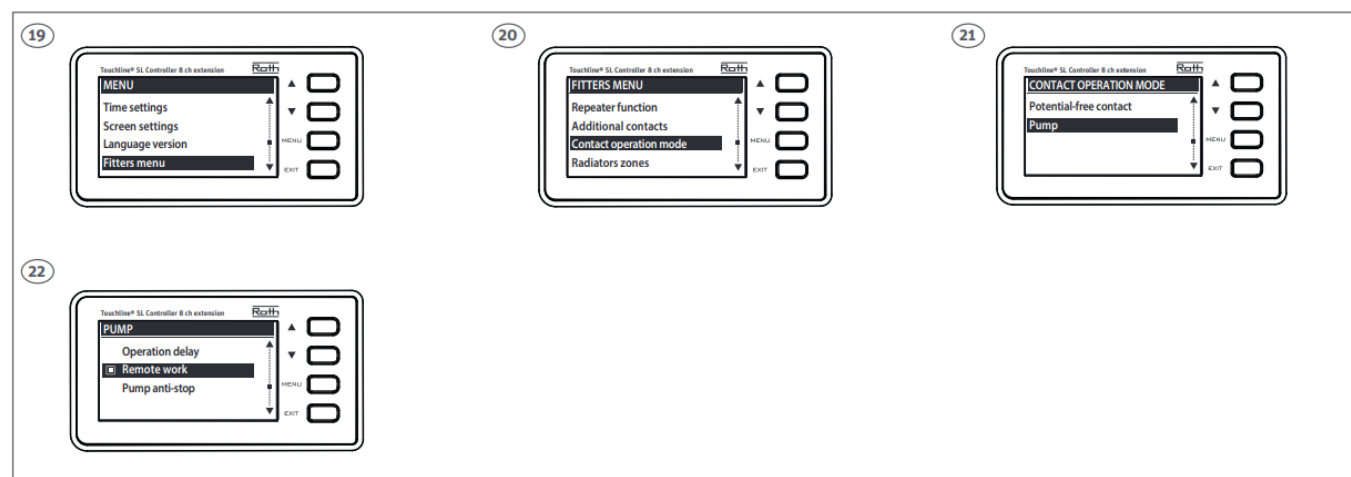

If the pump output is to be used to control the global pump connected to the control unit – master, the signal must be transmitted from the control unit – extension to the master control unit. Follow the steps on the screens for setting of the control unit – extension.

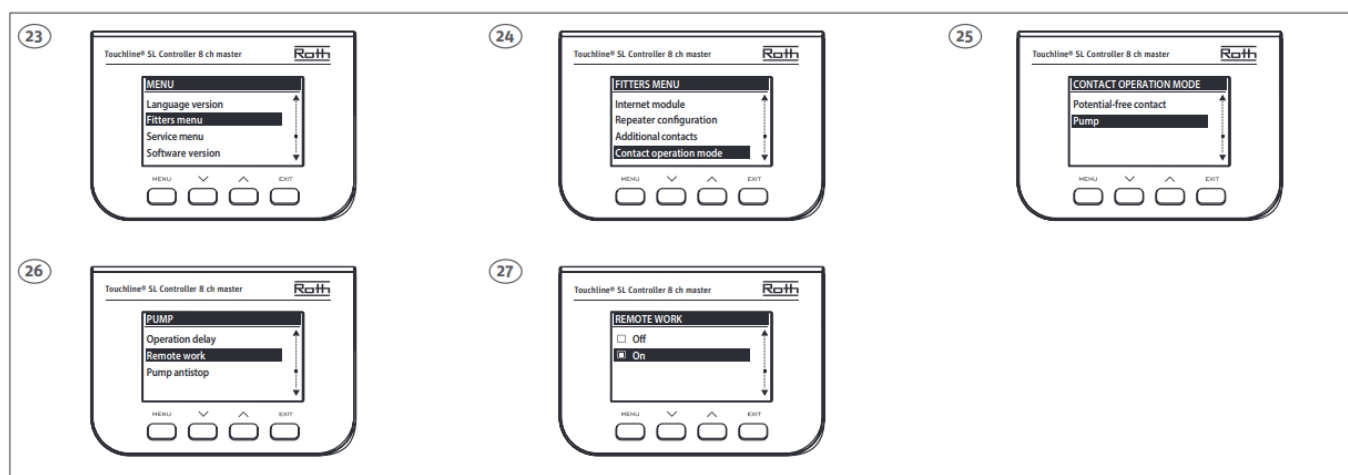

Finish the setup on controller – master, follow the steps on the screens.

Roth Touchline® SL QR



<https://rebrand.ly/ptvf6xe>



Documents / Resources

	<p>Roth Touchline SL 8Ch Controller [pdf] Installation Guide Touchline SL 8Ch Controller, Touchline SL, 8Ch Controller, Controller</p>
---	---

References

-  [Frontpage | Norge.no](#)
-  [Hej! Welcome to Sweden | sweden.se – the official website of Sweden](#)
-  [UK.COM](#)

Manuals+.