

Roth Touchline SL Window Contact Installation Guide

Home » Roth » Roth Touchline SL Window Contact Installation Guide 🖫

Roth Touchline SL Window Contact Installation Guide




Roth Touchline® SL window switch is intended to be installed on the windows inside. When the window is opened, the sensor sends the information to the control unit that it must deactivate heating in the zone after a preset delay.

Contents

- 1 Roth underfloor heating system
- 2 Installation
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

Roth underfloor heating system

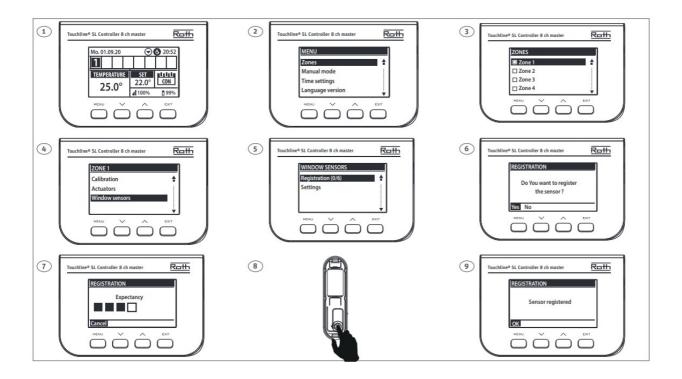

Registration of Roth Touchline® SL window switch


To register a sensor, select on the control unit which zone the sensor should belong to. Under this zone, select the menu item "Windows sensor". Select "Registration" when the control unit searches for a sensor, press the learn button on the sensor, (8) within 120 seconds.

When the registration is successful, the control unit displays "Sensor registered" and the window switch Flashes twice. If the LED on the sensor is permanently lit, there is no communication with the control unit, possibly due to excessive distance.

Installation

Mounting the window switch can be done with the supplied double-sided tape, or with small screws, on the upper part of the window frame (opposite side of the hinges), attach the lower part of the sensor to the tape. Then insert the battery into the lower part, **see Fig 2.** If you have not subscribed to a channel switch for a channel yet, wait to press the top.


Fig 2

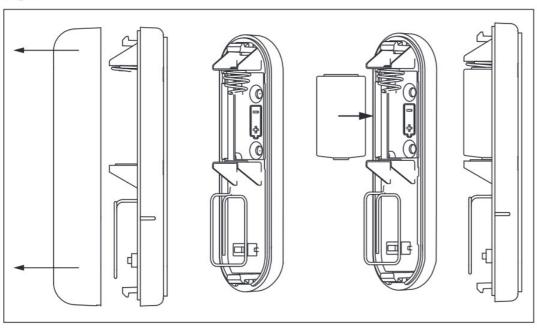

• The magnet must be placed on the window sill, either with double-sided tape!


 Maximum distance between the sensor and the magnet up to 15 mm and the marking line must be next to each other, see Flg 3.

Fig 3

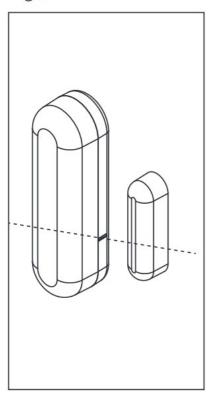


• The mounting method is illustrated in the drawing below, Fig 4.

Fig 4

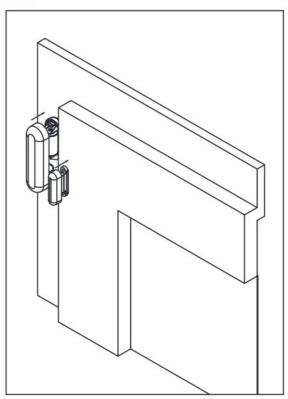


When the window switch is connected to a channel, the upper part can be pressed into place.


If you want to remove all the actuators, do so by pressing "Actuators removal".

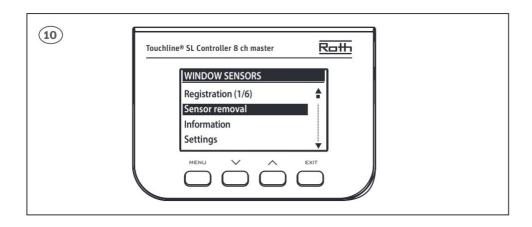


Under "Information" you will nd information about, version, status – open/closed, signal strength and battery status.

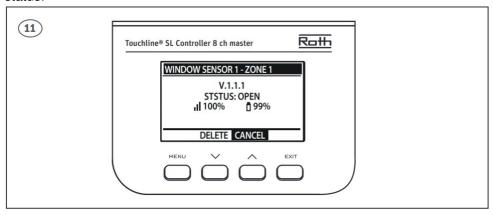

Under "Settings" you can set the window switch on/off or set the delay time.

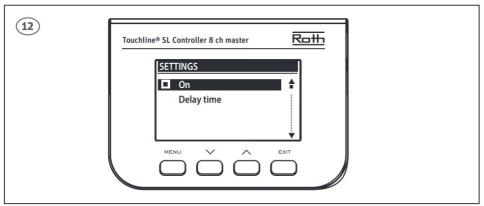

The delay time is the delay from e.g. opens the window until the control unit shuts off the heat in a room.

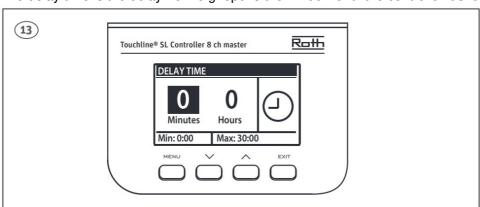



ROTH UK Ltd

1a Berkeley Business Park Wainwright Road Worcester WR4 9FA

Phone +44 (0) 1905 453424 E-Mail enquiries@roth-uk.com technical@roth-uk.com orders@roth-uk.com accounts@roth-uk.com

roth-uk.com

ROTH DANMARK A/S

Centervej 5 3600 Frederikssund **Tlf.** +45 4738 0121

E-mail: service@roth-danmark.dk

roth-danmark.dk

ROTH SVERIGE AB

Höjdrodergatan 22 212 39 Malmö **Tel.** +46 40534090 **Fax** +46 40534099

E-mail: service@roth-sverige.se

roth-sverige.se

ROTH NORGE AS

Billingstadsletta 19 1396 Billingstad **Tel.** +47 67 57 54 00

E-mail: service@roth-norge.no

roth-norge.no

facebook.com/RothNorge

ROTH FINLAND OY

Raaseporintie 9 (Talo 2) 10600 Tammisaari **Puh.** +358 (0)19 440 330

S-posti: service@roth-finland.fi

roth-finland.fi

facebook.com/RothFinland



Documents / Resources



Roth Touchline SL Window Contact [pdf] Installation Guide Touchline SL Window Contact, Touchline SL, Window Contact, Contact

References

- © Frontpage | Norge.no
- O Hej! Welcome to Sweden | sweden.se the official website of Sweden
- O UK.COM

Manuals+,