



How To Connect The Elinchrom Transmitter To Your Rotolight User Guide

[Home](#) » [Rotolight](#) » How To Connect The Elinchrom Transmitter To Your Rotolight User Guide 

Contents

- [1 How To Connect The Elinchrom Transmitter To Your Rotolight](#)
- [2 Instruction](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Connect

How To Connect The Elinchrom Transmitter To Your Rotolight



Instruction

HOW TO CONNECT THE ELINCHROM TRANSMITTER TO YOUR ROTOLIGHT A STEP BY STEP GUIDE – UPDATED OCTOBER 2022

CHECK YOUR ELINCHROM FIRMWARE AND UPDATE AS NECESSARY:

1. Turn your Elinchrom transmitter on, the latest firmware will be shown at the bottom of the screen on startup.
2. The current firmware versions are Sony (V3.1) Canon and Fuji (V3.2) Nikon (V3.4), Olympus Panasonic v3.01
3. Older versions will work fine, but there is improved navigation (percentage % display, full Kelvin display, and name recognition for Titan series) with newer firmware.
4. To update your Rotolight/Elinchrom Transmitter firmware, go to: www.elinchrom.com/support/firmware

NEXT:

HOW TO UPDATE NEO 3/AEOS 2 FIRMWARE

Check you are running the latest Firmware visit www.rotolight.com/support

To apply a firmware update, download the latest firmware to a USB 2.0 type A stick, (not USB 3.0) and ensure it is formatted to Fat 32, (not Fat 32 extended). Ensure any connected battery has a reasonable charge level prior to starting the update process.



Power off the light and insert the USB stick. Whilst clicking and holding down both knobs, power on the unit. Release knobs when the bootloader dialogue box appears. Select 'YES' to install the firmware. DO NOT power off the light during a firmware update and ensure the update is allowed to complete. A progress bar will appear and upon completion the light will restart.

VIDEO TUTORIAL IS AVAILABLE VIA THIS LINK

<https://www.youtube.com/watch?v=4vvMM6GCNQE&t=1s>

Documents / Resources



[ROTOLIGHT How To Connect The Elinchrom Transmitter To Your Rotolight](#) [pdf] User Guide
How To Connect The Elinchrom Transmitter To Your Rotolight, How To Connect The Elinchrom Transmitter, NEO 3, AEOS 2

References

- [Elinchrom | Firmware & Software](#)
- [Support Centre | Rotolight](#)
- [Rotolight APP | Advanced LED Lighting](#)