



Contents [[hide](#)]

- [1 ROVER RC Robot](#)
- [2 PACKAGE CONTENTS](#)
- [3 IMPORTANT SAFETY PRECAUTIONS](#)
- [4 ROBOT](#)
- [5 REMOTE CONTROL](#)
- [6 INSERTING BATTERIES](#)
- [7 POWERING ON YOUR ROBOT](#)
- [8 MOVING YOUR ROBOT](#)
- [9 PROGRAMMING YOUR ROBOT](#)
- [10 VOICE RECORD AND VOICE CHANGER](#)
- [11 MOTION SENSING](#)
- [12 MORE INFORMATION](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



ROVER RC Robot



PACKAGE CONTENTS

- Robot
- Remote Control
- User Manual

 
IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT

1. Do not use your robot near water. Clean using a soft cloth or paper towel.
2. Do not place your robot on any wet surfaces.
3. Do not allow children under the age of five to play with robot.
4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your robot to excessive trauma.

9. Your robot is not intended for commercial use.

ROBOT

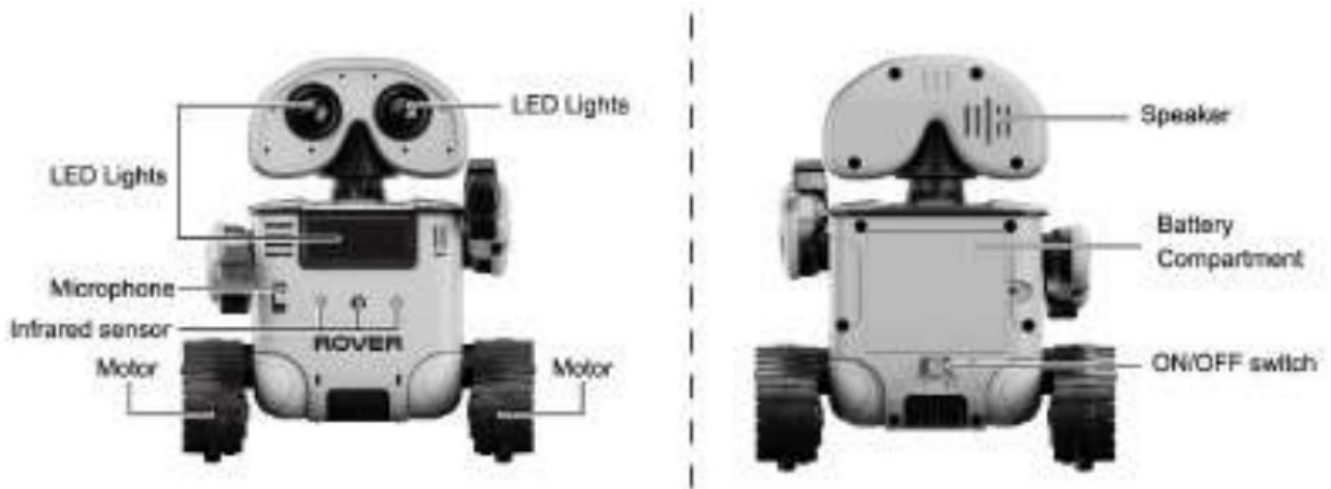


REMOTE CONTROL



INSERTING BATTERIES


Robot

 1. Unscrew to open the battery cover. Insert 4 X 1.5V AAA batteries.
2. Replace the battery cover.
 - **Attention:** Remove batteries after you have finished using your product.

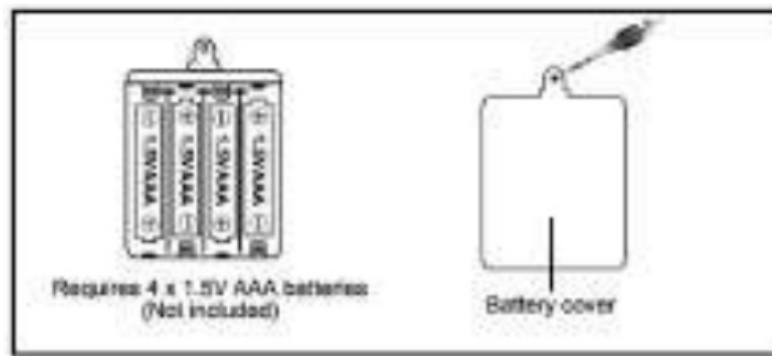

Remote control

 1. Unscrew to open the battery cover, insert 2 X 1.5V AA batteries.
2. Replace the battery cover.
 - **Attention:** Remove batteries after you have finished using your product.

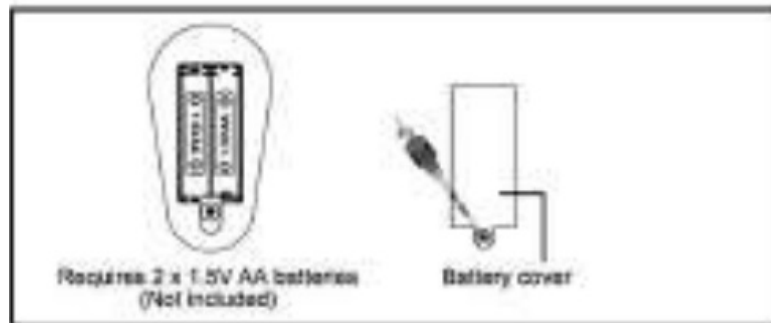

POWERING ON YOUR ROBOT

Once you have inserted batteries into your robot and remote control, you can go ahead and power on your robot. To do so, switch the ON / OFF button to turn on the robot. (The LED light of the eyes and body will be on.) When you do not operate the robot for about 3 minutes, it will make a sound and enter sleep mode, You can restart by switching the ON / OFF button to resume use. When you have finished playing with your robot, switch the ON / OFF button to turn off the robot.

NOTE: When your robot is running low on power, it will emit an audible tone and power down. Once the batteries are completely depleted, replace them as soon as possible to continue use.

MOVING YOUR ROBOT

You can use your remote control to move your robot around in different directions. By pressing the left and right arrow buttons, your robot will turn left or right.



By pressing the forward/backward button, the robot will walk forward / backward for a distance. By pressing the action acceleration button, the robot will enter action acceleration mode, press the forward /backward button, the robot will accelerate forward or backward for a distance. Press the action acceleration button again to return normal mode.



PROGRAMMING YOUR ROBOT

Press the program button and your robot will enter program mode. Once in program mode, you can press the directional buttons or music & dancing button a series of times. to create a movement program. The robot can be programmed with up to 50 actions. Press the program play button to have your robot carry out the movement program that you created.”

VOICE RECORD AND VOICE CHANGER

- **Voice record:** Press the voice record button and your robot will enter voice record

mode. Speak to the robot, then press the play recording button, the robot will repeat what you say.

 
- **Voice changer:** Press the voice changer button, the robot will enter voice changer mode. Speak to the robot, the robot will promptly repeat what you say in robot's sound.

Attention: For better use, please keep away from infrared products, strong lights and signal sources when using this product.



MOTION SENSING

Press the motion sensing button and your robot will enter motion sensing mode. Once in motion sensing mode, you can have full control of direction, including forward, backward, left, and right turning through your gestures.

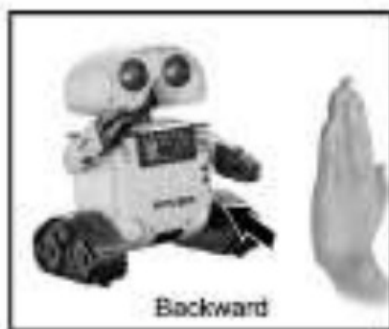


MORE INFORMATION

- **K:** 43-542-468
- **T:** 70-990-119
- PRODUCT NAME MAY SLIGHTLY DIFFER FROM IMAGE SHOWN READ THE INSTRUCTIONS BEFORE ORDERING THE PRODUCT.

- PLEASE ROSE THE PRACTICING AND INSTRUCTION MANUAL POR PUTURE REFERENCE.

 Documents / Resources

	ROVER RC Robot [pdf] User Manual 43542468, 43542468, 43542468, RC Robot, Robot
---	---

References

- [User Manual](#)

43542468, RC Robot, Robot,
ROVER Rover

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.