



Rowenta CF3610E0 So Curl Automatic Curler Instruction Manual

[Home](#) » [Rowenta](#) » Rowenta CF3610E0 So Curl Automatic Curler Instruction Manual 

Contents


- [1 Rowenta CF5710F0 Instant Straight Straightening Brush](#)
- [2 GENERAL DESCRIPTION](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 USE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Rowenta

Rowenta CF5710F0 Instant Straight Straightening Brush



GENERAL DESCRIPTION

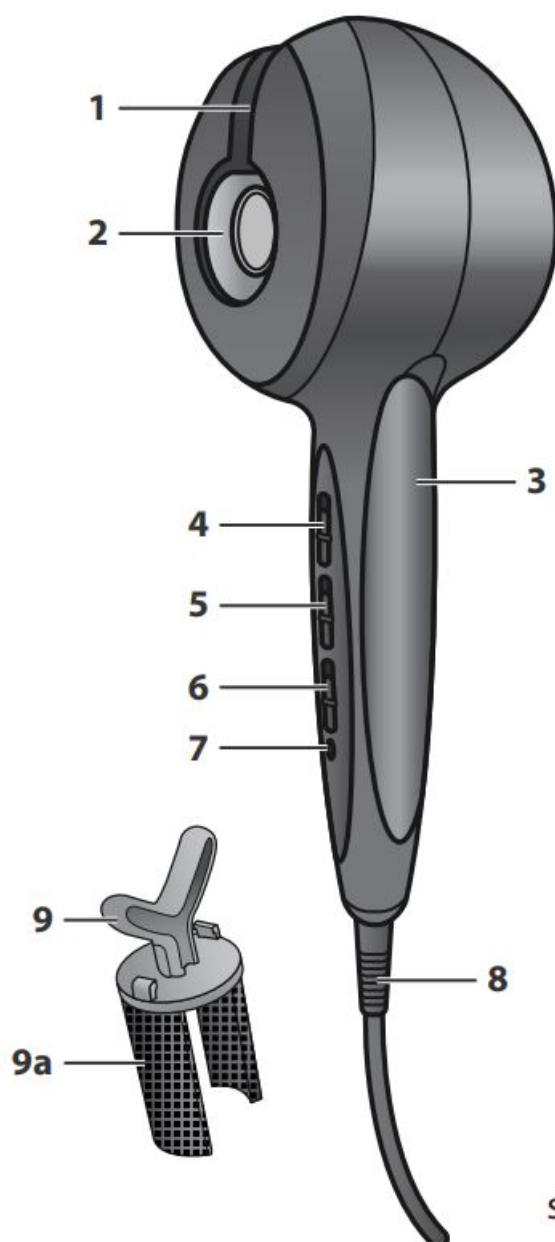

1. Hair guide
2. Heating chamber
3. Curl activation handle
4. Curl direction control (Left – Right – Alternating)
5. Timer setting (6s – 8s – 10s – 12s)
6. Heat setting (OFF – 170°C – 200°C – 230°C)
7. On/off and heat ready indicator
8. Swivel power lead
9. Cleaning accessory
 1. Movable ro

SAFETY INSTRUCTIONS

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance.
- Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
- For additional protection, the installation of a residual current device (RDC) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- When the appliance is connected to the power supply, never leave it unattended.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- The installation of the appliance and its use must however comply with the standards in force in your country.
- **WARNING:** do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the ap
- pliance is switched off.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Stop using your appliance and contact an Authorised Service Centre if:
 - your appliance has fallen.
 - it does not work correctly.
- The appliance is equipped with a heat-sensitive safety device. In the event of overheating, the dryer will stop

automatically: contact the After-Sales Service.

- The appliance must be unplugged:
- before cleaning and maintenance procedures.
- if it is not working correctly.
- as soon as you have finished using it.
- if you leave the room, even momentarily.
- Do not use if the cord is damaged.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not use an electrical extension lead.
- Do not clean with abrasive or corrosive products.
- Do not use at temperatures below 0°C and above 35°C.
- Do not use your brush if the bristles are broken.

GUARANTEE

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

USE

Attention: use on dry hair, hair must be untangled, clean and dry.

1. Plug in the brush and press the On/Off switch
2. Separate a lock of hair to straighten.
3. Brush the lock in a smooth, continuous motion, from the root to the tip.
4. Repeat this until you have achieved the desired result.
5. After use, press the On/Off switch until the screen on the brush turns off.
6. Unplug the appliance and allow it to cool down before cleaning it.

ENVIRONMENT PROTECTION FIRST

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Documents / Resources



[Rowenta CF3610E0 So Curl Automatic Curler](#) [pdf] Instruction Manual
CF3610E0, So Curl Automatic Curler, CF3610E0 So Curl Automatic Curler

References

- [YouTube](#)
- [Rowenta USA | Garment Steamers, Steam Irons & Humidifiers](#)

