




Rowenta JB10XX Lint Remover User Manual

[Home](#) » [Rowenta](#) » Rowenta JB10XX Lint Remover User Manual 

Rowenta®

 


Lint remover
www.rowenta.com
JB10XX

Contents


- [1 INSTRUCTIONS FOR USE](#)
- [2 PRODUCT CONTENTS](#)
- [3 USING THE PRODUCT](#)
- [4 CLEANING AND MAINTENANCE](#)
- [5 TRANSPORT AND STORAGE](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

INSTRUCTIONS FOR USE

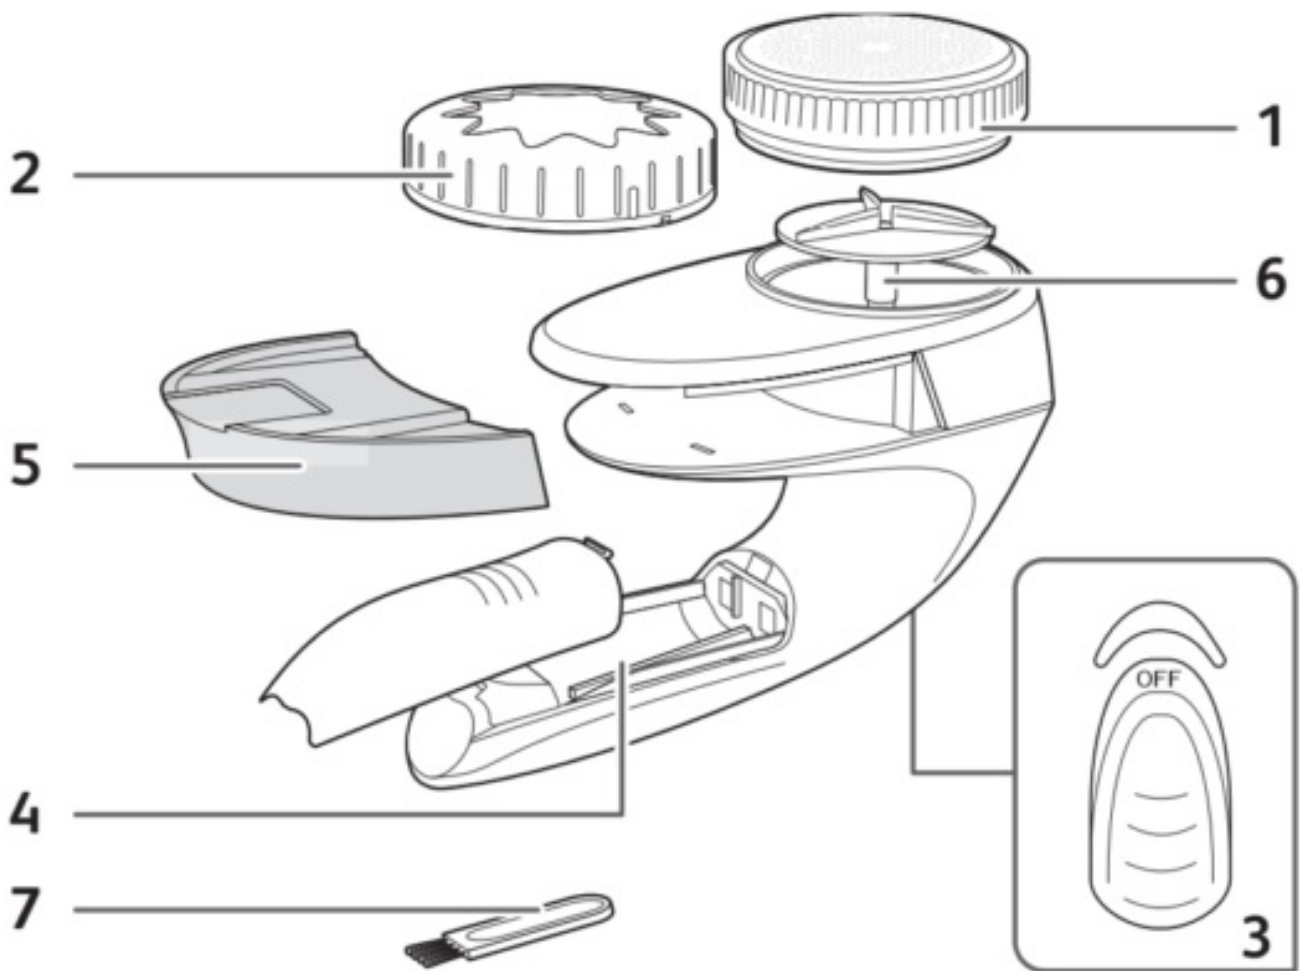

- 1. Metal blade guard with plastic cover
- 2. Height adaptor
- 3. On/Off switch
- 4. Battery compartment
- 5. Shavings tray / Lint tank
- 6. Blade support
- 7. Brush

PRODUCT CONTENTS

- 1 x Lint remover
- 2 x AA (LR6) 1.5V *
- 1 x Brush


Open the packaging box and carefully remove the appliance. Check if the contents are complete and undamaged. Check that none of the plastic parts of the product are cracked. If any part is missing or damaged, do not use the appliance and contact the seller on how to proceed. Keep the packaging for future use or dispose of it in accordance with local regulations concerning waste material.




Caution! Keep your children safe: do not leave any parts of the packaging readily accessible (i.e. plastic bags, cardboard boxes, polystyrene inserts, etc.)! Choking/asphyxiation hazard!

USING THE PRODUCT

Install or Change the batteries

1. Slide the battery compartment lid down
2. Remove the spent batteries (if any).
3. Insert new batteries in the good polarized positions. (2 x AA (LR6) 1.5V ).
4. Slide the lid partially on the compartment.
5. Gently press with your thumb on the spot shown with the arrows on the battery compartment lid and slide the lid until it engages with an audible snap.

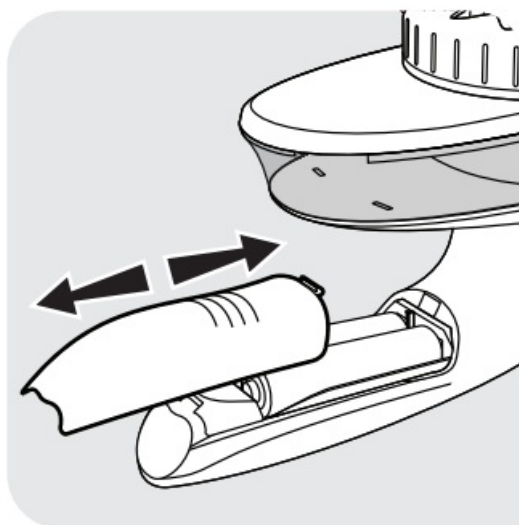







Instructions for use


1. Slide the On/Off switch up to On.
2. Spread the clothing out on a flat surface, smooth all wrinkles, and shave by moving the lint remover across the fabric surface.
3. Turn off the appliance by sliding the On/Off switch to Off.
4. Use the height adaptor to adjust the height of shaving. Turn the height adaptor to adjust the height.
5. Never over-pressed on a grid of metal blade guards while using, use soft circular movements.

Hints and tips

- To guarantee optimal operation, using when the garment is worn is not recommended. Operation best efficiency will be obtained on a flat surface. Using when a garment is worn may cause injuries.
- Use only on wet clean surfaces.
- Never use the lint remover on areas of woolen or fiber clothes where a fiber would be pointing out. Never use on a creased garment.
- Be careful when shaving the following parts of clothing:
 - near buttons and zippers
 - near any protruding parts
 - joints
 - stitches
 - non-flat surfaces
 - fragile parts
- Test the shaving on a hidden part of the clothing before use.
- Move the appliance along the grain of the fabric.
- Remove persistent fuzz or lint by moving the appliance alternately along and across the grain of the fabric.
- Shave clothes made of thin fabrics by folding them into two layers and spreading them on an ironing board or similar.
- Remove the lint from the shaving tray when the shaving tray is approx. 80% full.
- Use this appliance only with a shavings tray set in place, to avoid particle inhalation.

	CAUTION!
	<ul style="list-style-type: none"> • This appliance is powered by 2 x AA (LR6) 1.5V
	<ul style="list-style-type: none"> • The batteries are included with the product.*
	<ul style="list-style-type: none"> • When installing new batteries, refer to the polarity symbols inside the battery compartment.
	<ul style="list-style-type: none"> • Use batteries of the type recommended for this appliance, i.e. 2 x AA (LR6) 1.5V • Never use rechargeable batteries
	<ul style="list-style-type: none"> • Do not discard spent batteries with household waste; discard in special battery collection containers.
	<ul style="list-style-type: none"> • Do not recharge non-rechargeable batteries.
	<ul style="list-style-type: none"> • Do not shortcut the battery terminal.
	<ul style="list-style-type: none"> • Never expose the batteries to direct heat, e.g. direct sunlight, radiators, or fire.
 	<ul style="list-style-type: none"> • Explosion hazard! Do not disassemble, short circuit, or throw the batteries into fire.
	<ul style="list-style-type: none"> • Never mix discharged and new batteries.
	<ul style="list-style-type: none"> • Always remove the batteries from the appliance when not in use. This will prevent damage to the appliance if the electrolyte leaks from the batteries.

* depending on model

	<ul style="list-style-type: none"> • Immediately remove the batteries from the appliance when spent.
	<ul style="list-style-type: none"> • Discharged batteries may leak and damage the appliance.
	<ul style="list-style-type: none"> • If you touch battery acid with your hands, rinse them under running water. In the event of eye contact with battery acid, seek medical attention. The battery acid may cause irritation or chemical burns.
	<ul style="list-style-type: none"> • Swallowing a battery can be fatal! Keep the batteries away from children and pets. If you swallow a battery, immediately seek medical attention.

CLEANING AND MAINTENANCE



When the shavings tray is approx. 80% full, empty it and clean the blades with the brush supplied.

Caution! Remove the batteries before attempting to clean the appliance.

Never clean or use underwater.

Cleaning the shavings tray

1. Pull away the tray
2. Empty the shavings tray with the brush supplied. Wipe clean the tray or the appliance lint outlet with a damp cloth or brush if needed.
3. Never insert fingers or objects inside the appliance
4. Fully slide and lock the shavings tray.

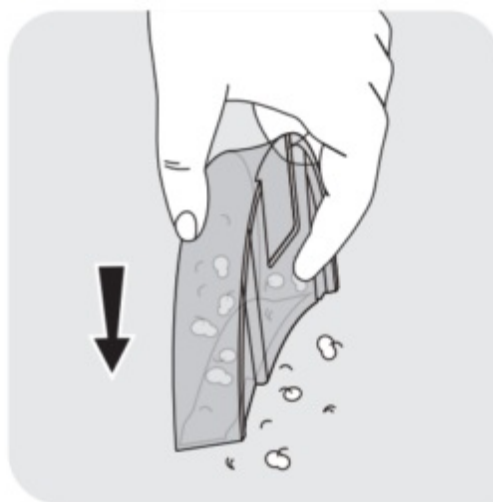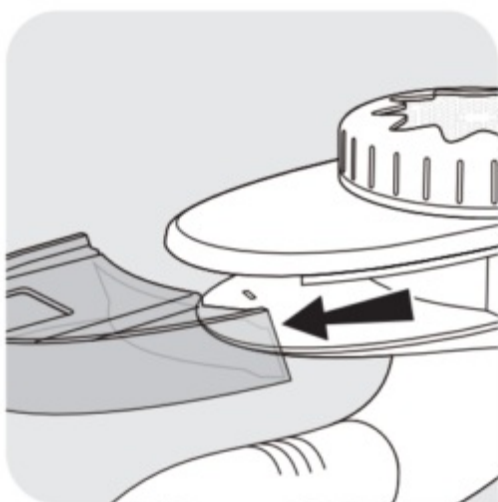


Cleaning the blades

1. Remove the height adaptor.
2. Untwist the metal blade guard.
3. Remove the blades by carefully grasping and pulling the blade's support toward yourself.

CAUTION! The lint remover blades are very sharp. Never touch with fingers.

4. Clean the lint remover interior, the blades, and the lint collector with the brush supplied.
5. Reset in location the blade support.
6. Completely screw the metal blade guard.

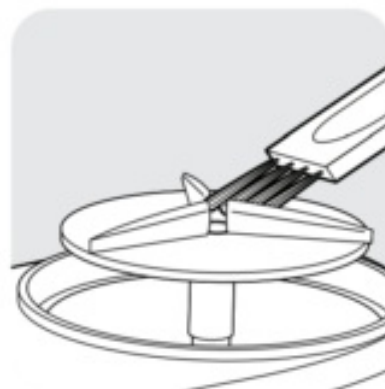

REPAIRS

This appliance has no parts serviceable by the user. Do not attempt to repair the appliance on your own. Always have a professional repair the appliance for you.

TRANSPORT AND STORAGE

- Store the appliance in its original packaging.
- Always keep the appliance in a dry, well-ventilated place that is out of the reach of children. Protect the appliance against vibration and shocks during transport.
- Always store the appliance with the batteries removed.
- If the appliance is stored or not used for a long time, batteries must be removed.

9100027105



Documents / Resources

 <p>Lint remover</p>	<p>Rowenta JB10XX Lint Remover [pdf] User Manual JA1012D1, Lint Remover, JB10XX Lint Remover</p>
--	--

References

-  [Rowenta USA | Garment Steamers, Steam Irons & Humidifiers](#)