




## **Roxcore Beach MiniBeach Mini Portabel Bluetooth User Manual**

[Home](#) » [Roxcore](#) » Roxcore Beach MiniBeach Mini Portabel Bluetooth User Manual

# **Roxcore®**

**Roxcore Beach Mini  
Item: 99154-99369**

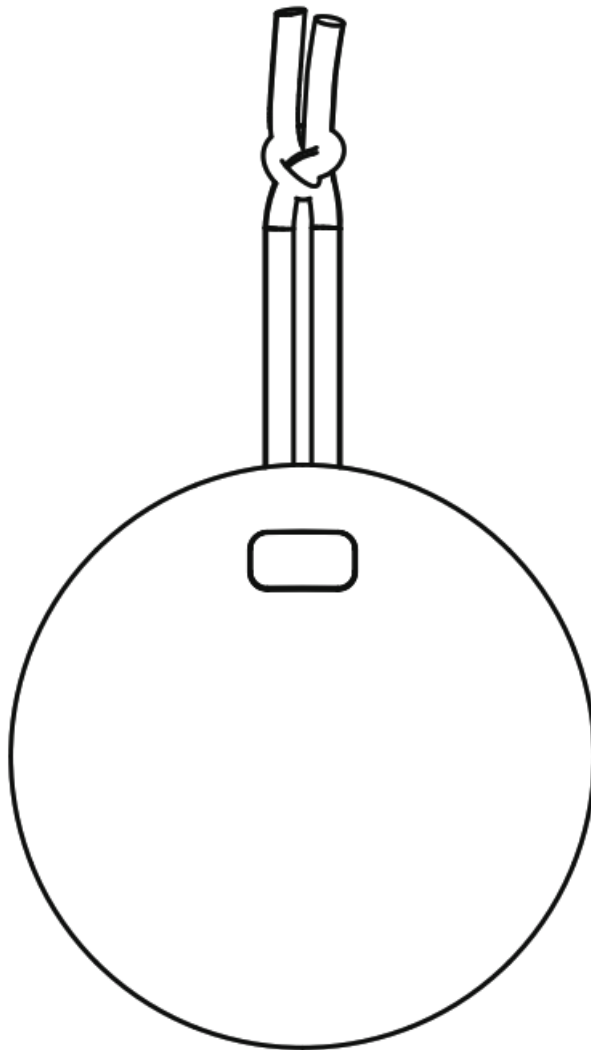

## Contents [ [hide](#)

- [1 Specifications](#)
- [2 Charging](#)
- [3 Pairing](#)
- [4 Turning the speaker on and off](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

## Specifications

Bluetooth	4.2, EDR
Power	5 W
Range	10 m
Battery life	Up to 5 h
Charging	Micro-USB (5 V, 0.8 A)
Charging time	2.5 h
IP rating	IPX5
Size	Ø100×43 mm

## Charging

Insert the USB cable in the charging port and a USB port on a computer or use a USB phone charger. The right LED shines red while charging and goes out when the charging is completed. The battery is fully charged after approximately 2.5 hours.

## Pairing

When the speaker is off, press the power button for 3 seconds. The LED on the front of the speaker will blink blue. Enable Bluetooth in your mobile phone. Search for available devices and choose “Roxcore Beach mini” in the list. If asked for a password, enter “0000”.

## Turning the speaker on and off

Press and hold the power button for 3 seconds.

## Play/pause

Press the play/pause button to play or pause music.

## Previous/next track

Press and hold the – / + buttons to change tracks.

## Volume

Press the – / + buttons to change the volume.

## Speakerphone

Once paired, the speaker can be used as a speakerphone.

Press the play/pause button to answer a call or hang up an ongoing call. Doubleclick to redial the last called number.

Press and hold the button to refuse an incoming call.

## Connect via cable

Connect an audio cable to the AUX-in port and your device’s port.

The speaker will automatically disconnect any currently connected Bluetooth devices. The play/pause button functions as a mute button in AUX mode.

## Reset

If the speaker becomes unresponsive or won’t turn off, press a small sharp object in the hole below the USB

socket until the speaker resets.

### Safety information

The speaker contains a rechargeable Li-ion battery that cannot be replaced. Do not open and disassemble the product.

[www.roxcore.com](http://www.roxcore.com)


Box 50435 Malmö

Sweden

Version: 2019-04-24



### Documents / Resources

 <p>The thumbnail shows the cover of the user manual. It features the word 'manual' at the top, followed by 'Roxcore Beach Mini' and 'Item: 99.154-90.000'. Below this is a line drawing of the speaker and the Roxcore logo.</p>	<p><a href="#">Roxcore Roxcore Beach MiniBeach Mini Portabel Bluetooth</a> [pdf] User Manual Beach Mini Portabel Bluetooth</p>
---	--

### References

- [Kjell.com](http://Kjell.com) | [Roxcore.com](http://Roxcore.com)