



RSL Series Radiant Stack Light Installation Guide

[Home](#) » [RSL](#) » RSL Series Radiant Stack Light Installation Guide 

RSL



INSTALLATION AND APPLICATION INSTRUCTIONS –




CE UK
CA



E185812
IND.CONT.EQ.
TYPE 4X

CONFIGURATION

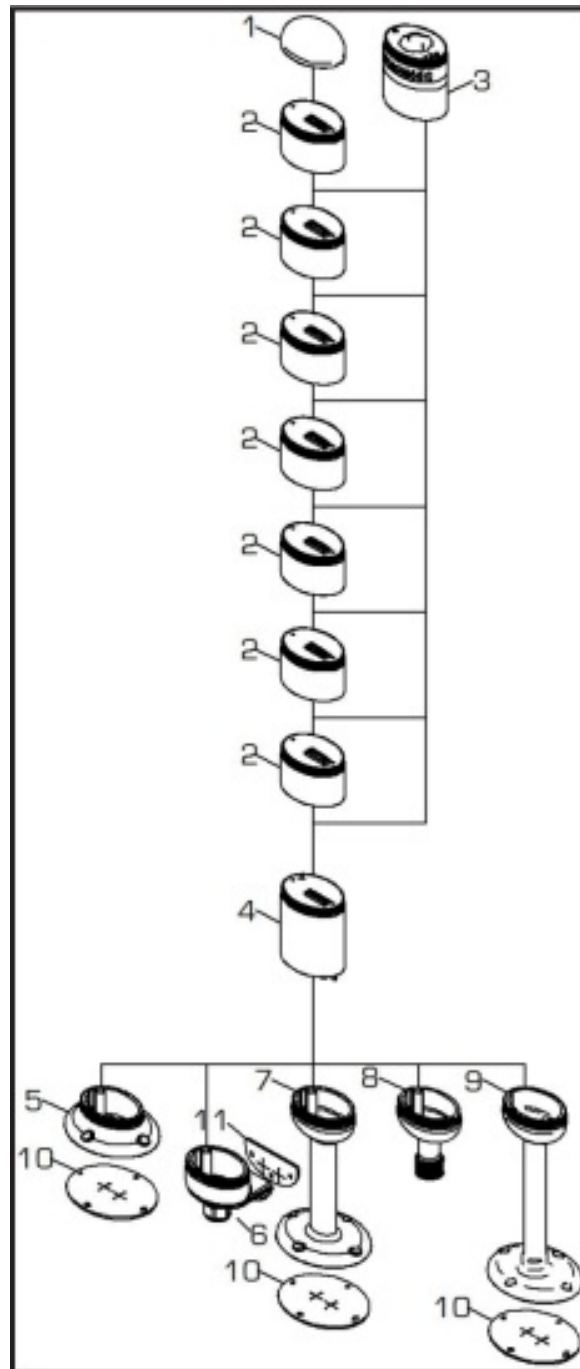

1. COVER TAPA COUVERCLE

2. RSL-LMS

RSL-LMB

RSL-LMM


RSL-LM-RGB

- 3. RSL-SM
 - RSL-SMM
- 4. RSL-WML
 - RSL-WMLM
 - RSL-WMH
 - RSL-WMHM
- 5. RSL BASE FLAT
- 6. RSL BASE WALL
- 7. RSL BASE EXTENDED
- 8. RSL BASE POLE
- 9. RSL BASE TUBE
- 10. GASKET
 - JUNTA
 - JOINT
- 11. GASKET
 - JUNTA
 - JOINT


Contents

- 1 DIMENSIONS**
- 2 INSTALLATION**
- 3 ELECTRICAL WIRING**
- 4 INDICATIONS TO CHANGE THE FLASHING MODE**
- 5 CURRENT CONSUMPTION**
- 6 Documents / Resources**
 - 6.1 References**

DIMENSIONS

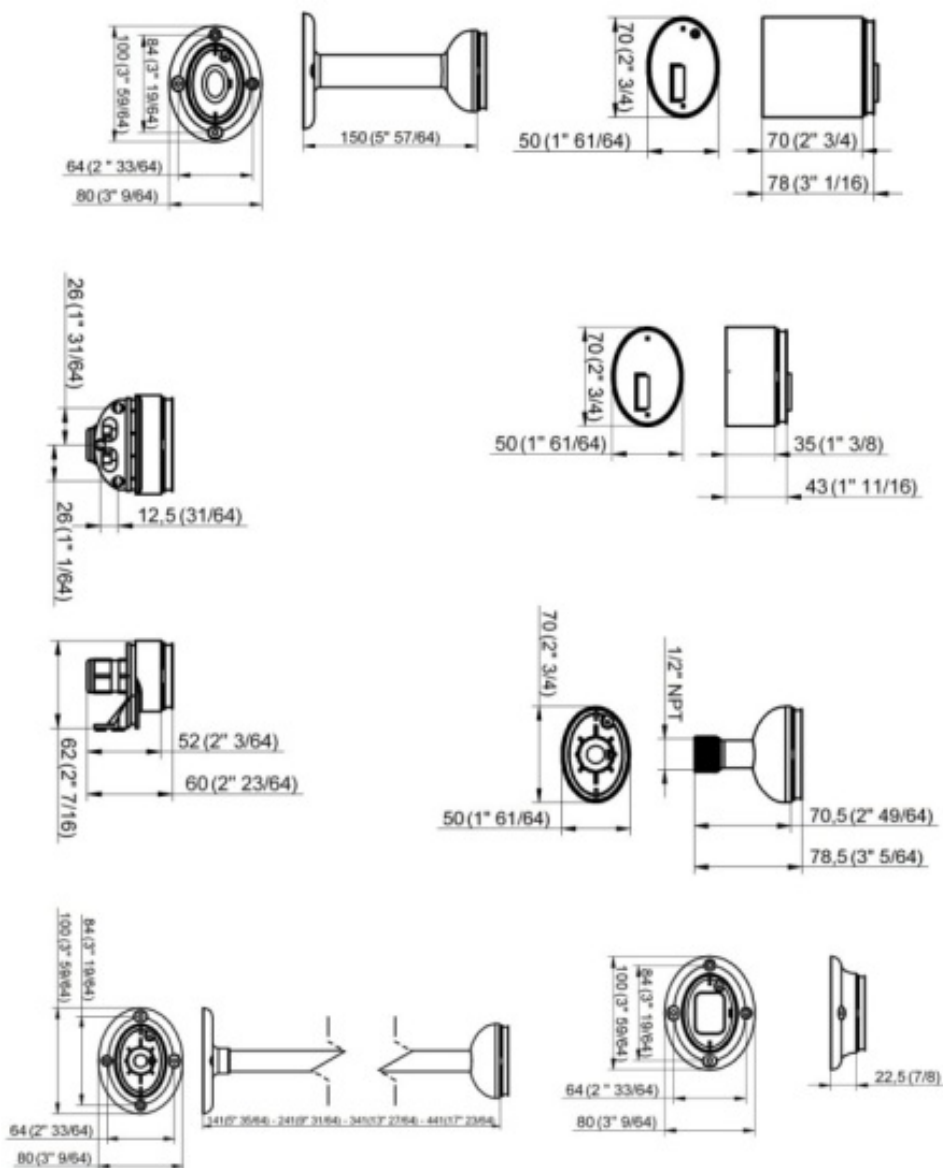

INSTALLATION

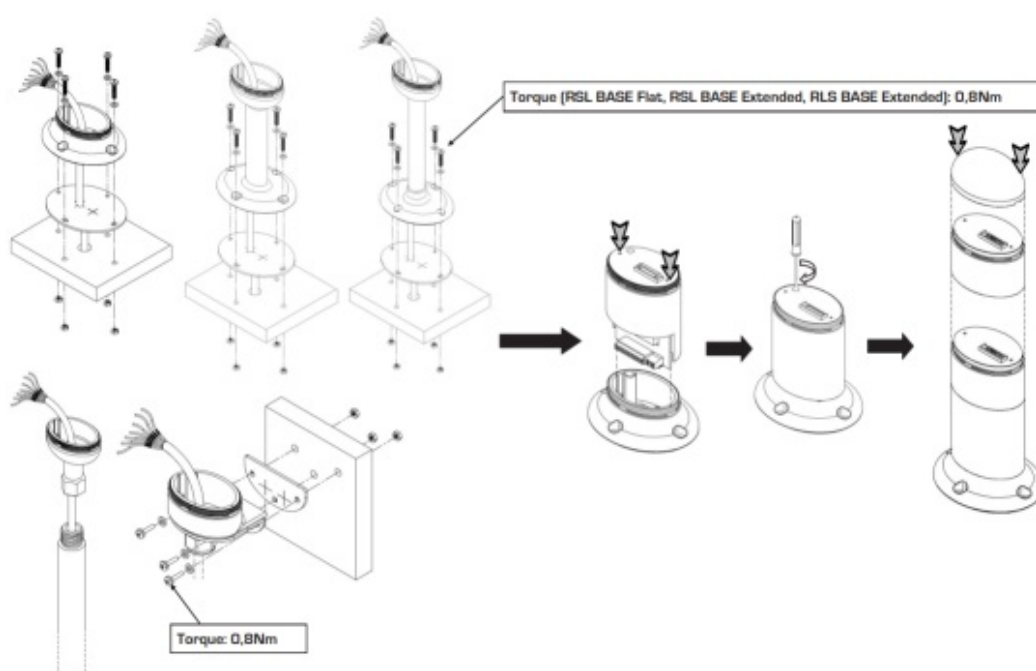

For installation of the item according to Type 4X, use PA 6.6 washers and AISI 304 steel screws.

ELECTRICAL WIRING

Wiring diagram



ENSURE THAT THE POWER SUPPLY VOLTAGE OF THE MODULE IS THE SAME AS THAT OF THE NETWORK!

– INSTALLATION MUST BE MADE BY TRAINED PERSONNEL.

ON THE POWER SUPPLY LINE USE APPROPRIATE TIME-LAG FUSES ACCORDING TO THE VOLTAGE.


– IT IS POSSIBLE TO CONNECT TOGETHER UP TO MAX 5 WIRING BASES

The recommended section of the power supply cable is 0,5 mm


AWG range: 14 – 30 SOL and STR or equivalent

For devices rated 12-24 Vac/Vdc only: Power supply shall be connected to a “Class 2” or “Limited Voltage Limited Current (LVLC)” source only


RSL-WML – 24V ACDC

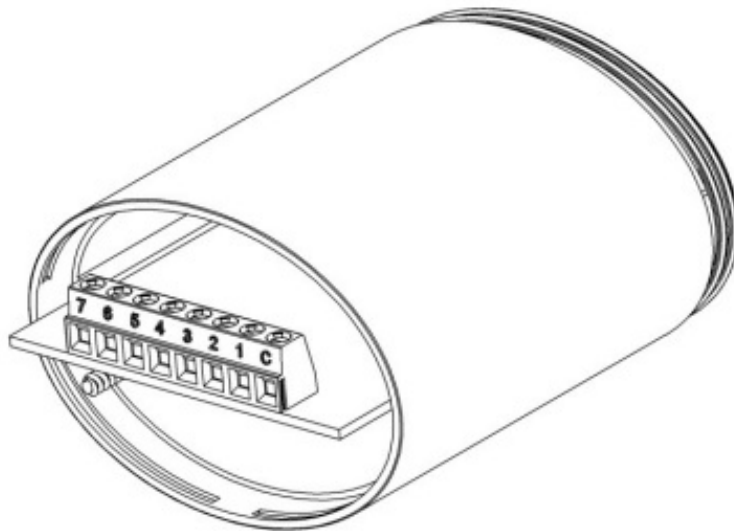

*Not available for the RSL-LM-RGB version

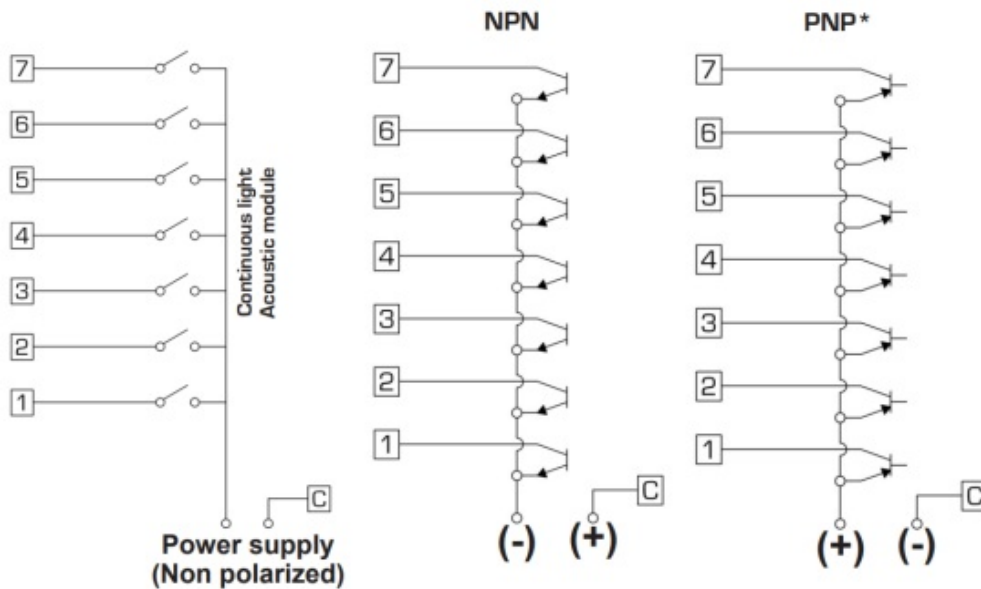


RSL-WMLM – 24V ACDC

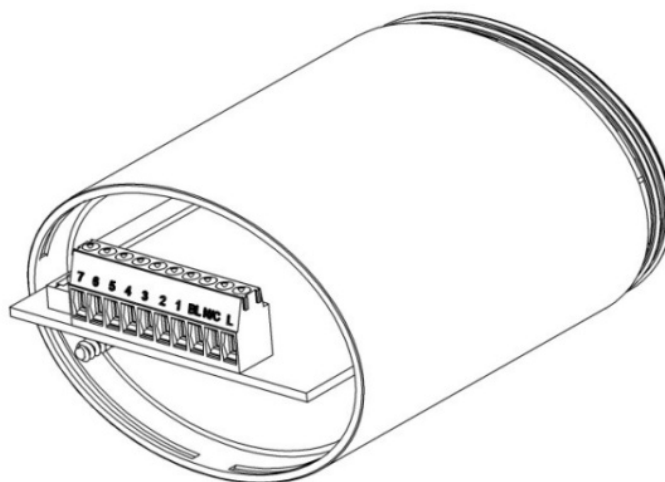


BL: Flashing Light – Only for RSL-LMS, RSL-LMB and RSL-LM- RGB set to Steady-ON

N/C: Continuous light – Acoustic module


*Not available for the RSL-LM-RGB version

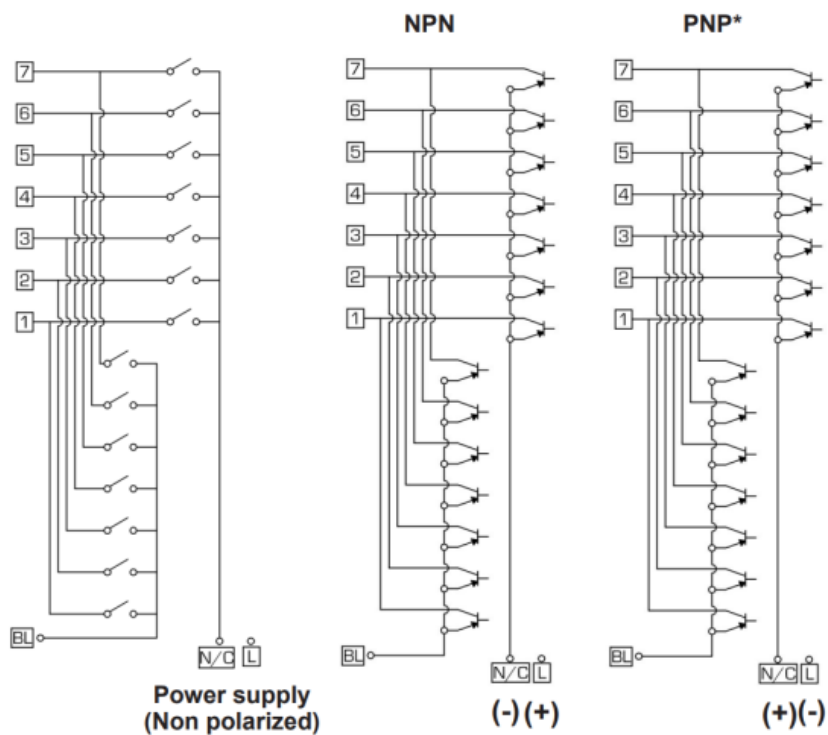


RSL-WMH – 120/240V AC

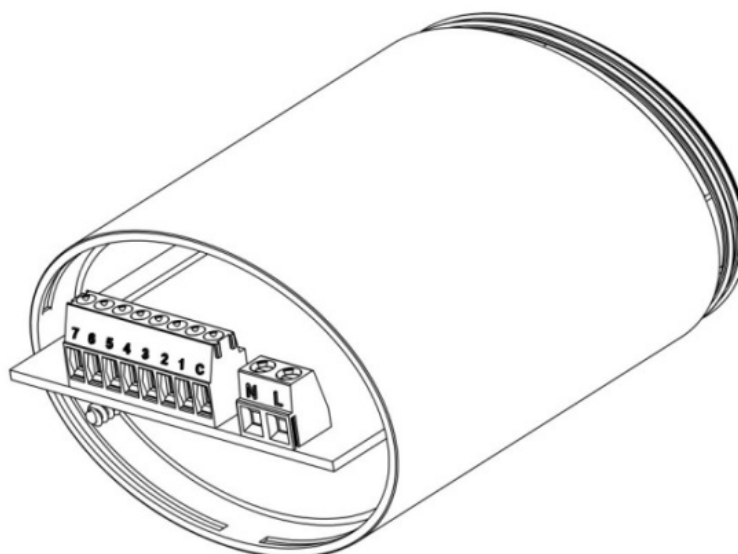


The recommended section of the power supply cable is 0,5 mm

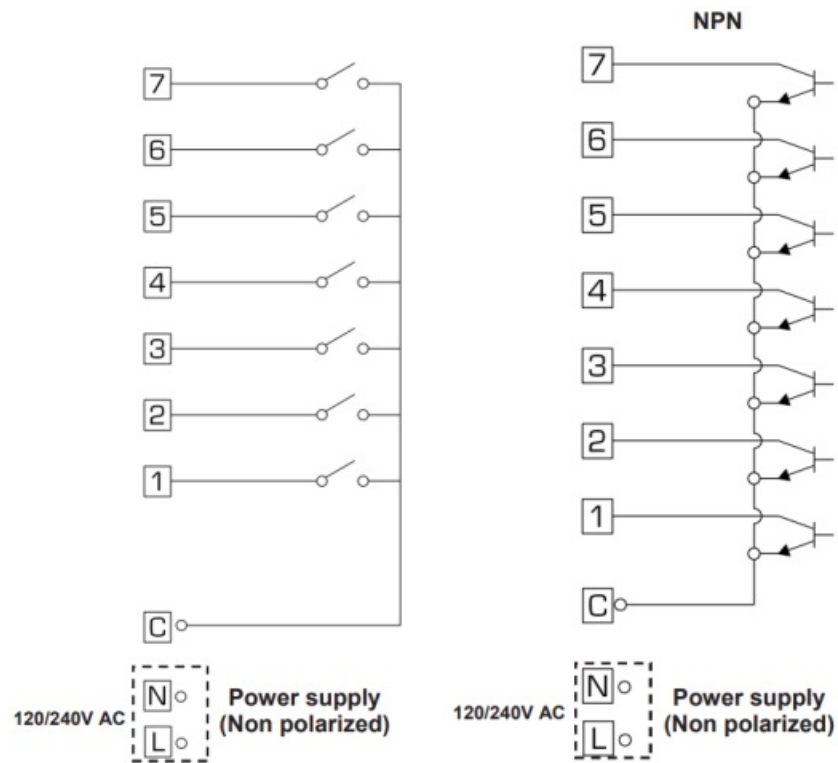

RSL-WMHM – 120/240V AC

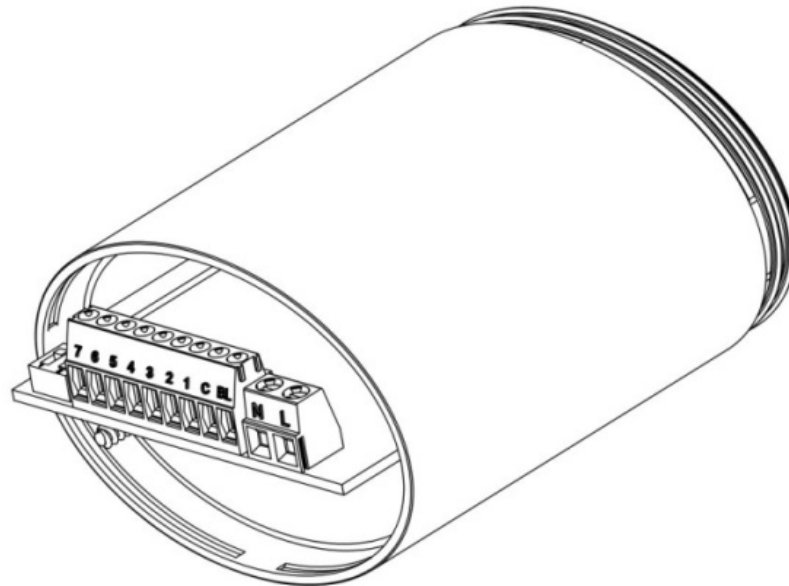

BL: Flashing Light – Only for RSL-LMS, RSL-LMB and RSL-LM- RGB set to Steady-ON
 C: Continuous light – Acoustic module

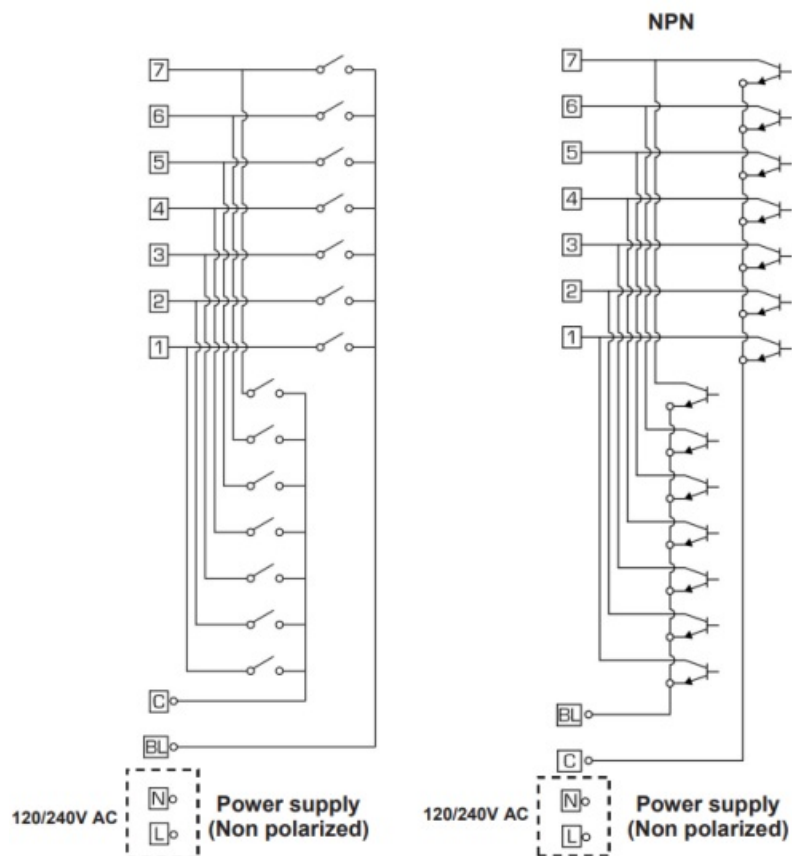

RSL-LM-RGB

ATTENTION: The RSL-LM-RGB module occupies 3 of the 7 channels on the terminal of the RSL base





	Red	Green	Blue	Violet	Yellow	Cyan	White
CH1	X			X	X		X
CH2		X		X		X	X
CH3			X		X	X	X

ATTENTION: RSL-LM-RGB with RSL-WML and RSL-WMLM works only in NPN mode

INDICATIONS TO CHANGE THE FLASHING MODE





 **DISCONNECTED POWER SUPPLY BEFORE MAKING ANY INTERVENTION ON THE DEVICE**







				
	OFF-OFF	ON-OFF	OFF-ON	ON-ON
RSL-WMLM	1 FLASH	2 FLASH	3 FLASH	5 FLASH
RSL-WMHM	1 FLASH	2 FLASH	3 FLASH	5 FLASH
RSL-LMM	2 FLASH	3 FLASH	5 FLASH	RANDOM
RSL-LM-RGB	STEADY	1 FLASH	3FLASH	RANDOM

CURRENT CONSUMPTION





RSL-LMS

	24V 	24V 	120V 	240V 
RSL-WM* (mA)	35	75	30	25
RSL-WM*M (mA)	50	110	30	25





RSL-LMB

	24V 	24V 	120V 	240V 
RSL-WM* (mA)	50	60	35	25
RSL-WM*M (mA)	70	100	35	25

RSL-LMM

	24V 	24V 	120V 	240V 
RSL-WM* (mA)	60	100	35	25

RSL-LM-RGB

	24V 	24V 	120V 	240V 
RSL-WM* (mA)	220	400	90	50

* indicates voltage: (L) 12.24VAC/DC, (H) 120-240VAC

ATTENTION

ATTENTION	To facilitate assembly, use only silicone lubricants
ATTENTION	The possibility exists that rapid flashing lights, under certain circumstances, might induce photosensitive epilepsy

NOT TO BE DISPOSED OF AS COMMON WASTE

RSL

2645 Federal Signal Drive University

Park, IL 60484 United States

Phone: [708-534-4756](tel:708-534-4756)


Fax: [708-534-4852](tel:708-534-4852)

www.fedsig.com

signalsupport@fedsig.com

Ref. 25500318 REV A4

Documents / Resources

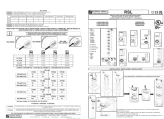	<p>RSL RSL Series Radiant Stack Light [pdf] Installation Guide</p> <p>RSL-WML, RSL-WMLM, RSL-WMH, RSL-WMHM, RSL Series Radiant Stack Light, RSL Series, Radiant Stack Light, Stack Light, Light</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.