



# Rubicson Digital Alarm Clock User Manual

[Home](#) » [rubicson](#) » Rubicson Digital Alarm Clock User Manual

Contents [ [hide](#)

1

Rubicson Digital Alarm Clock

2

Specifications

3

Features

4

Documents / Resources

4.1

References

5

Related Posts

Rubicson®

## Rubicson Digital Alarm Clock



## Specifications

Power	1200 mAh Li-on rechargeable battery
Charging input	5 V, at least 500 mA
Number of alarms	2
Time format	12/24 h
Backlight	Yes
Snooze	Yes
Temperature measurement	0 – 50 °C

### Charging

The clock is powered by a rechargeable Li-on battery. There are two indicators on the front of the clock that indicates when the battery power is low or when the battery is being charged. Insert a Micro USB cable in the socket on the back of the clock and a wall charger or computer to charge the battery. The charging indicator will stop shining when the battery is fully charged.

### Time and date settings

Press and hold the SET button for 3 seconds to enter the time setting mode. The current value will start blinking. The values are changed in this order: Hour > minute > year > month > date > time zone > exit. Change the values with the C/F and 12/24 buttons, confirm with the SET button.

### RCC time setting

The clock automatically starts searching for a RCC signal for 7 minutes after it's activated. This is indicated by the blinking radio mast signal on the display. If a signal is found the display will show a DCF symbol. You can turn this function off manually by pressing and holding the 12 /24 button for a few seconds.

### Alarm settings

Press ALARM 1 or ALARM 2 depending on what alarm you want to activate, press the button again to deactivate the alarm. Press and hold the ALARM 1 or ALARM 2 button depending on what alarm you want to edit. After the chosen alarms value starts blinking on the display change the values with C/F and 12/24. Confirm with the SET button. You can also decide if the alarms should be active on weekdays (1-5), the weekend (6-7) or all days (1-7) with the switch labeled ALARM on the back.

### Features

- Press the large light/snooze button to light up the display for three seconds.
- Press the large light/snooze button when the alarm sounds to activate the snooze function. The alarm will sound again after five minutes.
- Press the 12/24 button to switch time mode between 12 or 24 hour mode.
- Press the C/F button to switch temperature unit between Celsius and Fahrenheit.
- Slide the SENSOR switch to on to activate the backlight. It will be active in settings with low light or in the dark and automatically turn off in sufficient lighting.

### Safety information

Exhausted batteries are to be removed and replaced by a correct type battery. Dispose of used batteries according to the instructions.

[www.rubicson.com](http://www.rubicson.com)

Box 50435, Malmö, Sweden

2019-06-12

**Rubicson®**

Documents / Resources

<div><div><div>manual</div><div>Digital alarm clock</div><div><div><div></div><div></div><div></div></div></div></div></div>	<div><div><a href="#">Rubicson Digital Alarm Clock</a> [pdf] User Manual</div><div>Digital Alarm Clock</div></div>
--	--

References

- [Rubicson | Kjell.com](#)