



Rugged Radios STX STEREO High Fidelity Bluetooth Intercom User Guide

[Home](#) » [rugged radios](#) » Rugged Radios STX STEREO High Fidelity Bluetooth Intercom User Guide 

 


STX QUICK START GUIDE

Contents


- [1 STX STEREO High Fidelity Bluetooth Intercom](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)


STX STEREO High Fidelity Bluetooth Intercom

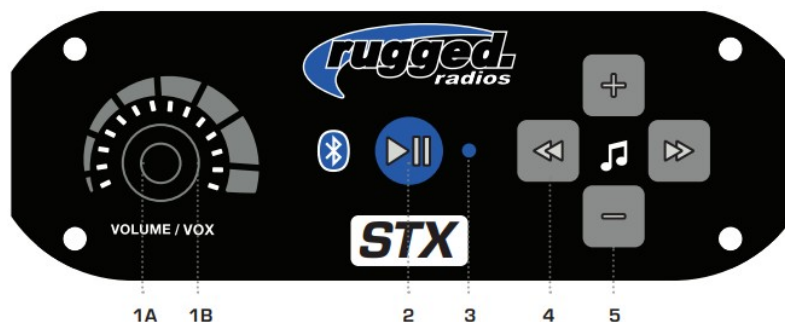

1. COMMUNICATION VOLUME/VOX: knob (1A) controls intercom volume. Knob (1B) controls voice activation (VOX) sensitivity.
2. PLAY / PAUSE: plays or pauses music, answers or ends phone calls.
3. LED: blue indicates power is on, red indicates transmitting.
4. SKIP: Quick Press  or  skips forward or reverse

  5. MUSIC VOLUME: Quick press or increases/decreases volume.

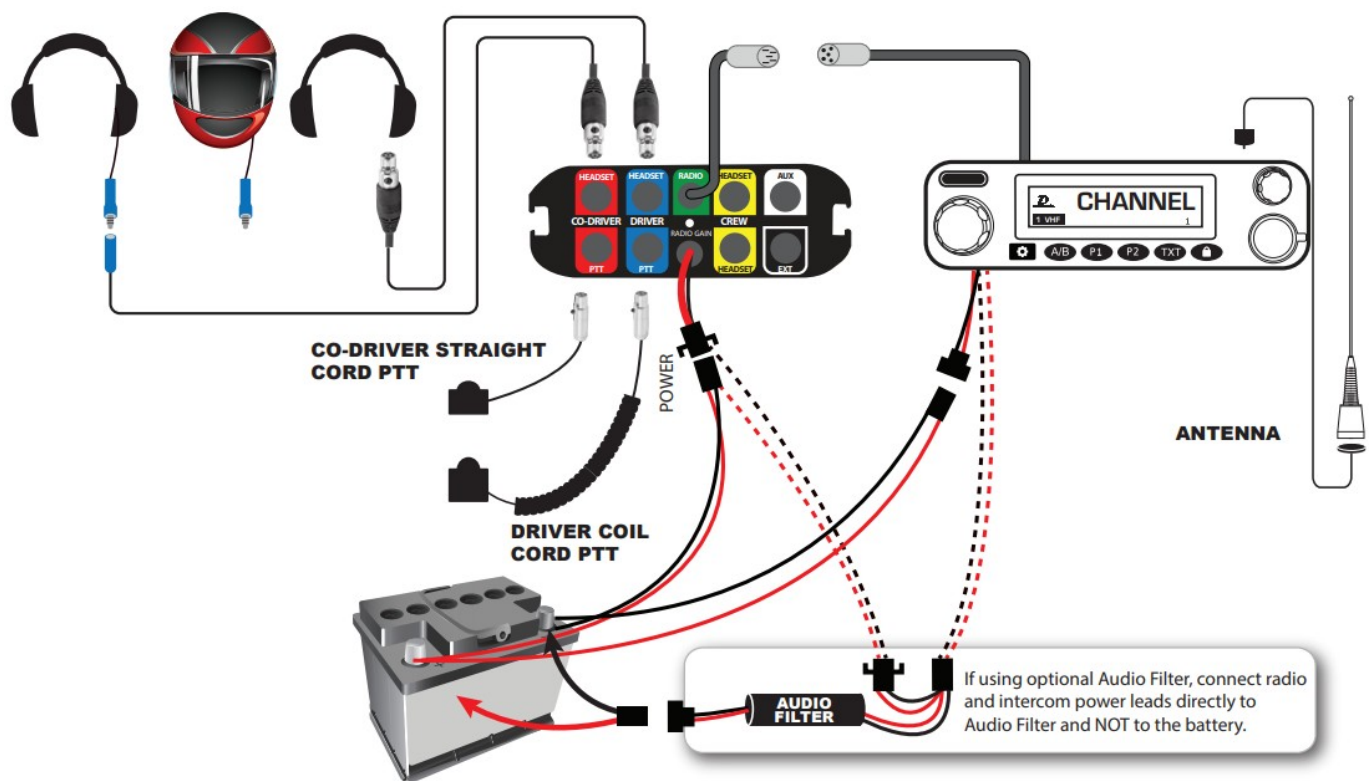

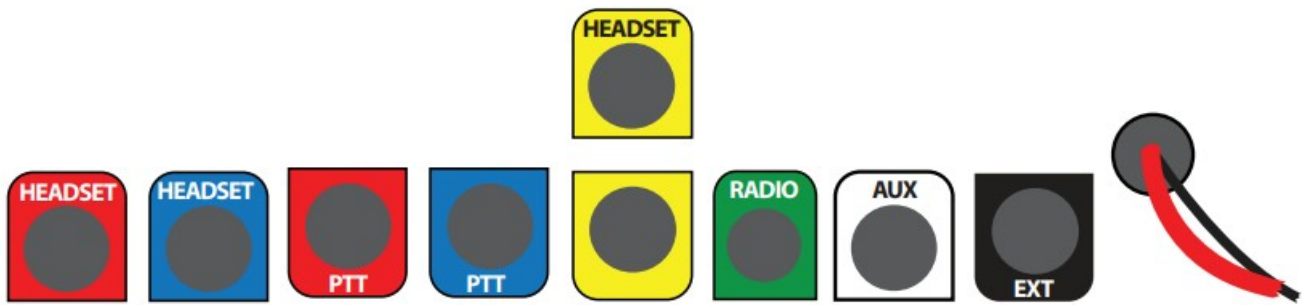

Documents / Resources

	Rugged Radios STX STEREO High Fidelity Bluetooth Intercom [pdf] User Guide STX, STX STEREO High Fidelity Bluetooth Intercom, STX STEREO, High Fidelity Bluetooth Intercom, Fidelity Bluetooth Intercom, Bluetooth Intercom, Intercom
---	---

References

- [Rugged Radios • UTV & Off Road Communication Equipment and Accessories](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.