



Contents [[hide](#)]

- [1 Ruidla JS-051 Fabric Shaver Lint Remover](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)

Ruidla

Ruidla JS-051 Fabric Shaver Lint Remover



INTRODUCTION

An inexpensive yet effective tool for bringing your clothes and textiles back to their original appearance is the Ruidla JS-017 Fabric Shaver Lint Remover. With a 6-leaf stainless steel cyclone floating blade design that rotates at up to 10,000 RPM, this \$12.99 sweater shaver offers twice the lint removal efficiency. It is ideal for eliminating fuzz, lint, and pills from clothing, beds, couches, curtains, and other materials without causing any harm to the fabric because of its spacious shaving area and three different sizes of honeycomb mesh. The device, which runs on two AA batteries, is cordless, small, and incredibly portable, making it perfect for travel. The safety interlock makes sure the gadget stops if the lid is loose, preventing mishaps, and the magnetic rear cover makes changing the battery simple. The Ruidla lint remover is made with a pocket lint collector and an ergonomic, mouse-like design for comfort, effectiveness, and dependability.

SPECIFICATIONS

Brand	Ruidla
Model	JS-051
Material	Plastic, Stainless Steel
Color	White/Gray
Operation Mode	Automatic
Blade Type	Stainless Steel Blades
Speed Levels	2-Speed Adjustment
Shave Heights	3 Height Levels
Power Source	2 x AA Batteries (Not Included)
Charging Method	Battery Operated (Cordless)
Safety Features	Safety Interlock with Auto Shut-Off
Handle Design	Ergonomic Palm-Grip
Product Dimensions	Approx. 3.2"D x 3.2"W x 6.02"H
Item Weight	6.7 ounces
Manufacturer	Ruidla
Model Number	JS-051
Country of Origin	China

WHAT’S IN THE BOX

- 1 x Ruidla JS-051 Fabric Shaver
- 1 x Stainless Steel Blade (Pre-installed)
- 1 x Cleaning Brush

- 1 x User Manual

FEATURES


- **Speed Settings:** Two adjustable speeds to suit various fabric needs.



- **Shaving Heights:** Three height levels allow safe use on different fabric textures.



- **Powerful Performance:** Removes lint and fuzz effectively without harming fabrics.

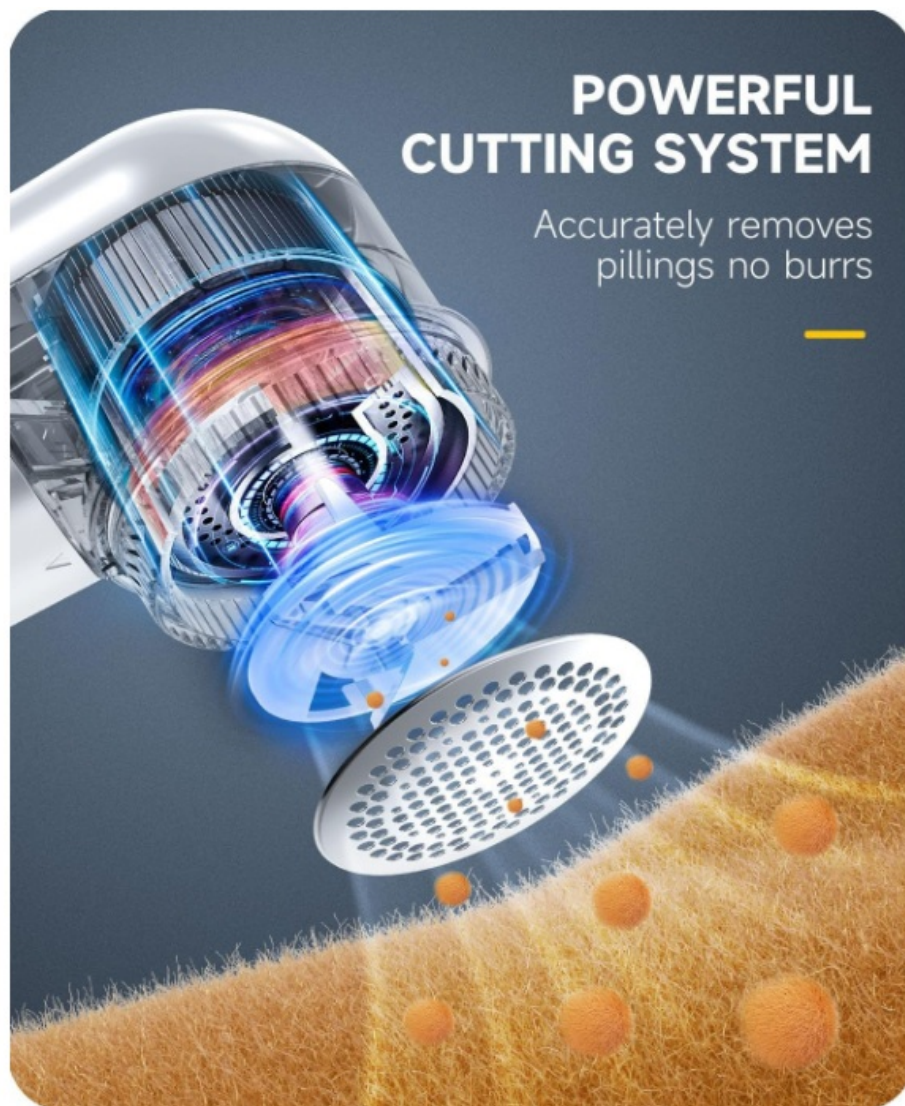

- **Lightweight Design:** Weighs only 6.7 ounces, making it easy to handle.
- **Cordless Convenience:** Runs on 2 AA batteries for portable use anywhere.
- **Safety Mesh:** Bionic honeycomb mesh protects fabric from damage.
- **Auto Shut-Off:** Built-in safety interlock turns the device off if the mesh cover loosens.
- **Ergonomic Handle:** Designed for a comfortable grip during use.
- **Easy Lint Disposal:** Features a simple-to-empty lint collection bin.
- **Wide Application:** Suitable for sweaters, blankets, bedsheets, couches, and more.
- **Smooth Operation:** Glides over fabric without snagging or pulling threads.
- **Quick Cleaning:** Easy to disassemble for fast blade and mesh cleaning.
- **Durable Blades:** Stainless steel blades are designed for long-lasting use.
- **Travel-Friendly:** Compact and portable for use at home or on the go.
- **Affordable Quality:** Budget-friendly without compromising on performance.



SETUP GUIDE

- **Open Battery Compartment:** Find the battery cover on the back and open it.
- **Insert Batteries:** Place 2 AA batteries, matching the correct polarity.
- **Close Securely:** Snap the battery cover shut until it clicks into place.
- **Check Mesh Cover:** Ensure the honeycomb mesh is locked properly before use.
- **Power On:** Slide the switch to turn the device on.
- **Select Speed:** Use the speed button to choose between low and high settings.
- **Adjust Height:** Rotate the adjustment ring to pick the right shave height for your fabric.
- **Test First:** Try on a hidden spot to ensure fabric compatibility.
- **Proper Position:** Hold the device flat against the fabric surface.
- **Use Motion:** Move slowly in circular motions for the best results.
- **Check Collector:** Monitor the lint container during use and empty when needed.
- **Turn Off:** Always switch the device off before opening the lint bin.

- **Blade Access:** Open the mesh cover to clean the blades when necessary.
- **Brush Clean:** Use the provided cleaning brush to clear out lint and fuzz.
- **Store Safely:** Keep the shaver in a clean, dry space when not in use.

CARE & MAINTENANCE

- **Empty After Use:** Clear the lint bin every time you finish using the device.
- **Surface Cleaning:** Wipe the exterior with a soft, dry cloth to remove dust.
- **Blade Cleaning:** Use the cleaning brush to clean blades and nearby areas.
- **Avoid Moisture:** Keep away from water to prevent motor or battery damage.
- **Blade Check:** Inspect the blades regularly for dullness or damage.
- **Blade Replacement:** Swap out old blades when they become worn.
- **Mesh Care:** Clean the honeycomb mesh to ensure airflow and performance.
- **Battery Storage:** Remove batteries if not using the shaver for extended periods.
- **Heat Protection:** Keep out of direct sunlight and away from high heat.
- **Safety Function:** Check that the auto shut-off safety feature is working correctly.
- **Battery Contacts:** Inspect for corrosion and clean gently if needed.
- **Dust-Free Storage:** Store in a clean environment to avoid dust buildup.
- **Handle Carefully:** Avoid dropping to prevent mechanical or internal damage.
- **Secure Collector:** Make sure the lint container is properly attached after cleaning.
- **Smooth Operation:** Lightly wipe moving parts if needed; avoid using oils or liquids.

TROUBLESHOOTING

Problem	Solution
Device not turning on	Check battery polarity or replace with new batteries.
Weak suction or fuzz removal	Ensure blades are clean; replace batteries.
Blades not rotating	Remove lint buildup around blade area; check safety lock.
Safety shut-off activated	Ensure mesh cover is securely locked in place.

Problem	Solution
Lint collector overflowing	Empty the collector frequently during use.
Excess noise or vibration	Clean blades and mesh; check for trapped fibers.
Fabric snagging	Adjust shave height to suit the fabric type.
Battery cover stuck	Check alignment; gently press the magnetic latch area.
Poor cutting performance	Replace blades if dull; ensure mesh is clean.
Handle discomfort	Adjust grip; use shorter strokes for better control.

PROS & CONS

PROS:

- Dual-speed adjustment for gentle or aggressive lint removal.
- Ultra-lightweight and travel-friendly cordless design.
- Safety interlock prevents accidents when cover is loose.
- Affordable price with excellent performance.
- Comfortable ergonomic handle for easy operation.

CONS:

- AA batteries not included in the package.
- Not rechargeable; batteries need replacing over time.
- Smaller lint bin requires frequent emptying for large jobs.
- Plastic build feels less premium.
- Not ideal for extremely delicate fabrics like silk.

WARRANTY

The Ruidla JS-051 Fabric Shaver comes with a **1-year** warranty covering manufacturing defects and product malfunctions. For assistance or warranty claims, customers can contact support via their Amazon order page by navigating to “Your Orders” → Find the

order → “Contact Seller.”

FREQUENTLY ASKED QUESTIONS

What types of fabrics is the Ruidla JS-051 Fabric Shaver suitable for?

The Ruidla JS-051 is ideal for removing fuzz, lint, and pills from sweaters, jerseys, blankets, bed sheets, couches, and more.

How many speed settings does the Ruidla JS-051 offer?

The Ruidla JS-051 has 2-speed power adjustment settings, allowing users to choose the right power for different fabrics.

How does the safety lock work on the Ruidla JS-051?

If the honeycomb cover becomes loose, the safety interlock automatically powers off the shaver to prevent injury and protect fabric.

How do I empty the lint collector on the Ruidla JS-051?

The lint collector easily detaches, making it simple to remove and clean the collected fuzz.

What is the weight of the Ruidla JS-051 Fabric Shaver?

The shaver weighs 6.7 ounces, making it lightweight and easy to maneuver.

Why is my Ruidla JS-051 Fabric Shaver not turning on?

Check whether the 2 AA batteries are installed correctly and have charge. Also, ensure the honeycomb cover is securely closed, as a loose cover triggers the safety

shut-off.

Why does the Ruidla JS-051 stop during use?

This typically happens if the lint collector is full, the batteries are low, or the honeycomb cover is not tightly secured.

VIDEO – PRODUCT OVERVIEW

<https://manuals.plus/wp-content/uploads/2025/07/Ruidla-JS-051-Fabric-Shaver-Lint-Remover-User-Manual.mp4>

References

- [User Manual](#)

📎 B0BCXWJQZT, Fabric Shaver Lint Remover, JS-051, Ruidla, Ruidla JS-051, user

📁 Ruidla manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.