

RUIZHI

RUIZHI DXD50C-17 433M Wireless Remote Control



RUIZHI DXD50C-17 433M Wireless Remote Control Instruction Manual

[Home](#) » [RUIZHI](#) » RUIZHI DXD50C-17 433M Wireless Remote Control Instruction Manual 

Contents

- 1 [RUIZHI DXD50C-17 433M Wireless Remote Control](#)
- 2 [Functional characteristics](#)
- 3 [Remote control key correspondence](#)
- 4 [Basic functional operation](#)
- 5 [FCC Caution](#)
- 6 [Documents / Resources](#)
 - 6.1 [References](#)
- 7 [Related Posts](#)

RUIZHI

RUIZHI DXD50C-17 433M Wireless Remote Control



DXD50C-17 remote control instruction manual

Functional characteristics

DXD50C-17 is a 433M wireless remote control, powered by CR2032 button battery, which has the advantages of strong transmission power, long remote control distance, low power consumption! There are 5 buttons, which with the 433M receiving module!

Remote control key correspondence



Basic functional operation

When the treadmill is powered on, press the start key on the remote control, and the treadmill will down and running.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FAQ

- **Q: How do I change the battery in the remote control?**

A: To change the battery, locate the battery compartment on the remote control, remove the old CR2032 button battery, and insert a new one following the correct polarity.

- **Q: What is the range of the remote control?**

A: The remote control has a long remote control distance, typically up to X meters. Ensure there are no obstructions between the remote and the treadmill for optimal performance.

Documents / Resources

	<p>RUIZHI DXD50C-17 433M Wireless Remote Control [pdf] Instruction Manual DXD50C-17, DXD50C-17 433M Wireless Remote Control, 433M Wireless Remote Control, Wireless Remote Control, Remote Control</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.