



RVS-127 Blind Spot Sensor System Instruction Manual

[Home](#) » [RVS](#) » RVS-127 Blind Spot Sensor System Instruction Manual 

RVS-127



Contents


- [1 RVS-127 Blind Spot Sensor System](#)
- [2 ASSEMBLY INSTRUCTIONS](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

RVS-127 Blind Spot Sensor System




ASSEMBLY INSTRUCTIONS

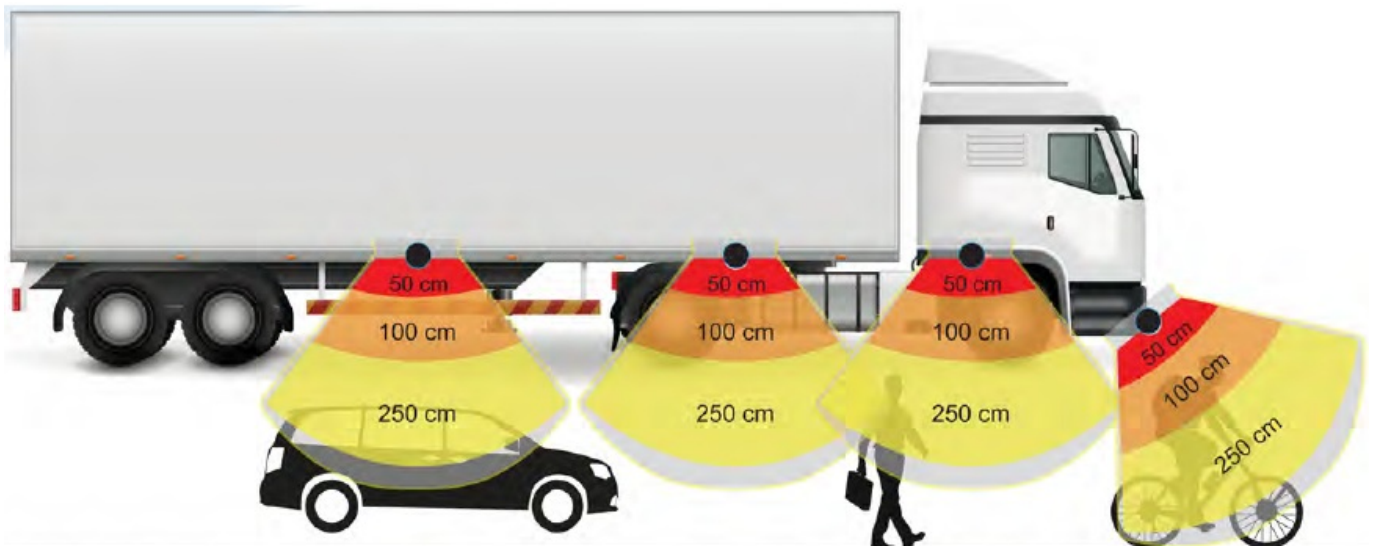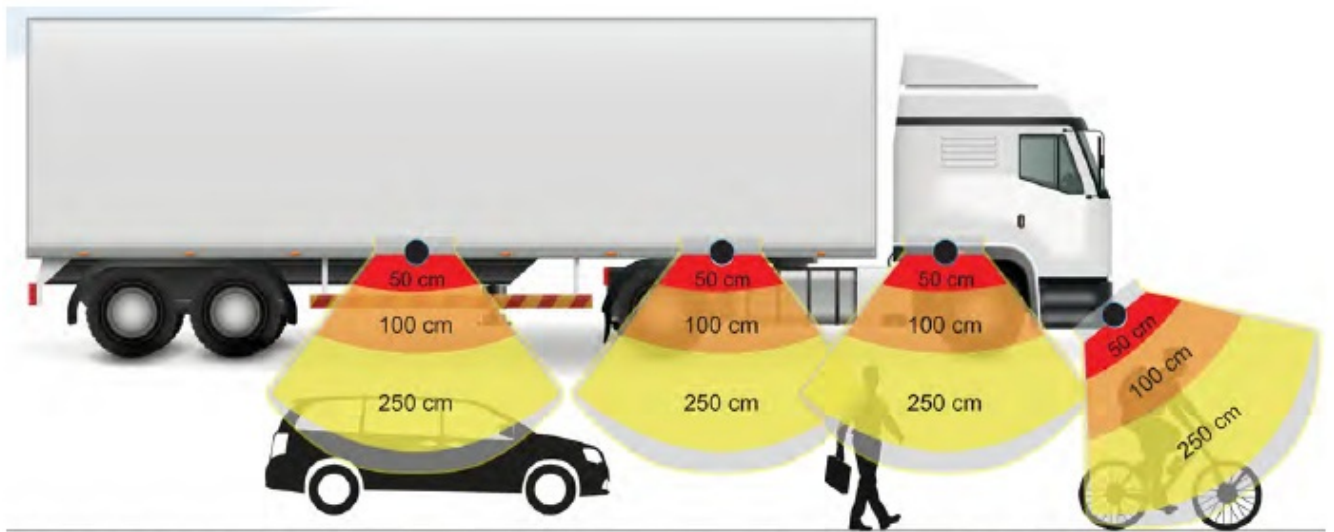

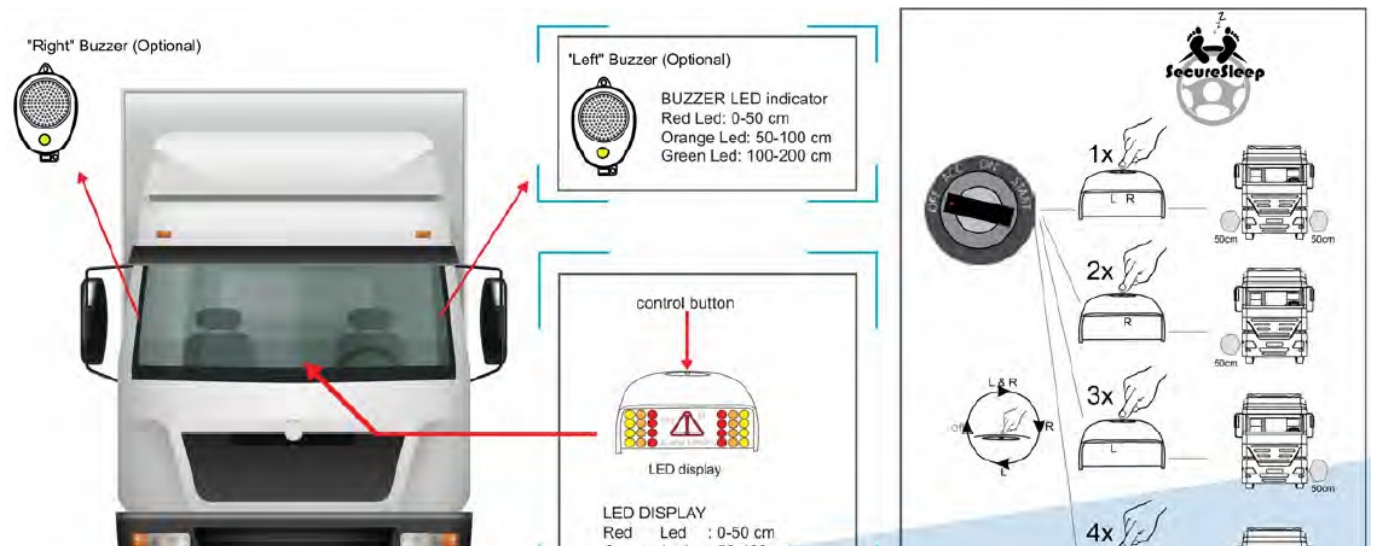



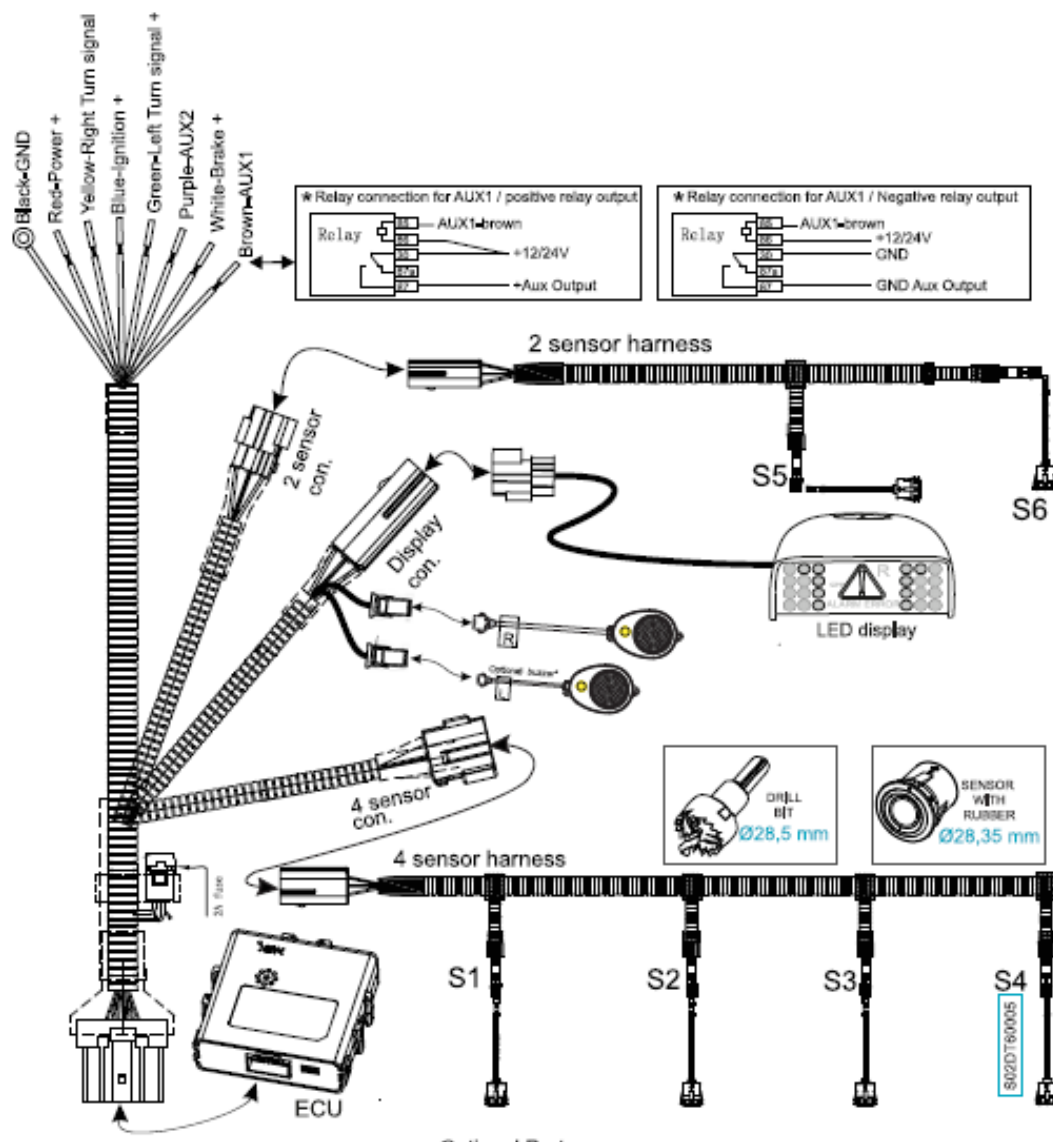

- AUX2: 500 mA gnu output will be activated when system gives buzzer alert during ignition on. It can be used to trigger camera system monitor.
- Brake wire is for models without gaps
- AUX1: 500 mende output will be activated when Secure Sleep system detect movement around the vehicle. it should be connected to the vehicle parking lights with relay'.




Standard set includes

- 4/6 pcs sensor with rubber
- 1 pc ECU
- 2/3 sets wiring harness
- 1 pc LED display + GPS
- 1 pc 24V relay
- 1 pc Drill Bit 028,5

 Metal Bracket for sensor	 Left Buzzer
 Sensor extension cable 3m.	 Right Buzzer



Documents / Resources

	<p>RVS RVS-127 Blind Spot Sensor System [pdf] Instruction Manual</p> <p>RVS-127 Blind Spot Sensor System, RVS-127, Blind Spot Sensor System, Spot Sensor System , Sensor System</p>
---	---