



RZB LIGHTING Master HF-Motion Detector Sensor Instructions

[Home](#) » [RZB LIGHTING](#) » RZB LIGHTING Master HF-Motion Detector Sensor Instructions 

Contents

- [1 RZB LIGHTING Master HF-Motion Detector Sensor](#)
- [2 INSTRUCTION](#)
- [3 Setting options \(Master\)](#)
- [4 Activation Teach-Mode \(for individually light level threshold\)](#)
- [5 Corridor function – selection](#)
- [6 Factory reset \(of all functions\)](#)
- [7 Master-Slave – System](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



RZB LIGHTING Master HF-Motion Detector Sensor



INSTRUCTION

Attention: Not compatible with HF-detectors from other manufacturers

Master (MA)

Master (MA)
LED Platine mit radialem Bewegungsmelder (☺) /
LED-board with radial motion sensor (☺)

TX 15 - 20


Slave (SL)

**Bei Slave-Leuchten können keine Einstellungen vorgenommen werden !
Slave-Leuchten müssen mit entsprechender LED-Platine ausgerüstet sein !**

*In slave luminaires are no settings possible !
Slave luminaires must be equipped with corresponding LED board*

	P	B10	B16	C10	C16	
	13,5 W	114	182	114	182	0,15 A
	21 W	77	124	77	124	0,22 A


Radial motion sensor 24 Ghz With integrated corridor function Detection area max.130°Reach max. 5 m radial
Sensibility 10- 100 % adjustable Hold time 3 s – 15 Min. adjustable Light level threshold adjustable

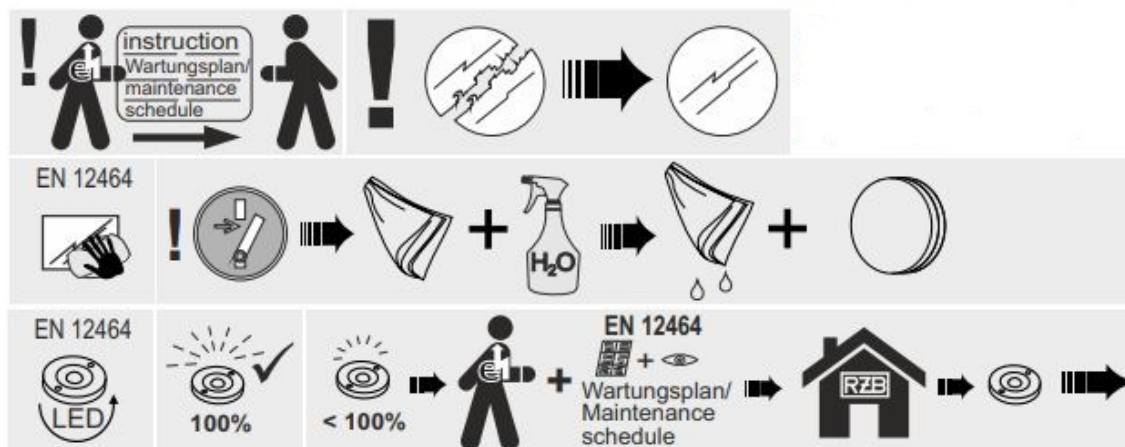


The luminaire must be used with its complete protective covers only.

Setting options (Master)

Connect luminaire to mains, luminaire lights up to 100 %, Press any Button for switching to setting mode (Luminaire dims down immediately to 5% to avoid glare).

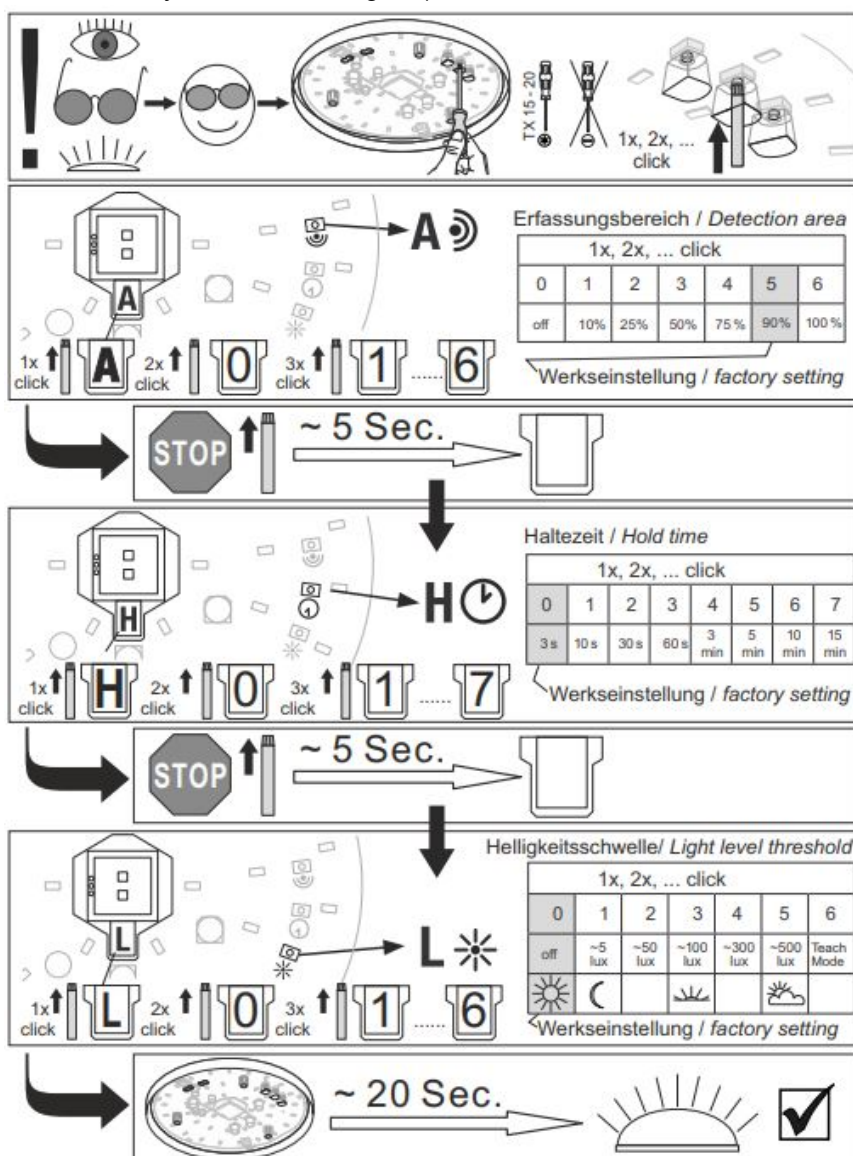


Activation Teach-Mode (for individually light level threshold)

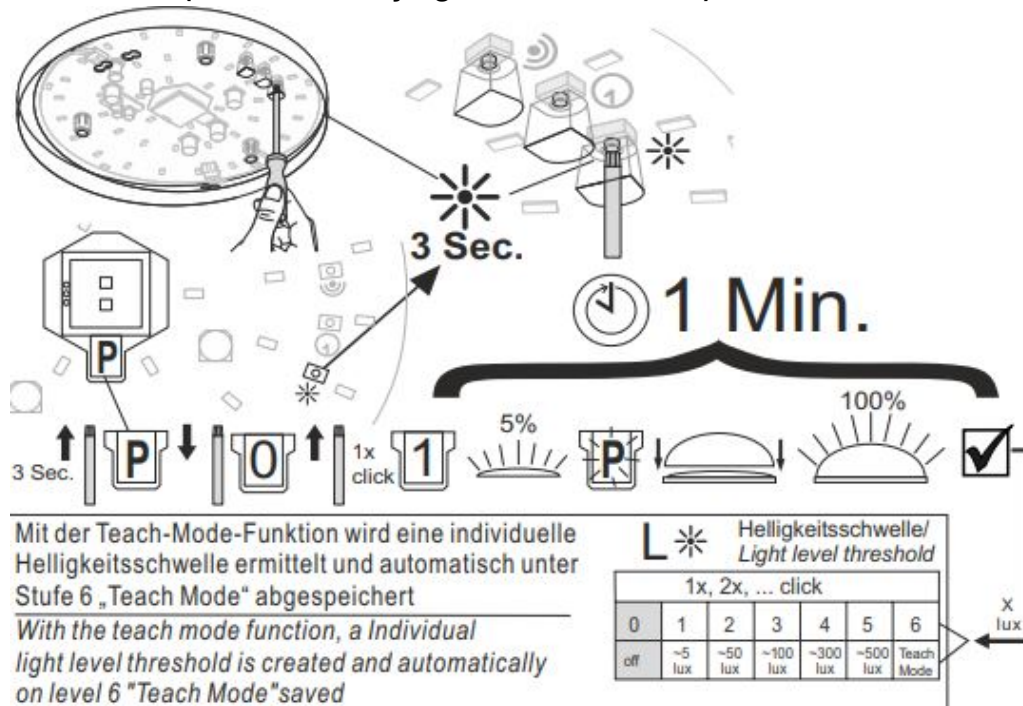


With the teach mode function, an Individual light level threshold is created and automatically on level 6 "Teach Mode" saved


Corridor function – selection

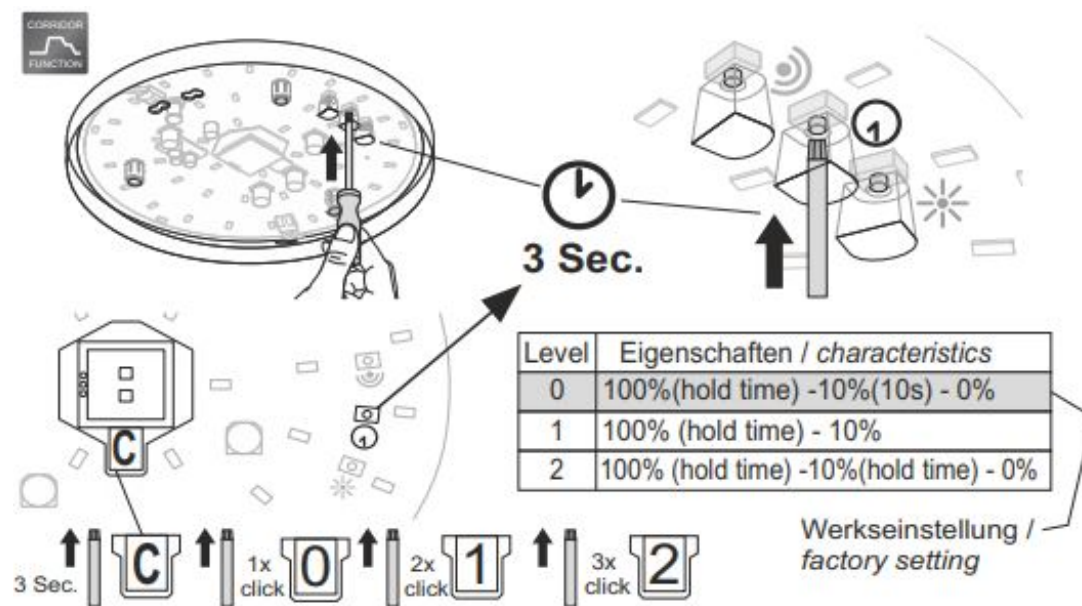

Factory reset (of all functions)

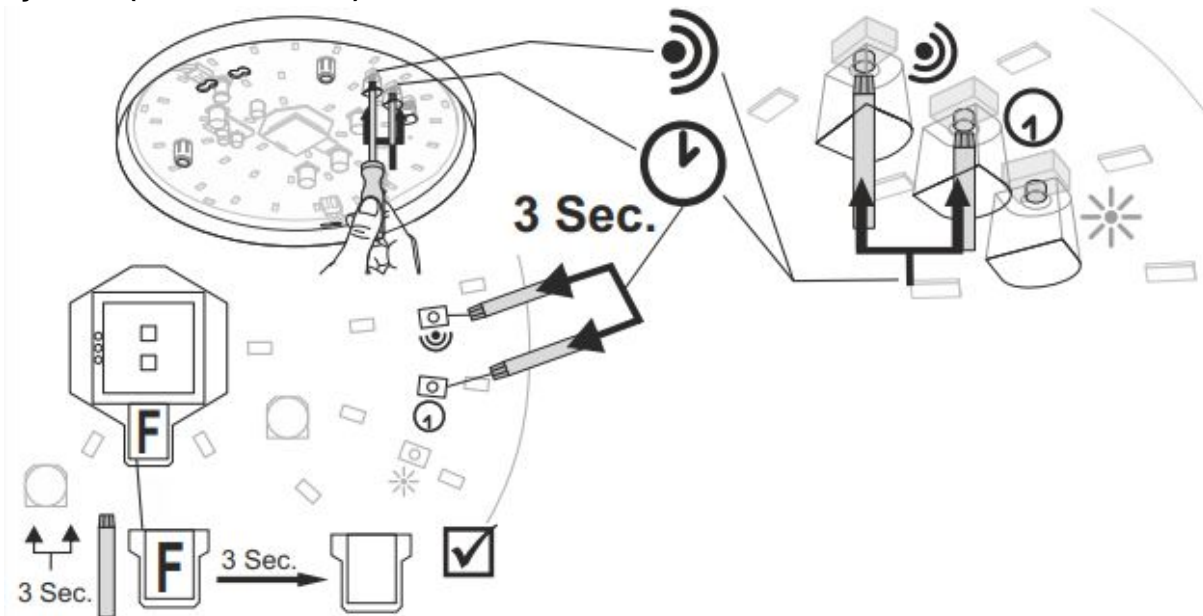


Master-Slave – System

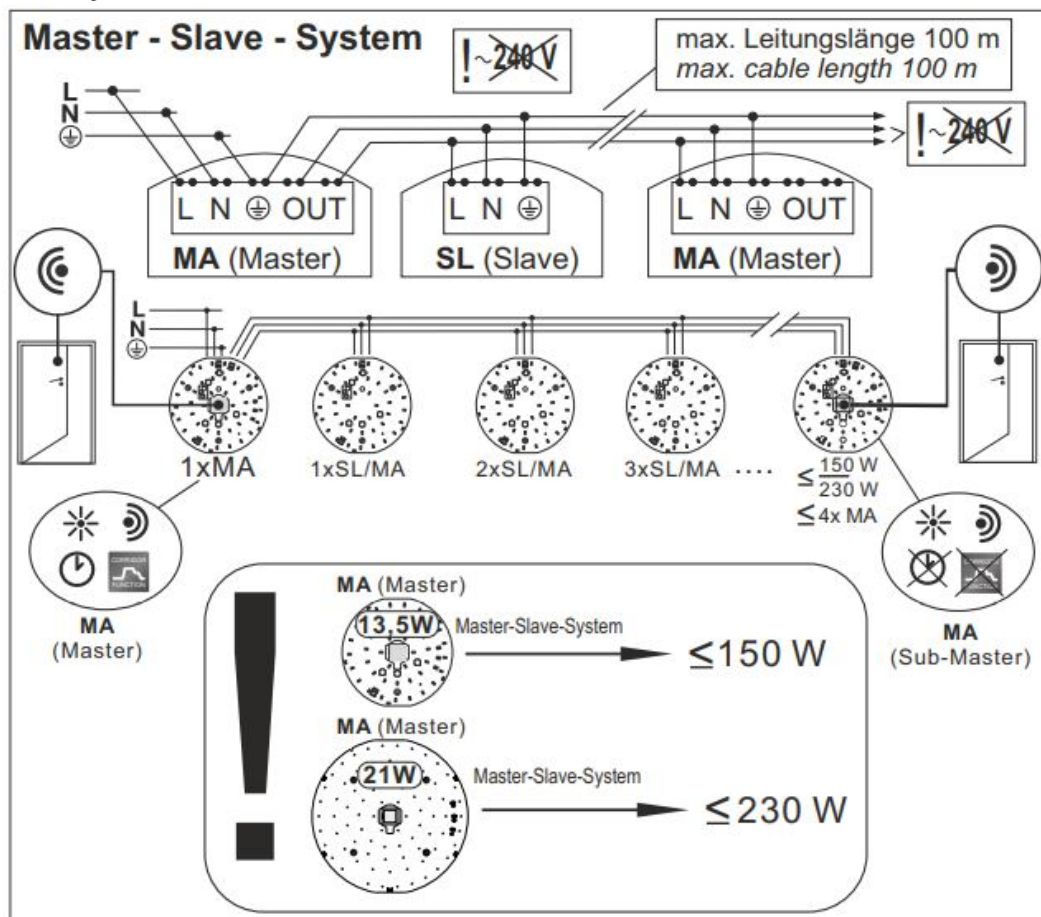

RZB

- Rudolf Zimmermann, Bamberg GmbH Rheinstraße 16
- D-96052 Bamberg Deutschland
- Telefon +49 951/79 09-0 Telefax +49 951/79 09-198
- www.rzb.de
- info@rzb-leuchten.de

Documents / Resources

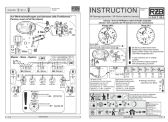

[RZB LIGHTING Master HF-Motion Detector Sensor](#) [pdf] Instructions
09-3003.052, Master HF-Motion Detector Sensor, Master, Slave, HF-Motion Detector Sensor

[Manuals+](#).