



## S4A WK2 Wireless Keypad User Manual

[Home](#) » [S4A](#) » S4A WK2 Wireless Keypad User Manual 

### Contents

- [1 S4A WK2 Wireless Keypad](#)
- [2 Product Usage Instructions](#)
- [3 Specifications](#)
- [4 Accessories](#)
- [5 Installation](#)
- [6 Battery installation](#)
- [7 Pair a keypad](#)
- [8 Operations](#)
- [9 Reset the keypad to factory mode.](#)
- [10 Light Status](#)
- [11 Limited Warranty](#)
- [12 FCC Warning](#)
- [13 Frequently Asked Questions](#)
- [14 Documents / Resources](#)
  - [14.1 References](#)



### S4A WK2 Wireless Keypad



## Specifications

- **Model:** WK2
- **Dimensions:** W67.7mm x H96.3mm x T29.9mm
- **Power:** 4 AAA
- **Voltage:** 3V
- **Standby power consumption:** 10A

## Product Usage Instructions

### Accessories

- Keypad x 1
- User Manual x 1
- Mounting plate x 1
- Double-sided tape x 1
- Screw x 2
- Screw pipe x 2

### Installation

If the mounting surface is flat and smooth, use the tape to secure the keypad. The mounting plate is not needed in this case.

1. Draw positioning marks on the mounting surface according to the dimensions of the keypad and drill screw holes accordingly.
2. Fix the mounting plate with the screws. Use the screw pipes when necessary.
3. Glue the keypad on the mounting plate with the double-sided tape.

### Battery Installation

1. Remove the screw, squeeze the clamp, and pull the battery holder out
2. Load 4 AAA batteries correctly, squeeze the clamp, push the battery holder into the compartment, and tighten it

with the screw.

## Pairing a Keypad

To pair a keypad, follow these steps:

1. If the keypad is not paired to any lock, press any key to enter pairing mode. If already paired, press \*529# to enter pairing mode.
2. Add a keypad to a lock using the APP and follow the steps prompted to finish the pairing process.

## Preface

 
### Dear customer,

Thank you for purchasing this product. To make better use of it, please read this manual carefully. If you have any doubt regarding installation or maintenance, please feel free to contact your local agent.

## Specifications


- **Model:** WK2
- **Dimensions:** W67.7mm x H96.3mm x T29.9mm
- **Power:** 4 AAA
- **Voltage:** 3V
- **Standby power consumption:** 10A

## Accessories

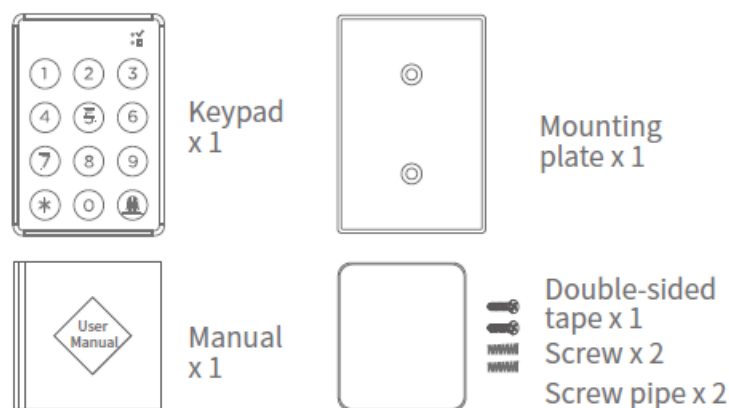


## Installation

 - If the mounting surface is flat and smooth, please use the tape to secure the keypad. In this case, the mounting plate is not needed.
  - If the mounting surface is uneven, the following installation instructions shall be applied.
1. Draw positioning marks on the mounting surface according to the dimensions of the keypad and drill screw holes accordingly.
  2. Fix the mounting plate with the screws. Use the screw pipes when necessary.

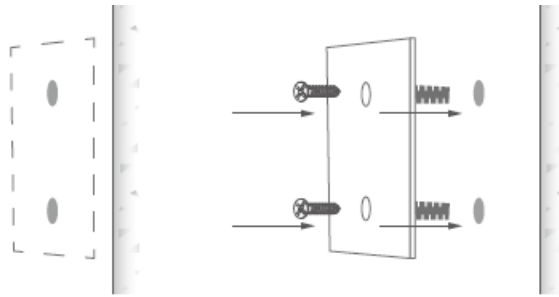


 3. Glue the keypad on the mounting plate with the double-sided tape.

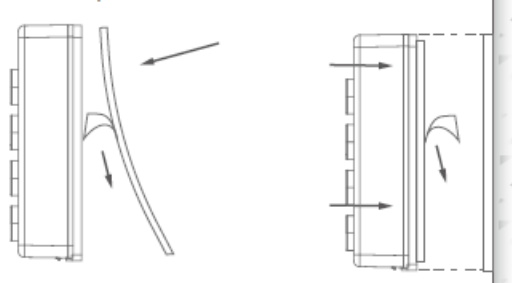

## Battery installation

 1. Remove the screw, squeeze the clamp and pull the battery holder out.

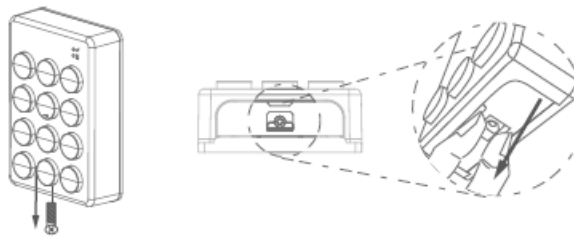

2. Load 4 AAA batteries correctly, squeeze the clamp and push the battery holder into the compartment, then tighten it with the screw.

## Pair a keypad

- |                                 |  |
|---------------------------------|--|
| <p>① Enter pairing mode</p>     | <ul style="list-style-type: none"> <li>• If the keypad is not paired to any lock, press any key to enter pairing mode.</li> <li>• If the keypad has paired to a lock previously, press *529# to enter pairing mode.</li> </ul> |
| -----                           |  |
| <p>② Add a keypad to a lock</p> | <p>On the APP, select the lock that supports wireless keypad, press Settings→Wireless keypad→Add wireless keypad, and then follow the steps prompted to finish the pairing process.</p>  |
| -----                           |  |

 
## Operations

① Unlock with passcode	Key in passcode and end with “#”. If the passcode is correct, the green LED lights up for 2 seconds, and the keypad gives a long beep. If the passcode is incorrect, the red LED lights up for 2 seconds, and the keypad gives 4 short beeps.
② Turn on/off the sound of the wireless keypad	On the APP, select the lock that is paired with the wireless keypad, press Settings → Lock Sound → Turn on/off
③ Low battery alert	When the battery is low, the battery alert LED lights up as soon as the wireless keypad is activated, and it dies out after the keypad is disactivated.

## Reset the keypad to factory mode.

At times of need, the wireless keypad can be reset to factory default mode by applying the following steps:

1. Remove the rear cover of the keypad
2. Long press the reset button for 3 seconds till it beeps.

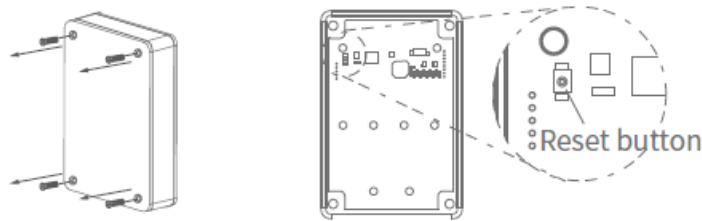

## Light Status

When the batteries are loaded:	Status light	Low battery alert
Correct passcode: Green LED lights up for 2 seconds	●	—
Incorrect passcode: Red LED lights up for 2 seconds	●	—
Press any key, Green LED flickers 1 time	●	—
Unable to connect to a lock: Red LED flickers 3 times	●	—
Low battery: Low battery alert LED lights up	—	●
Paring mode: The green light keeps flickering	●	—

## Limited Warranty

1. For any defect in material and workmanship, the original purchaser of the product can:
  1. Return or ask for a replacement within 7 invoice days.
  2. Ask for a replacement within 15 invoice days.
  3. Ask for free repair in 365 invoice days.
2. This warranty does not cover defects caused by modification, alteration, misuse, or physical abuse of the

product.

### Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.

### FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure condition without restriction

### Frequently Asked Questions


• **Q: What should I do if I forget the passcode?**

A: If you forget the passcode, you can reset the keypad to factory default mode by following the steps provided in the user manual.

• **Q: How can I check the battery life of the wireless keypad**

A: The low battery alert LED will light up when the battery is low. You can also check the battery status on the APP when paired with a lock.

### Documents / Resources

	<a href="#">S4A WK2 Wireless Keypad</a> [pdf] User Manual WK2 Wireless Keypad, WK2, Wireless Keypad, Keypad
---	--

### References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.