



SABA SA-HS07F IH Variable Frequency Intelligent Ultra-Thin Induction Cooker Instruction Manual

[Home](#) » [SABA](#) » SABA SA-HS07F IH Variable Frequency Intelligent Ultra-Thin Induction Cooker Instruction Manual 

SABA

Instruction Manual



IH variable frequency intelligent ultra-thin induction cooker
SA-HS07F

Read this booklet thoroughly before using and save it for future reference
V1.0 406

Contents

- 1 Important Safety Instructions
- 2 Product Features
- 3 Guide To The Appliance
- 4 Operating Instructions
- 5 Product Specifications
- 6 Appropriate Cookware
- 7 Maintenance
- 8 Troubleshooting
- 9 Documents / Resources
- 9.1 References

Important Safety Instructions

Caution

To avoid any danger, please strictly accordance with the instruction when you operate the unit.

The appliance is designed for domestic use only, and may only be installed and operated in accordance with this user manual.

Do not touch the heating zone during or after operation.

Put the unit on the flat surface, please keep the side and back of the unit more than 10cm away from other objects.

Please stop using this product if power cord is broken, Customer should bring this product to CS center for repair by yourself.

Do not pour water on the machine body or wash directly with water to avoid electric shock.

Do not use this unit under the high temperature environment. Otherwise the unit may stop working.

Do not operate the unit on the hot surfaces, iron plates or stoves.

Do not heat the unit with empty pot to avoid malfunction and damage of ceramic plate.

Please open the can food or sealed food packaging before heat on this unit.

Please do not place metal or flammable things between pot and the plate.

Please unplug the unit after every using.

Don't touch the hot plate after cooking. Please wait the unit cool down for 5 minutes before cleaning.

Please do not insert/put anything in the unit body to avoid malfunction.

Please keep this unit out of reach of children.

Please stop using and unplug this unit if the plate is broken, and kindly bring this unit to our CS center for repair by yourself.

Product Features

3-digital display screen

Sensor-touch control panel, easy for operation

Child Lock safety setting

Knob adjustment

10 adjustable levels of power (1-10) & temperature (60-240 C)


3-hour Timer setting & Keep-warm setting

Pause heating setting

Smart microcomputer technology, IH variable frequency heating, concentrated power heating, high thermal efficiency

Multiple safety protection devices: automatic detection of pots, overheating protection, anti-dry protection, automatic shutdown design, fan cooling protection, over-voltage/under-voltage protection

Guide To The Appliance

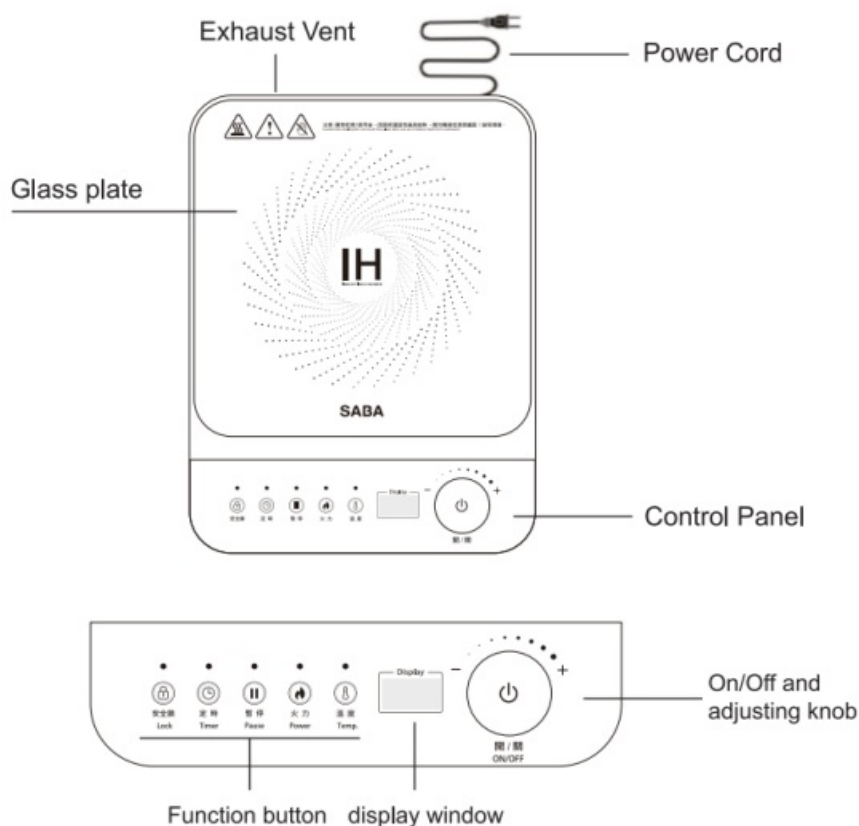

Operating Instructions

1. On/Off:

After inserting the plug into the socket, a “Beep” will emit and all the indicators and the display will flash once time, indicating the appliance in connection with a power source, known as standby mode. The display shows [—] when the knob is pressed down once, the appliance goes to selection mode. Press the corresponding function keys to start operation. Stop the operation and switch to standby mode by pressing down the knob after cooking. If there is no operation within 60 seconds, then the cooker will shut down.

2. Function Selection

* Power: Press [Power] key and the indicator of POWER lights up, display will show [8]. It can be adjusted by the knob to set the desired power level. Total 10 levels (1-10). To cancel this mode, keep pressing other function keys or the knob to stop the operation.

* Temperature: Press [Temp.] key and the indicator of Temperature lights up, display will show [180]. It can be adjusted by the knob to set the desired temperature level. Total 10 levels (60, 80, 100, 120, 140, 160, 180, 200, 220, 240 C). To cancel this mode, keep pressing other function keys or the knob to stop the operation.

3. Timer Function:

Press [Timer] key and the indicator of Timer lights up, display will show [0.00]. User can set for the desired time by the knob. Turn the knob to right side can set the minute from 0-59minutes, turn the knob to left side can set the hour from 0-3 hours. After setting, user can wait until the display stop flashing or press [Timer] key to confirm the time setting. After the “Beep” signal, the appliance will stop the operation and change to switch-off mode automatically when the end of the countdown. To cancel this function, user can either press down the knob to return to switch-off mode or press [Timer] key and hold for 3 seconds to resume the desired power or temperature operation.

4. Pause Function:

If you need to leave during the cooking process, you can use the pause setting to avoid burning or over boiling.

Press [Pause] key and the indicator of Pause lights up, display will show [PAU]. The cooking will be paused and all the buttons except the Lock button and the ON/OFF function of the knob will be out of service.

To cancel this function, user can either press the [Pause] key to exist the pause mode or press down the knob to return to switch-off mode.

5. Lock Setting

Press the [Lock] key once and the indicator of [Timer/Lock] lights up, display will show [LOC].

Except the ON/OFF function of the knob, all the buttons are locked. To cancel this function, user can either press the [Lock] key and hold 3 seconds or press down the knob to return to switch-off mode.

Product Specifications

Voltage: 110V~/60Hz

Power: 1200W

Appropriate Cookware

Cookware material requirement: Ferromagnetic or iron bottom.

Flat bottom with diameter minimum from 10cm, and it's not suggest to use the cookware bigger than the cooking zone size on the glass.



Maintenance

1. Clean the plate and control panel

Slight dirt: Wipe with a wet soft cloth.

To avoid deformation or cracking, do not use benzine, thinner or liquid cleaners.

Chemical cloth may cause the change in color or the unit.

Do not wash this unit by dishwasher or dish dryer.

2. Clean oil stain

Clean by the cloth with little tooth paste or neutral detergent, Then wipe the unit again with clean wet cloth.

Do not wash by water directly to avoid electric shock and damaged.

3. Clean the body

Use clean dry cloth for cleaning the body.

Clear the dust in the air inlet and outlet by soft brush or vacuum cleaner.

4. Check the power cord and socket


Unplug this unit before cleaning.

Check the connection between power cord and socket before use for safety.

Troubleshooting

Symptoms	Check points	Remedy
Inserts the plug, press the “ On/Off ” key, but the power indicator is not bright.	Check the plug if insert tightly. Check the power cord if well. Check the power supply. Check the voltage if too low.	Eliminate after inspection.
Not heat after turn on the appliance, the buzzer is beeping.	Check if there is any pot on the plate. Check if the pot put on the center of plate. Check if the pot is suitable_	Eliminate after inspection,
It suddenly stop to heat when it is working.	The ambient temperature is too high, Air intake or vent was jam. Check if there is no operation within 2 hours,	Remove it to the lower temperature place to be used. Make the air intake and vent to be both expedite. Normal phenomenon. It would be inner temp. adjustment by the appliance if the fan is working normally, please try again after a few minutes.
Error codes occur.	E0. Inner circuit is broken E1. No pot or unsuitable pot. E2. Internal overheat E3. Over-voltage E4. Under-Voltage E5. Sensor of PCB disconnect or short circuit E6. Sensor of IGBT disconnect or short circuit. E7. Surface of plate overheat/ Sensor of PCB disabled protection	Keep the heat vents clear The induction cooker may overheat or damaged if bottom heat vents are blocked. Please do not place light table cloth/sheet under the induction cooker when using. Otherwise, heat vents may be blocked by those materials. Thick table cloth or plastic plate are suggested as replacement Please contact service centre for checking and repairing.

Documents / Resources

 <p>SABA</p> <p>> 使用說明書 Instruction Manual</p> <p>IH變頻智能超薄電磁爐(電磁爐) IH Variable Frequency Intelligent Ultra-Thin Induction Cooker SA-HS07F</p> <p>Read this booklet thoroughly before using and save it for future reference.</p> <p>102 103</p>	<p>SABA SA-HS07F IH Variable Frequency Intelligent Ultra-Thin Induction Cooker [pdf] Instruction Manual</p> <p>SA-HS07F, SA-HS07F IH Variable Frequency Intelligent Ultra-Thin Induction Cooker, IH Variable Frequency Intelligent Ultra-Thin Induction Cooker, Variable Frequency Intelligent Ultra-Thin Induction Cooker, Intelligent Ultra-Thin Induction Cooker, Ultra-Thin Induction Cooker, Induction Cooker</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.