



SACKit Move 100 Bluetooth Speaker User Manual

[Home](#) » [SACKit](#) » SACKit Move 100 Bluetooth Speaker User Manual 

SACKit®

Contents

- [1 SACKit Move 100 Bluetooth Speaker](#)
- [2 BOX CONTENTS](#)
- [3 QUICK START GUIDE](#)
- [4 PRODUCT OVERVIEW](#)
- [5 BATTERY](#)
- [6 BLUETOOTH CONNECTION](#)
- [7 LINE-IN MODE](#)
- [8 CHARGING](#)
- [9 TROUBLESHOOTING](#)
- [10 IMPORTANT SAFETY INFORMATION](#)
- [11 DISPOSAL OF THE PRODUCT](#)
- [12 CLEANING THE PRODUCT](#)
- [13 TECHNICAL SPECIFICATIONS](#)
- [14 Documents / Resources](#)
- [15 Related Posts](#)

SACKit Move 100 Bluetooth Speaker



THANK YOU!

Thank you for choosing the SACKit Move 100 Bluetooth speaker from SACKit. Please read this user manual carefully before using your new speaker. We are not responsible for damage caused by failure to comply with the instructions or irresponsible use of the product. If you have any questions regarding technical problems, please contact our customer services. We hope you will enjoy your new multi-functional SACKit Move 100 speaker. Enjoy great sound on the SACKit Move 100!


BOX CONTENTS

- 1 x SACKit Move 100
- 1 x AC/DC adapter for charging
- 1 x 3.5mm audio cable
- 1 x Attached Front
- 1 x Quick start guide

QUICK START GUIDE

- Charge the speaker for at least 4 hours
- Turn on the speaker by pressing the Power Button
- Turn on Bluetooth on the device you want to connect to the speaker 4. Choose "SACKit Move 100" in the Bluetooth settings on your device
- Start playing music from your device

PRODUCT OVERVIEW

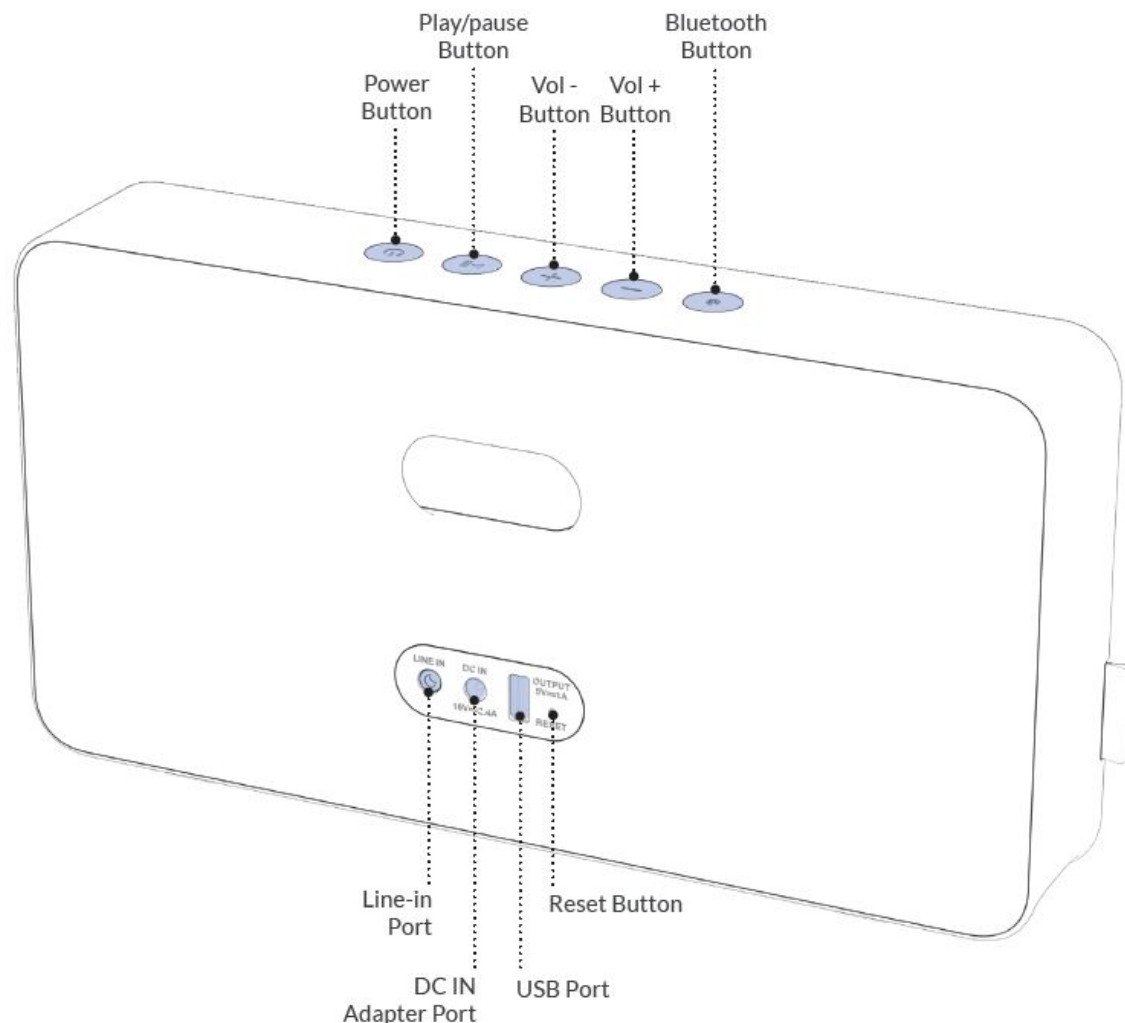

BATTERY

- Battery: Rechargeable Lithium battery, 2200 mAh, 11,1V
- Charging: Please use the included adapter for charging the speaker using the DC IN input on the back of the SACKit Move 100 speaker.
- Duration of charging: Please make sure that the battery is fully charged before the first use of the SACKit Move 100 speaker. Charging the battery fully takes approximately 4 hours. The "Power" button will light up red while the battery is charging.
- Change between stationary use and portable use: Use the speaker either while connected to a power outlet or when playing from the battery.
- Low battery: When the battery is low, the speaker will issue the warning sound "Low battery" and the "Power" button will flash red. You will hear the low battery warning when the battery has 10% left.
- The speaker will automatically turn off after 15 minutes if the speaker is not used.

BLUETOOTH CONNECTION

1. Turn on the SACKit Move 100 speaker by long-pressing the "Power" button
2. The speaker will automatically be in pairing mode. Pairing mode is on when the "Bluetooth" button flashes and you hear the warning sound "waiting for connection"
3. Go to the Bluetooth settings of your device and choose SACKit Move 100. When connected successfully, you will hear the warning sound "connected" When your device is successfully connected to the speaker, it will

automatically connect the next time you turn on the speaker.

Disconnect Bluetooth: If you wish to connect another Bluetooth device to the SACKit Move 100 speaker, please long press the “Bluetooth” button to reset the Bluetooth pairing. The speaker is automatically in pairing mode, and you will be able to connect to a new Bluetooth device.

PLAY MUSIC – BLUETOOTH MODE: Control your music via the on-speaker controls:

- Adjust volume: short press or long press “Vol-” and “Vol+” buttons to adjust the volume.
- Next/previous number: Double-click the “Vol+” or “Vol-” to change to next or previous song
- Play/pause: Pause or play your music directly on the speaker by pressing the “Play/Pause” button

STEREO PAIRING: CONNECTING TWO SACKIT MOVE 100 SPEAKERS

If you have two SACKit Move 100 speakers it is possible to create a stereo pair with one speaker playing the left channel, and one speaker playing the right channel. Watch video: <https://www.youtube.com/watch?v=GYCu1w2zSOk>

- Power on both speakers clicking the Power button
- Click quickly the Bluetooth button three times to enter pairing mode (the indicator light will flash in correct pairing mode). Repeat this for both speakers
- The speakers will connect in a few seconds. A constant light on one speaker and a slowly flashing speaker on the other indicates correct connection.

LINE-IN MODE

Play music via the included audio cable by plugging it into the LINE IN input on the back of the SACKit Move 100 speaker and into your device. The SACKit Move 100 speaker will automatically change to Line-in mode when you plug the audio cable into the speaker. Control your music via the on-speaker controls:

- Adjust volume: short press or long press “Vol-” and “Vol+” buttons to adjust the volume.
- Mute: Stop playing music from the speaker by pressing the “Play/Pause” button

CHARGING

You can charge smaller devices via the USB port on the back of the SACKit Move 100 speaker. All you need to do is connect the speaker and your device via a USB charging cable (not included), and your device will automatically start charging. If charging does not automatically start, please press the “Power” button. The USB port is designed for charging devices that support 5V DC, 1A.

Note: Phones cannot be charged through the speaker, and it may reduce battery life if the speaker is not plugged into a power outlet.

CHANGING THE FRONT

Change up the look of your speaker with the changeable front – do you want it classic chic, matching the color of your sofa or should it pop with an eye-catching color? It’s up to you!

1. Remove the front by pulling the SACKit leather label. When you have loosened the corner of the front, you will be able to loosen the front all the way around the edges and finally remove it completely.

Please note: The front is attached thoroughly to ensure sublime sound quality. The leather label is fastened with screws, and it is designed for use when removing the front.

2. Attach the new front by placing the “sticks” into the matching holes. Press the front onto the speaker all the way around the edges – and your new look is ready!

TROUBLESHOOTING

No sound from the speaker

1. Please make sure that the speaker is charged or plugged into a power outlet
2. Try increasing the volume on your device and the SACKit Move 100 speaker
3. Please make sure that all cables are connected correctly if playing from Line-in mode

The speaker murmur

1. Please make sure that all cables are correctly connected

Bluetooth connection failed

1. Please make sure that the speaker is in pairing mode. When in pairing mode the “Bluetooth” button will flash fast
2. If the speaker is not in pairing mode, please long press the “Bluetooth” button until flashing fast. Try to connect again
3. The SACKit Move 100 speaker and your device must be within 5 meters of each other when you try to connect
4. Try to connect another Bluetooth device to the speaker

I cannot operate the buttons on the speaker

1. You can reset the buttons on the speaker if you experience problems operating them. The buttons are reset using the “Reset” button on the back of the speaker. Please use a toothpick or a needle to press the reset hole.

IMPORTANT SAFETY INFORMATION

Please read the following information and operate the speaker and accessories accordingly to ensure correct and safe use of the product. We are not responsible for damage caused by failure to comply with the instructions or irresponsible use of the product.

Warning: To prevent any fires or electrical hazards please act according to the following guidelines:

- Do not disassemble or replace any parts of this device. Please contact professional maintenance or a qualified service center if there is any damage to the device.
- Do not expose this device to rain, water, or wet places. Do not place liquid containers (such as vases) on the product side.
- Do not place the speaker in or close to any liquid
- If any liquids flow inside the product, please shut down the product and contact the customer service center
- Do not place this device in or close to sources of excessive heat or fire. (Such as candles, fireplaces, or direct

sunlight)

- Please shut down the speaker in lightning weather
- Keep this device away from any heat source, dust, and vibration.
- Be sure to place this device on stable, flat, and level surfaces only.
- Do not use excessive force when using any of the control buttons.
- If the product is below 5°C when you receive it, please open the product packaging and wait for it to reach room temperature.
- To prevent overheating, please do not install the speaker in enclosed spaces. Be sure to set aside at least 10cm around the product for ventilation

DISPOSAL OF THE PRODUCT

SACKit Move 100 is made from recyclable and high-quality materials. Do not dispose of the speaker together with other living garbage. Please understand the local classification about collecting electronical, electrical products that contain batteries. Correct disposal of the product will help to prevent a negative impact on the environment.

CLEANING THE PRODUCT

If cleaning is required, use only a dry, soft cloth or a minimally damp cloth without any corrosive solvent or cleaning agent.

TECHNICAL SPECIFICATIONS

- Bluetooth 5.0
- On-speaker controls
- Rechargeable Li-Ion battery with 2200mAh (up to 12 hours streaming. With max vol. 4,5 hours)
- Charges in approx. 4 hours
- Output power: 2x15W (30W)
- 2x Full range drivers, 2x tweeters
- LED indicator
- USB jack support 5V 1A output for phone charging, 3,5mm AUX input jack, DC jack
- Measurements: 310 x 160 x 80 mm
- Weight: 2153 g
- AC/DC adaptor included AC230 ~50Hz with VDE plug
- Changeable front

Contact your SACKit dealer if you experience problems and the speaker does not work. Never attempt to repair the speaker yourself.

Documents / Resources



[SACKit Move 100 Bluetooth Speaker](#) [pdf] User Manual
Move 100, Bluetooth Speaker