



SAGE LU MEI R1 10-Key RF Remote Controller Instruction Manual

[Home](#) » [SAGE LU MEI](#) » SAGE LU MEI R1 10-Key RF Remote Controller Instruction Manual 

Contents

- [1 SAGE LU MEI R1 10-Key RF Remote Controller](#)
- [2 Features](#)
- [3 Technical Parameters](#)
- [4 Dimension](#)
- [5 Match Remote Control \(two match ways\)](#)
- [6 Key function](#)
- [7 Safety information](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



SAGE LU MEI R1 10-Key RF Remote Controller



Features

- Apply to single color, dual color, RGB, RGBW or RGB+CCT RF LED controller.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- White & Black available.

 
Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	<2μA
Standby time	2 years
Remote distance	30m(Barrier-free space)

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3
	ETSI EN 301 489-17 V3.2.4
Safety standard (LVD)	EN 62368-1:2020+A11:2020
Radio Equipment (RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED
Warranty	5 years

Environment	
Operation temperature	Ta: -30 OC ~ +55 OC
IP rating	IP20
Packing	
Size of the box	L138 x M50 x H22(mm)
Gross weight	0.040kg

Dimension

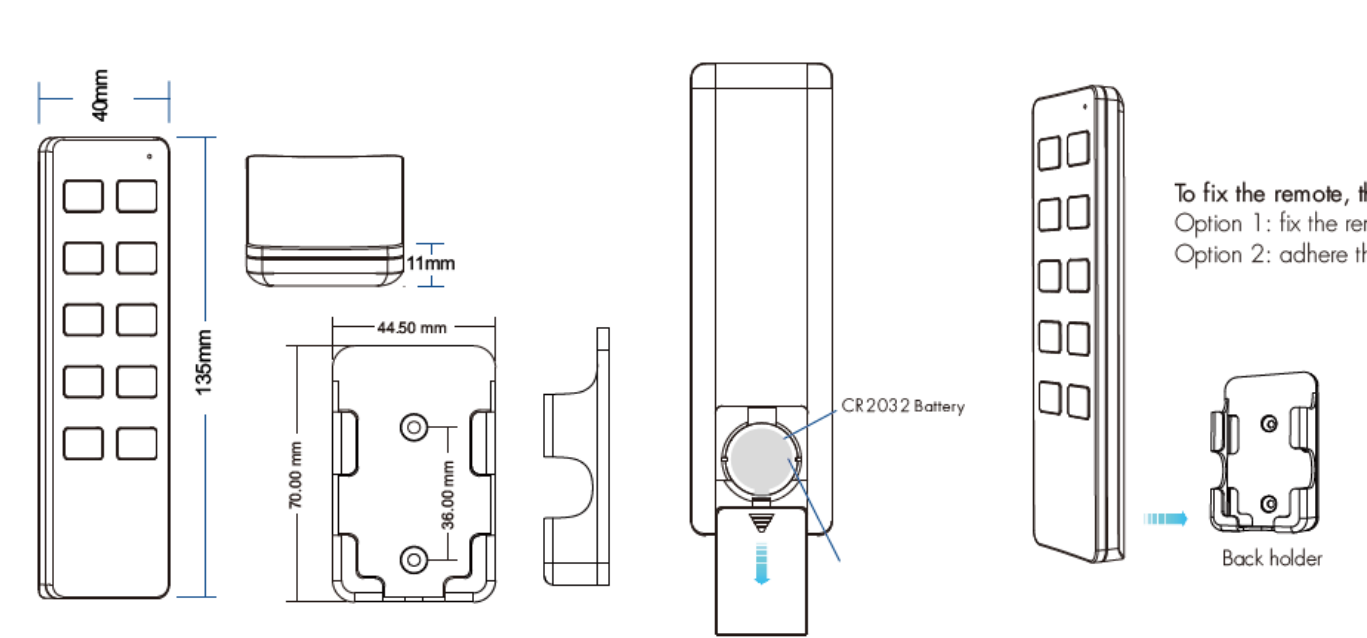

To fix the remote, three options are offered for selection:

- Option 1: fix the remote’ back holder on the wall with two screws.
- Option 2: adhere the remote’ back holder to the wall with paster.

Note: Before the first use,
please remove the protective film on the battery.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. There are two options offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) on the remote. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

 
Switch off the power, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.


Key function

R1 1 zone dimming remote

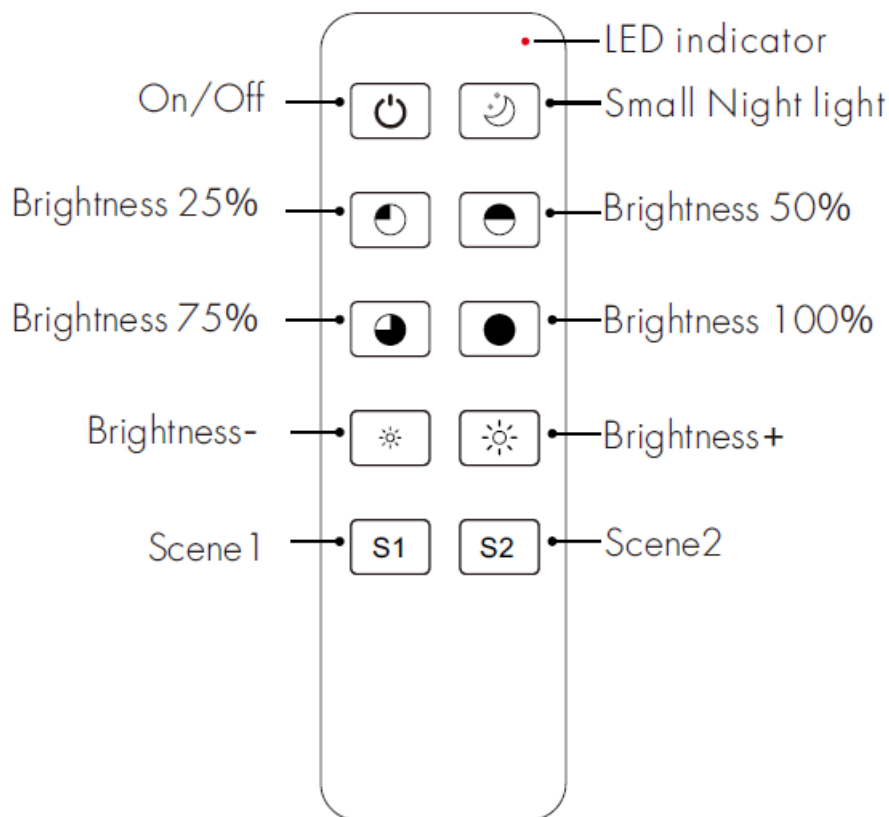


- Brightness+/-: Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.
- Scene 1/2: Brightness memory. Short press recall the scene, long press 2s save the current brightness into the scene. the LED indicator will light up longer when save OK.

 R2 1 zone CCT remote

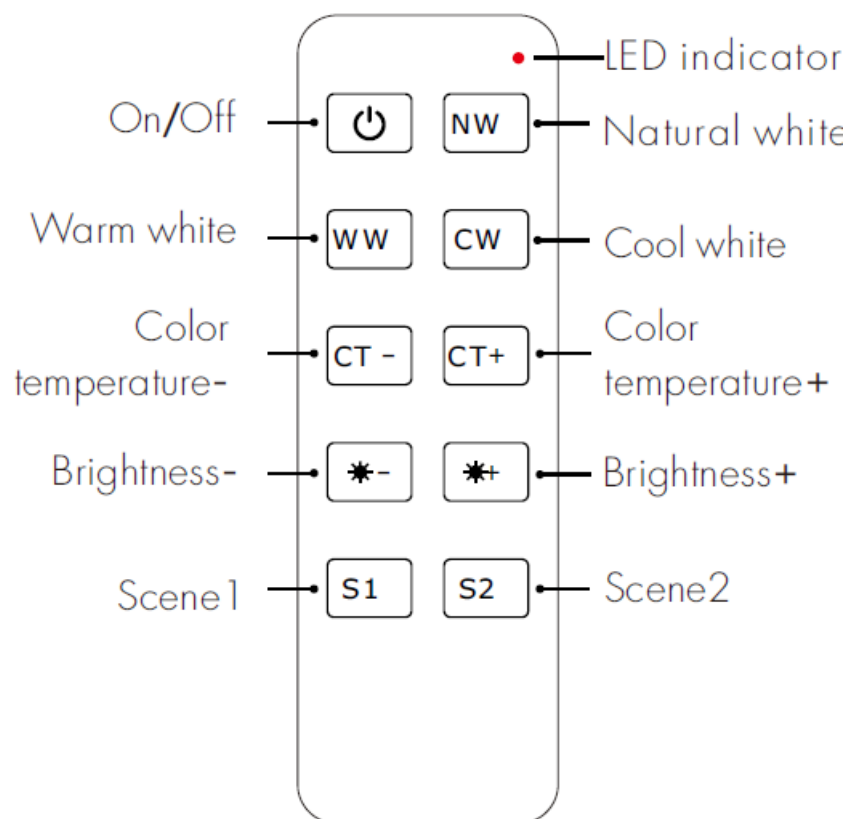


- Color temperature+/-: Short press 11 levels, long press 1-6s for continuous 256 levels adjustment.
- Brightness+/-: Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.
- Scene 1/2: Short press recall the scene, long press 2s save the current color into the scene. the LED indicator will light up longer when save OK.

 RU4 4 zone dimming remote

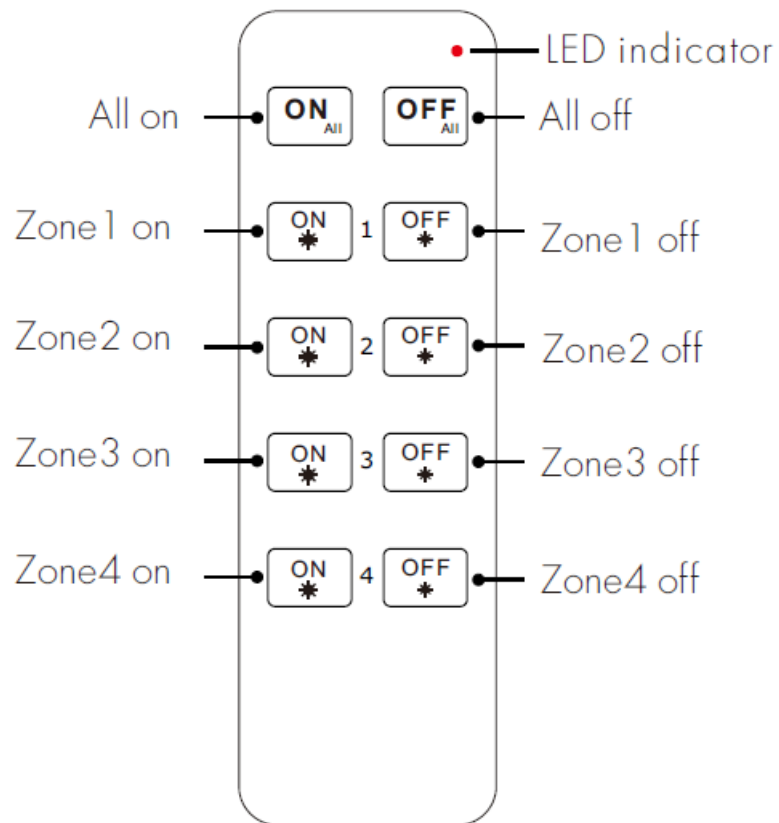


- All on: Turn on all 4 zone light.
- All off: Turn off all 4 zone light.
- Zone 1-4 on: Short press turn on zone light, long press 1-6s increase brightness continuously.
- Zone 1-4 off: Short press turn off zone light, long press 1-6s decrease brightness continuously.

 RU8 8 zone dimming remote

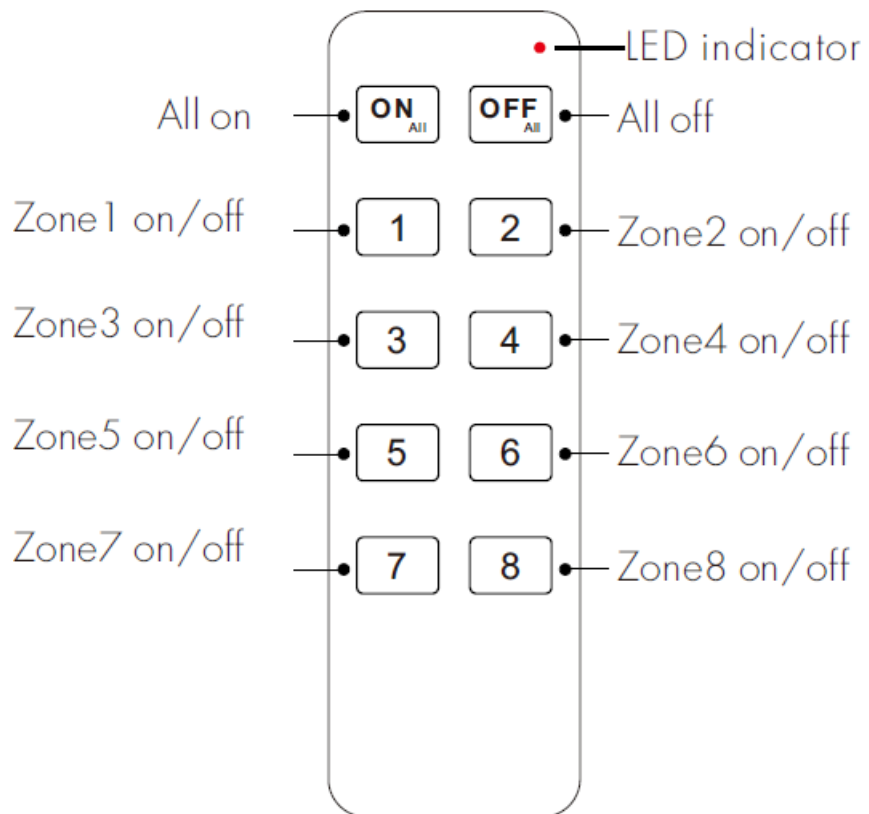

- All on: Turn on all 8 zone light.
- All off: Turn off all 8 zone light. Zone 1-8 on/off:
- Short press turn on/off zone light, long press 1-6s increase or decrease brightness continuously.

 R8S 8 scene remote

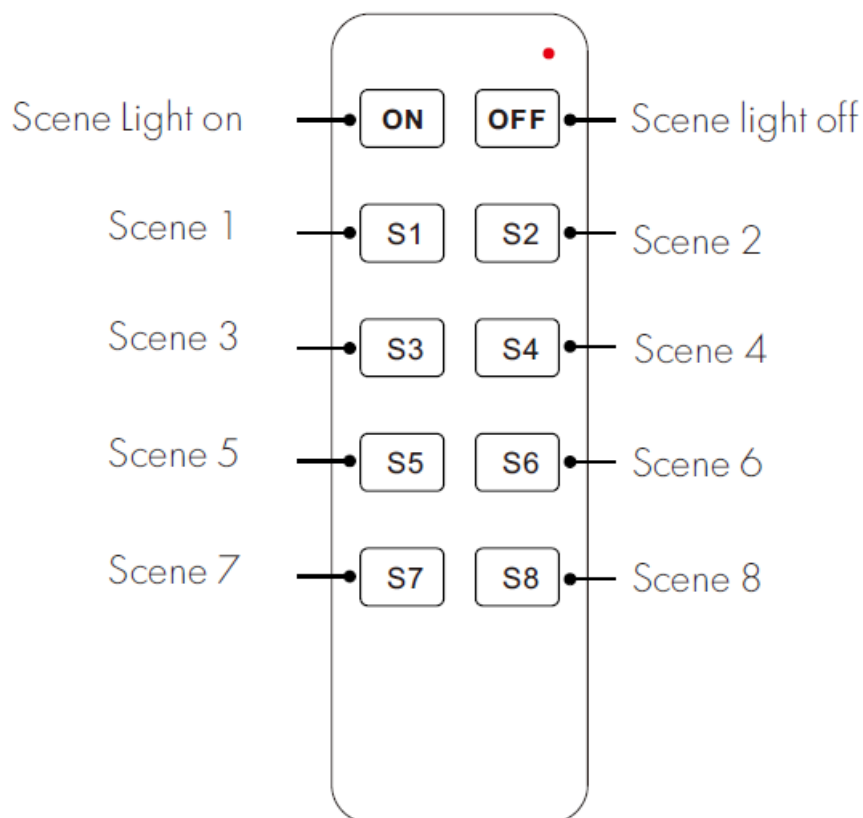


- ON: Turn on the last scene light.
- OFF: Turn off the last scene light.
- Scene 1-8: Recall the scene which saved in the RF controller.
- Note: The remote only have scene recall function defaultly. If you want to use scene save function, please long press ON + S8 key 2s to enable scene save function, then long press Scene 1-8 key 2s save the current color into this scene number. the LED indicator will light up longer when save OK. When all 8 scene save OK, please long press OFF + S8 key 2s to disable scene save function.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

 Documents / Resources

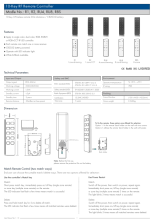

[SAGE LU MEI R1 10-Key RF Remote Controller](#) [pdf] Instruction Manual
R1 10-Key RF Remote Controller, R1, 10-Key RF Remote Controller, Remote Controller, Contr
oller